

# eClip - Quick Setup Guide



## 1. First Things First


First - and above all else—is the health, safety, and well-being of your baby. We believe that you will benefit from the eClip—but nothing can replace responsible parenting.

**Note:** Your smartphone Bluetooth must always be switched on when connecting and monitoring with your eClip device.

**Reminder!** After every journey, always check that you have removed your child from the car.

## 2. In the Box

- A. eClip (battery included)
- B. eClip Bright Accessory Strap
- C. eClip Quick Setup Guide.

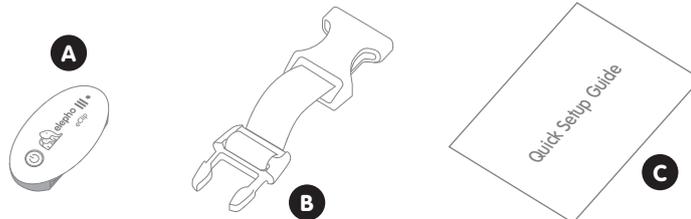

## 3. Set it Up

First, download and install the eClip app that is suitable for your device.




[elepho.com/apps](http://elepho.com/apps)

**Note:** Make sure that you give the eClip app permission to use your smartphone's Bluetooth and GPS. Without these services the eClip cannot monitor your baby.

**Note:** The eClip app should be compatible with the latest Android and iOS versions. For a full list of compatible versions see either the Full User Guide or visit [elepho.com/apps](http://elepho.com/apps)

## Preparing the eClip Battery

The eClip includes a battery that should give you 500 hours of continuous use. It is shipped at full strength, and is protected against discharge by a plastic tab.

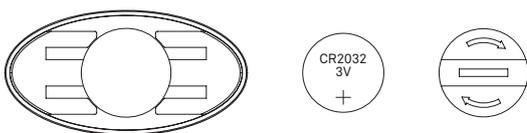

So, first, let's pull the plastic tab out.

1. Remove the eClip from the box and turn it over.
2. Take a coin and rotate the battery cover counter-clockwise until it comes off.
3. Lift up the battery, take the plastic tab out, and dispose of it.
4. Put the battery back in place, with the flat side, marked with a plus sign (+), facing up.
5. Replace the battery cover, turning it clockwise with a coin, until the coin is in line with the two H-clips.


**Note:** The battery cover is tight to prevent young children from opening it.

Once you close the battery cover the eClip's red LED flashes quickly three times to indicate that it is on. It then continues to flash about once every second.

**Note:** If the eClip is disconnected from the eClip app for more than three minutes it automatically turns off.


## 4. Installing the eClip in Your Car

As you can see from the eClip packaging, you have your choice of four convenient options to secure the eClip.

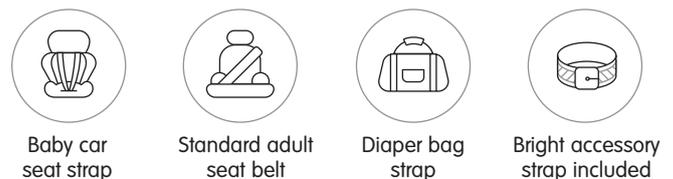

**Warning:** Always check manufacturers' recommendations before attaching the eClip to the strap of your baby's car seat or your vehicle's adult seat belt.

Once you've chosen a location for the eClip set it in place, as follows:

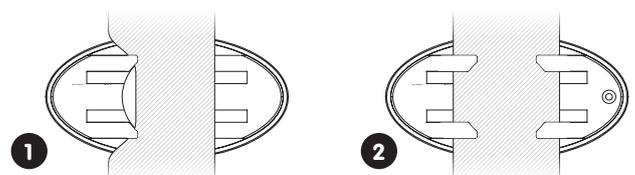


1. Slide one edge of the strap under one side of the H-clip on the back of the eClip.
2. Push the other edge of the strap under the second side of the clip. It should fit snugly.

**Warning:** Always make sure that the eClip stays out of your baby's mouth and that no liquids are spilled on or into the eClip.




The eClip Full User Guide can be downloaded or viewed here: [elepho.com/eclip/full-user-guide.pdf](http://elepho.com/eclip/full-user-guide.pdf)

## 5. Now it's time to get your smartphone to communicate with the eClip.

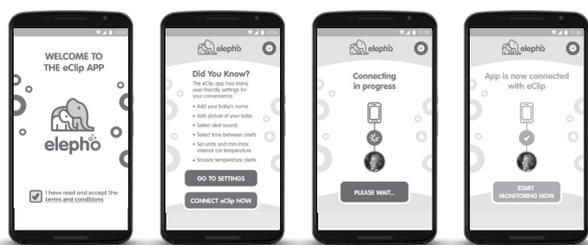

1. First check the Bluetooth receiver on your smartphone is switched on.
2. Launch the eClip app. Read and accept the terms and conditions on the Welcome screen.
3. On the *Did You Know?* screen tap *GO TO SETTINGS* to personalize your eClip with your child's name and picture, and to modify your sound alerts. See the Full User Guide\* to do this now, or click the settings gear icon, at any time, to do it later.
4. Turn on your eClip by pressing the On/Off switch continuously for three seconds. The red LED flashes three times quickly, then once a second until pairing has been completed. When it is paired it flashes blue about once a second.

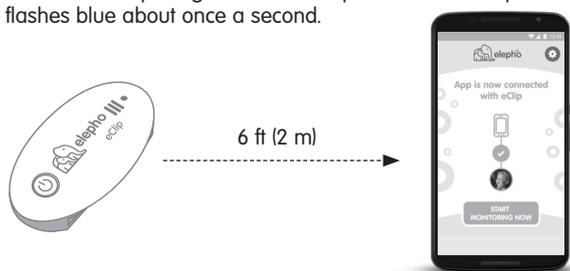

**Note:** To prevent accidentally turning the eClip off, you have to press the On/Off switch continuously for three seconds, to activate or deactivate the eClip.

5. For ideal pairing setup, ensure that the eClip and app are less than 6 ft (2m) apart.
6. On the *Did You Know* screen tap *CONNECT to eClip NOW*.
7. The app displays the *Connecting in progress* screen.

**Note:** If you see the *Cannot connect with eClip* screen first check that the eClip is on and that your Bluetooth and GPS are activated on your smartphone. Then click *Try to connect again*.

8. After a successful pairing the app displays the *App is now connected with eClip* screen and the eClip red LED switches to a blue LED that flashes about once a second.

**Note:** After your first successful set up and pairing of the app, when you launch the app it should go straight through to the connecting screen.

**Note:** Your smartphone Bluetooth must always be switched on when connecting and monitoring with your eClip device.

## 6. Time to Start Monitoring

Once your baby is in the car seat and the eClip is securely in place, it's time to start monitoring.

Tap *START MONITORING NOW*.

**Note:** Monitoring automatically begins a few seconds after the eClip has paired with the app even if you don't tap Start Monitoring Now.


## eClip - Quick Setup Guide

The eClip and associated proprietary App are Patent Pending.

## 7. eClip Feature Overview

As you drive your smartphone displays the eClip monitoring screen.

**Note:** For convenience the eClip automatically turns off three minutes after you shutdown the app. This eClip auto-off function enables you to save battery power.

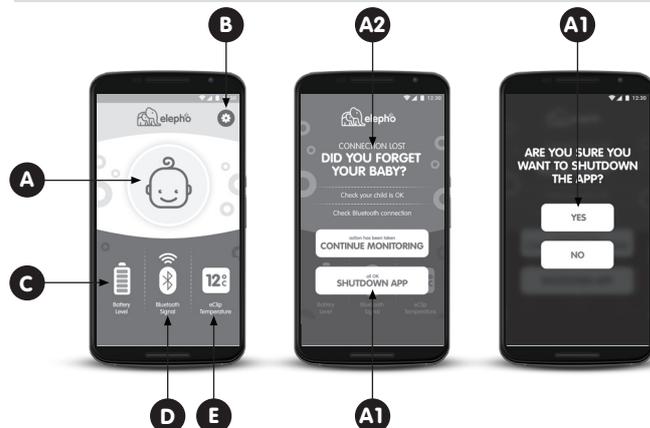

**A. Your Baby.** The main function of the eClip is giving you a visible and audible alert if you move too far away from your child when you have parked your car.

**A1.** If you take your baby out of the car, but didn't turn off the eClip, just tap **SHUTDOWN APP** and confirm by tapping **YES**. The eClip automatically turns off three minutes later.

**A2.** Just in case you forget your baby you should receive a visual and audible alert when you go beyond about 25 feet (8 meters) from the car. Go back to your car and get your baby.

**Note:** The eClip alert should sound at full volume even if you have muted your phone. Once you have dismissed the alarm the volume returns to its previous setting.

**B. Settings.** Of course, our baby icon has much less personality than your baby. See the Full User Guide (see \*) for more information about how to access Settings, upload a picture and type in your baby's name to add another reminder that your baby is onboard with you.

**C. Battery Level.** The battery is good for 500 hours of continuous use. Good battery health is very important, so we recommend that you replace it at least twice a year: at the start of summer and the start of winter. Always replace the battery when the battery level on the eClip Monitoring screen shows fewer than two bars. See the Full User Guide (see \*) for more information about how to change the battery.

**D. Bluetooth Signal.** This shows the strength of your communication signal by the number of green waves. If the signal is lost the waves disappear, the icon turns red and the color of your eClip LED changes from blue to red. Correct the Bluetooth settings on your smartphone and tap *CONTINUE MONITORING* to renew the connection.

**E. Temperature.** The eClip app checks the eClip temperature every few seconds. By default temperature alerts are disabled. See the Full User Guide (see \*) for information about how to enable alerts, change the measurement unit, modify the checking frequency, or define your temperature thresholds.

**Note:** Some iOS and Android devices attempt to override visual alerts. However, you should still hear the audible alert.

**Caution:** If your smartphone goes into sleep mode, or if the screen turns off, the eClip app may also go into sleep mode and you will not receive any alerts. In this event, adjust the phone settings to extend the time before smartphone goes into sleep mode to prevent this occurrence.

- On-line product support at: [www.elepho.com/help-support/](http://www.elepho.com/help-support/)
- E-mail support via: [customer@elepho.com](mailto:customer@elepho.com)
- Telephone support via Elepho Consumer Relations at: **1-833-435-3746 (1-833-4-ELEPHO)**
- General information regarding Elepho full product line via: [www.elepho.com](http://www.elepho.com)



\* [elepho.com/eclip/full-user-guide.pdf](http://elepho.com/eclip/full-user-guide.pdf)