

Assembly and operating instructions

Hanging chair all-weather

ONE



Shown is the ONE all-weather

CrazyChair® is the internationally registered trademark of Pimiento OHG, for exclusive, high-quality hanging chairs, hammocks, stainless steel stands and matching accessories.

The complete range of services, such as idea, design, development, production, marketing and sales is carried out at several locations in Germany.



Pimiento OHG - Crazy Chair • Germany
MAIL info@crazychair.de • WEB www.crazychair.de

GA20210506ONE-AW-E

Scope of delivery please check for completeness

- A 1 seat section with pre-assembled cables
- B Foot section with pre-assembled ropes S-hooks
- C 2 armrests with velcro strap, already mounted
- D 1 long spreader bar as crossbar
- E 2 medium length spreader bars, right + left
- F 1 short spreader bar for the foot section
- G 1 Swivel shackle, stainless steel, mounted
- H 1 spiral spring
- I 2 meter rope for suspension
- J 1 storage bag



4 spreader bars of wood or stainless steel, depending on order.




D+E+F Wood



Not included:

Appropriate ropes are required for suspension over longer distances. High-quality ropes, weatherproof, seawater resistant, with 1,000 kg breaking load, can be ordered from us.

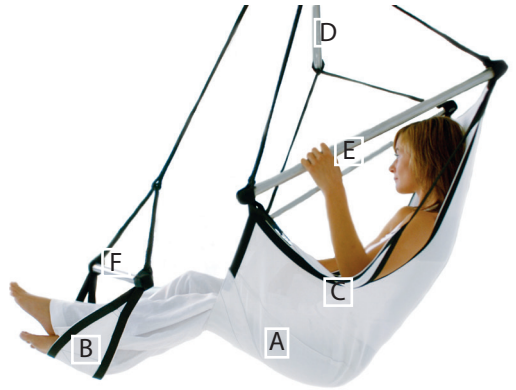

D+E+F Stainless Steel



Description:

The weatherproof hanging chair ONE promises pure relaxation. Because we worked closely with orthopedists and therapists in the development of ONE. The result: Noticeably high seating comfort that perfectly supports the back or spine and the lumbar area. Sitting in ONE is weightless, floating, relieving. The ONE can be individually adjusted to the person sitting in it (seat height, seat tilt, armrests, footrest). A practical storage bag for glasses, mobile phone or key ring is attached to the long spreader bar.

Technical data that convince:

- weatherproof comfort hanging chair
- Seat tilt, armrests, footrest, height adjustable
- seat load 150kg, TÜV-tested
- Own weight approx. 3.5 kg,
- incl. 2m suspension rope, 1.000kp breaking load
- Spiral spring, high quality spring steel (200kp)
- Safety swivel shackle made of V4A stainless steel

Product characteristics:

- ergonomic seating quality
- skin-friendly, breathable mesh fabric
- remains pleasantly cool and airy in strong sunlight
- insensitive to rain, sun/UV, sea water
- easy-care, robust, durable
- easy to transport, small dismantlable



1. Inserting the utensil bag.

The practical bag has a sewn „tunnel channel“. The long spreader bars are pushed through this before being inserted into the two retaining thimbles.



2. Insert spreader bars.

The four spreader bars are inserted into the black „thimbles“ as shown in the illustration. Before the spreader bars are inserted into the black „thimbles“ for the first time, they should be shaped with your fingers to form a „hollow“ so that the bar ends can be inserted more easily and get a good grip.

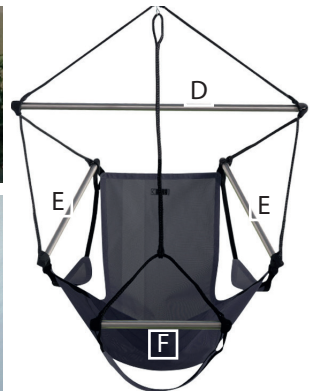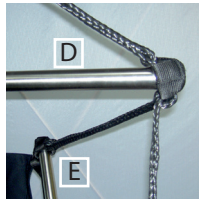

3. Suspension of the hanging chair ONE.

There are many ways to hang the CrazyChair, as it only needs one hanging point, e.g. a thick branch, beams on the balcony, from a balcony railing, a stable climbing frame, on a swinging frame, from the ceiling (concrete) or by means of a hanging chair stand.

The suspension point must be adjusted to the weight of the person and should be at least 200 cm above the floor. Greater heights are bridged with an additional rope. If a suspension rope is used, it is essential that the suspension point has no sharp or rough edges. If it does, cushion them or pull the rope through a protective hose (e.g. garden hose) to protect it.



Attach suspension rope (I) to the safe suspension point, e.g. beam, tree branch, ceiling, wooden beam, balcony, stand.

Knot both rope ends of the suspension rope together.

Hang the spring (H) in the loop created.

Hook the rotary shackle (G) into the spring (H).

Hook the S-hook from the foot part into the lower eye of the swivel shackle.

4. Using the hanging chair - the first time.

When you sit in the hanging chair for the first time, there is a „crack“. This is intentional, because the „cable tie“ that we put around the knot of the swivel shackle (transport safety) has torn and jumped off. The first time we put it in, all knots are loaded and the ropes are tightened in length. All thimbles get the perfect shape and the ONE its final length. It makes sense to adjust the hanging height to the desired height again (rope above the spring).

5. Adjustment of the seat inclination

Remove the long horizontal spreader bar (D) from the middle thimbles. Loosen the rope that is looped under these thimbles. Slide this rope on both thimbles a few centimeters to the right and to the left. This changes the angle of inclination (steeper/flatter). Please note that both sides of the hanging chair are adjusted equally. You can check this by Look at the lateral spreader bars to see if they are parallel.



Put the spreader bar back into the two thimbles. This allows you to adjust your sitting position as often as you like.

Tip: If you adjust the inclination of the hanging chair towards the lying position, please also adjust the footrest or hang it a little higher so that the feet take up a higher position or you place the calf bone in the footrest.

6. Adjustable armrests.

They can be adjusted for any sitting position. Ideal for people of different sizes to relieve the shoulder area. For adjustment, adjust the rear straps to shoulder height. When sitting / standing up, do not support the armrests, but use the front edge of the CrazyChair to help.

7. Tips for strong winds

In strong winds the hanging chair could flutter in the wind. Depending on the intensity of the „wind flapping“, it puts a strain on the material or fabric. This can cause the coloured filament of the fabric to rub and partially peel off. This results in unsightly colour peeling. The stability of the hanging chair is maintained. Material damage caused by wind blows is not covered by the warranty, as this can be avoided if used correctly. When the ONE is tensioned, remove the long spreader bar from the thimbles and it will collapse flat. Thus less wind attack surface, but do not let it drag over the ground in this condition. Or take the ONE down in time and do not expose it to the wind.

Use, safety instructions, care

Read the manual before use and keep it for further questions.

The CrazyChair ONE is ideal for relaxing, you sit back-friendly and relaxed. The lying load is 150 kg.

The suspension points must be adjusted to the weight of the person or the weight to be carried and provide a secure attachment.

Regularly check that the suspension ropes and knots are correctly positioned. Protect ropes from chafing, especially on edges or sharp corners. If metal rubs against metal during fastening, it is necessary to grease the areas regularly.

The CrazyChair is not a (child) swing. With children, make sure that the footrest is not used for other purposes (swing, climbing part).

Keep the packaging cover away from infants/toddlers, as there is a risk of suffocation if it is placed over the head.

The middle bar serves as a spreader bar and is not suitable for gymnastics exercises or for pulling up or climbing (danger of breakage if wood is used).

Do not hang the hanging chair near open fireplaces, fireplace, barbecue, etc.

Please note that rodents and mice like to nibble on the fabric - so please protect it.

To clean the hanging chair, a sponge with water or a little soapy water is sufficient. Never use the high-pressure cleaner or the washing machine.

Warranty

The CrazyChair is handmade with the greatest care and is subjected to multiple checks. If something is not in order at delivery or if a defect in material or workmanship occurs, an appropriate repair or replacement will be made within the scope of the legal warranty. What is used is at the discretion of the manufacturer for each process. No liability is assumed for any consequential damage or failure beyond this. The warranty is valid for normal use in private use with careful handling (no commercial or public continuous use). Incorrect handling, environmental influences, colour changes e.g. due to sunlight or damage due to external influences are not covered by the warranty.

We are happy to help.

For questions, advice, product information, we are available as manufacturer. If you need our advice on hanging, have any questions regarding the use of the product, accessories or other items of the Crazy Chair Collection, please contact us by phone or e-mail.

Crazy Chair is an internationally registered trademark. CrazyChair develops, designs and produces in Germany. More about CrazyChair can be found on the Internet at www.crazychair.de

Hanging chair stand

For the ONE there are suitable stainless steel stands, e.g. SOLA, MEZZO

