


UV DTF Transfer Film

Instructions / Application Guide

1

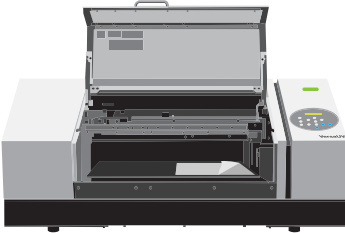

Place

Peel and place DTF Transfer Film A sheet on table, sticky side facing up.

Secure flat to surface with tape or vacuum table.

2




Print

Recommended printing order:

- 3. Gloss
- 2. CMYK
- 1. White (White underbase optional, multiple passes of Gloss for extra height effects.)




3 A

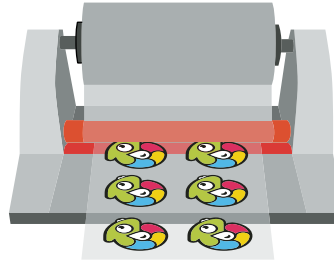

Laminate

Get rid of bubbles to ensure bonding between prints on Film A and Film B using laminator (hot or cold).


3 B

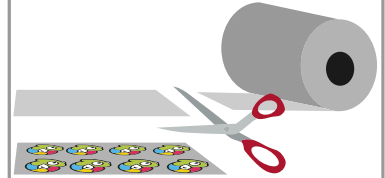

Squeegee

Cut to size and apply Transfer Mask Film B to prints on Film A. Get rid of bubbles to ensure bonding using squeegee.


4

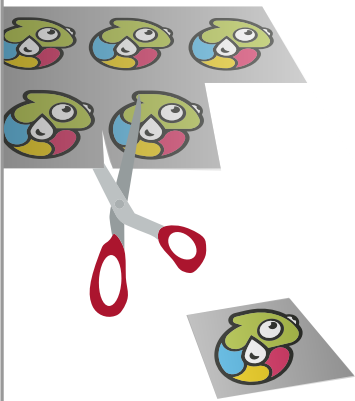

Cut

Cut prints into individual pieces.

5

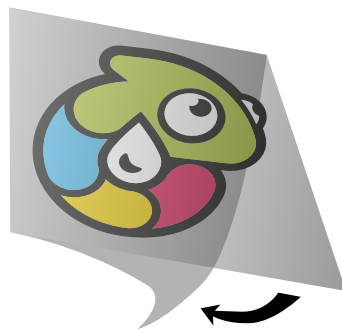

Peel

Carefully remove Film A by peeling away from Film B. Check that all parts of print are sticking to Film B.

6



Apply

Firmly press print to clean surface and peel away gently. If worried about adhesion, clean surface with Isopropyl Alcohol or your preferred cleaning product.

7



Enjoy

Let UV Transfer rest on surface for 24 hrs before testing adhesion.