


M G MotionGrey



CloudMesh Assembly Manual

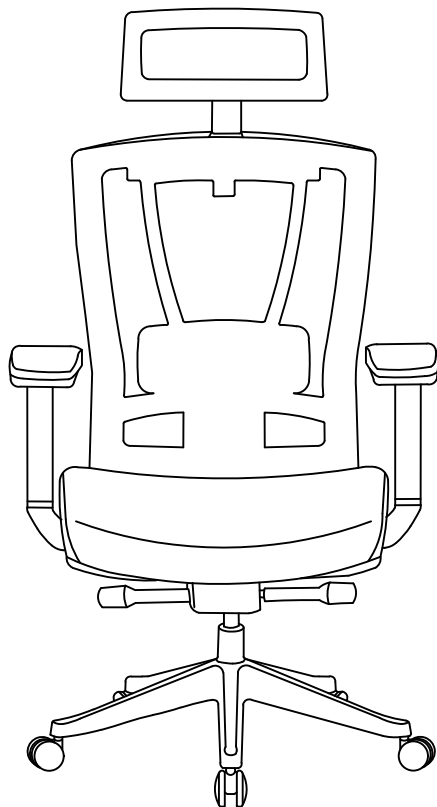

WARNING




To ensure your safety, please read the instructions carefully before you begin.


Failure to follow instructions may result in serious injury or damage to product.

- Please note, this product is designed for seating only. Do not stand on it or use it as a ladder.
- Please ensure all bolts and parts are firmly tightened during installation.
- If there is damage to parts please contact your supplier for repair or replacement.
- Do not sit on the armrest.
- This chair is designed for single person use with maximum 130kg load.



FRONT VIEW

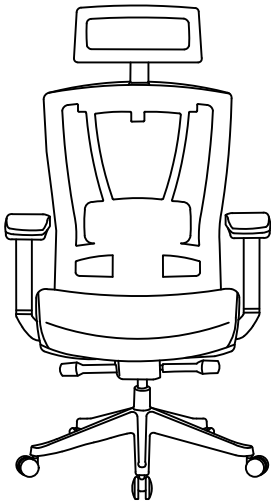



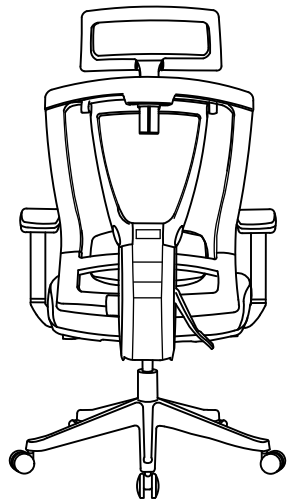





BACK VIEW

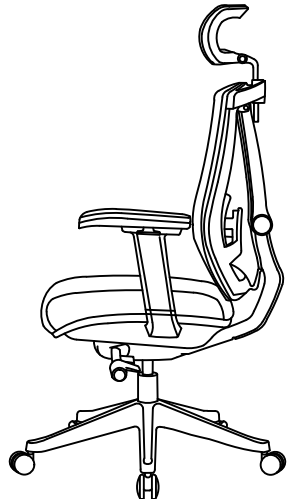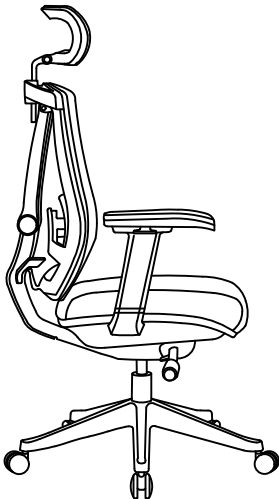









SIDE VIEW




PARTS LIST

<p>(A) Backrest</p> 	<p>(B) Headrest</p> 	<p>(C) Seat</p> 	<p>(D) Castorsx5</p> 
<p>(E) Gas Lift</p> 	<p>(F) Base</p> 	<p>(G) Armrest</p> 	<p>(H) Control Mechanism</p> 


<p>IX4 Bolt (M8*25mm)</p> 
<p>JX3 Bolt (M6*22mm)</p> 
<p>KX7 Bolt(M6*35mm)</p> 
<p>LX5 Bolt (M8*60mm)</p> 

<p>MX1 Screwdriver</p> 
<p>NX7 (Ø6*14*1.5mm) Washer</p> 
<p>OX8 (Ø8*17*1.5mm) Washer</p> 
<p>PX8 Spring lock Washer (M8)</p> 


1 Attach castors to the base

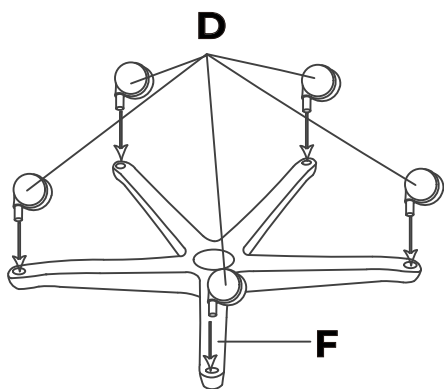


2 Attach gas lift to the base

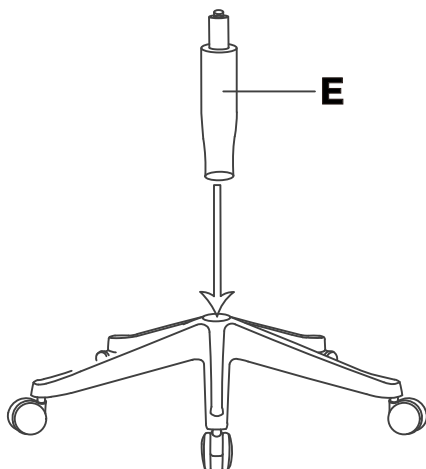


3 Tighten the aligned bolts and washers into holes on the base using a screwdriver

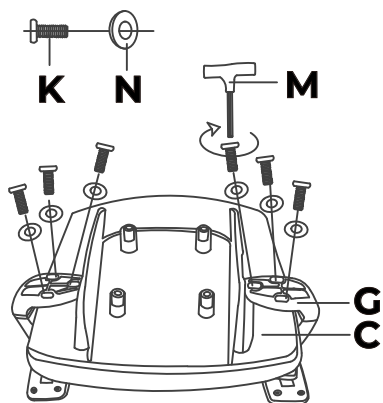


4 Align and tighten the bolts, spring lock washers and washers into holes on the base using a screwdriver

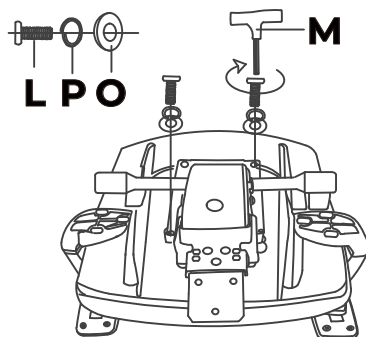


- 5** Place two bolts and washers in to the chair and tighten

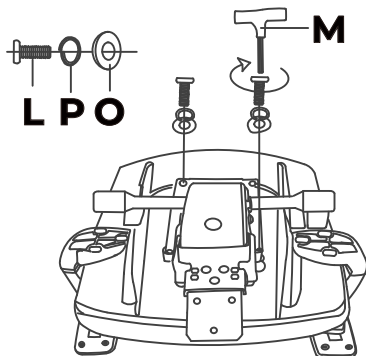


- 6** Place three screws and washers at the points shown below to bind the chair back to the seat

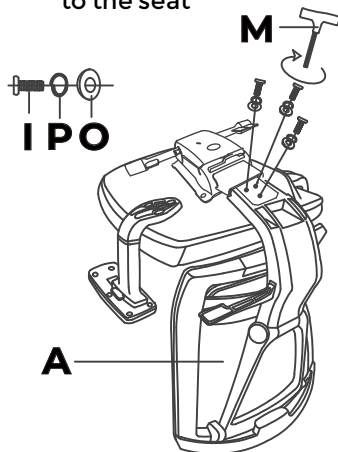


- 7** Attach the seat to the gas lift

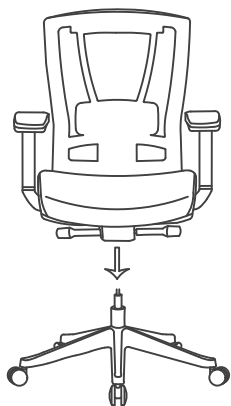

- 8** Attach the headrest to backrest

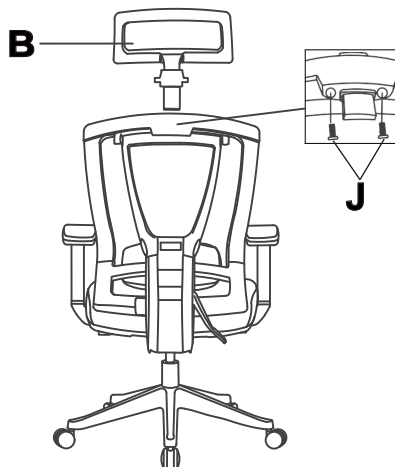


Function Guide

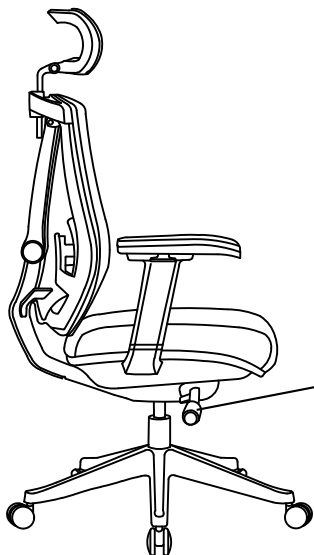


Rotate the handle clockwise to increase the back tilt tension. To decrease the back tilt tension, rotate the handle counterclockwise.

Pull the handle up to adjust seat height

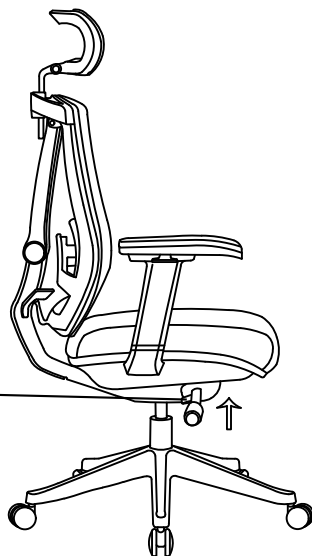



Function Guide

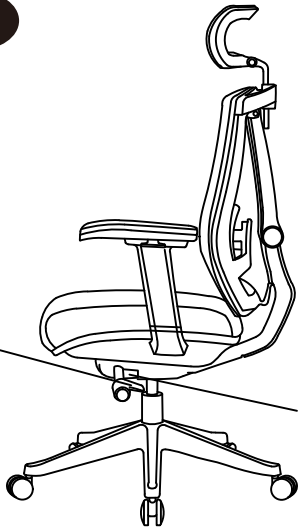

This handle controls backtilt angle. Rotate the handle to lock or unlock backtilt

60mm adjustable seat depth

Pulling the handle up allows the seat cushion to move forward up to 60mm. Release the handle, the seat will be locked.

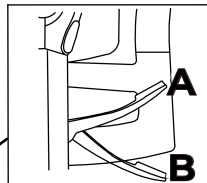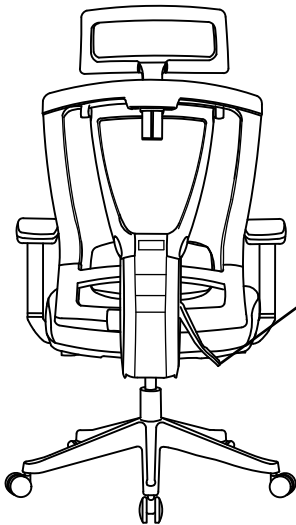

A is locked position
B is unlocked position

This lever acts as an additional backrest adjustment when reclining back. It enables the user to have additional control to lay lower without compromising the ergonomic back support.

Function Guide


Adjust the headrest angle up to 45 degrees




Adjust the headrest height within a 70mm range




Press the tabs under the armrests to adjust them up and down

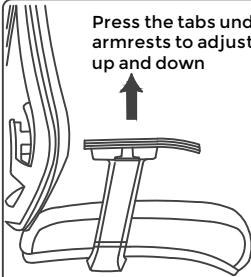


Lumbar support can be moved up and down

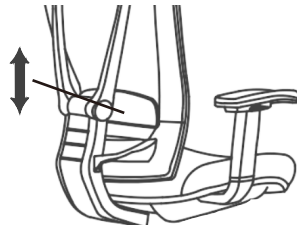






The armrest can be moved back and forth

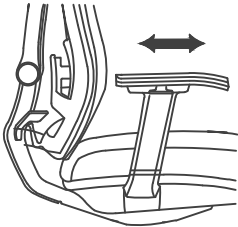

The armrest can be moved in and out

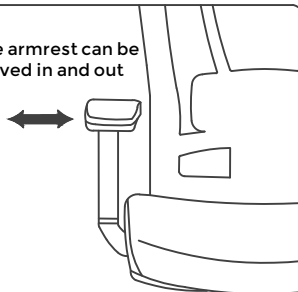

Function Guide

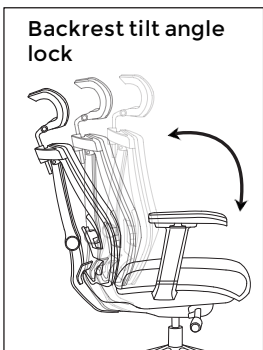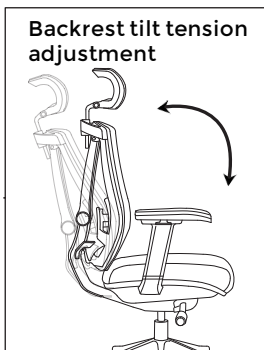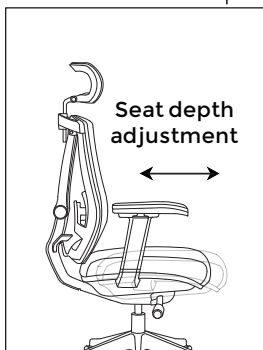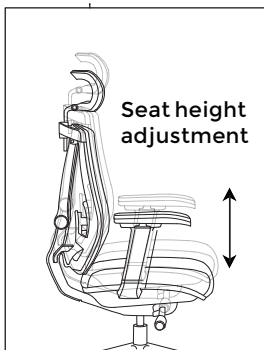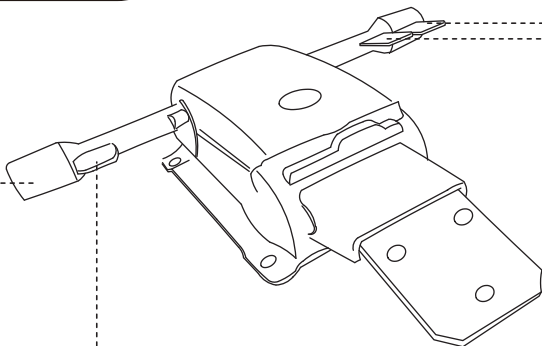

MG

Motion**Grey**

Office Chair

M G Motion**Grey**

#155 6660 Graybar Rd Richmond, BC V6W 1H9

www.motiongrey.com

support@motiongrey.com