
## Übersetzung

**Operating instructions**Multi-temperature wine cabinet
Read the operating instructions before switching on for the first time

Page 14



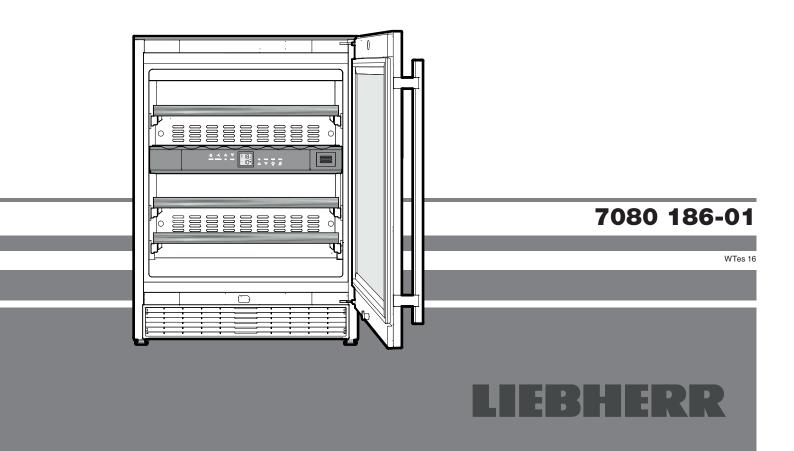

#### Content

Disposal notes	14
Description of the appliance	14
Range of appliance use	14
Safety instructions and warnings	15
Climate rating	15
Product data	
Setting up	
Appliance dimensions	
Levelling the appliance	
Mounting the dust filter	
Air circulation in the appliance plinth area	16
Mounting the ventilation grille	16
Electrical connection	17
Operating and control elements	17
Switching the appliance on and off	
Setting the temperature	

Fan	17
Door open alarm	18
Temperature alarm	18
Set-up mode	18
Interior light	19
Labels	19
Air exchange with activated charcoal filter	20
Safety lock	20
Storage diagram	20
Cleaning	21
Cleaning the dust filter	21
Removing and inserting the wooden shelves	21
Malfunctions	22
Shutting your appliance down	22
Changing over door hinges	

## **Disposal notes**

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

- Disable the appliance.
- · Pull out the mains plug.
- Cut through the connection cable.

## **WARNING**

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packaging material.

Take the packaging material to an official collection point.

## Range of appliance use

The appliance is suitable solely for storing wine in a domestic environment or similar. This includes, for example, use


- in staff kitchenettes, bed and breakfast establishments,
- by guests in cottages, hotels, motels and other forms of accommodation,
- in catering and similar services in the wholesale trade.

Use the appliance solely as is customary within a domestic environment. All other types of use are inadmissible.

The appliance is not suitable for storing and cooling medicines, blood plasma, laboratory preparations or similar substances and products covered by the 2007/47/EC Medical Devices Directive. Any misuse of the appliance may result in damage to or spoilage of stored goods.

Furthermore, the appliance is not suitable for operation in potentially explosive atmospheres.

## Description of the appliance

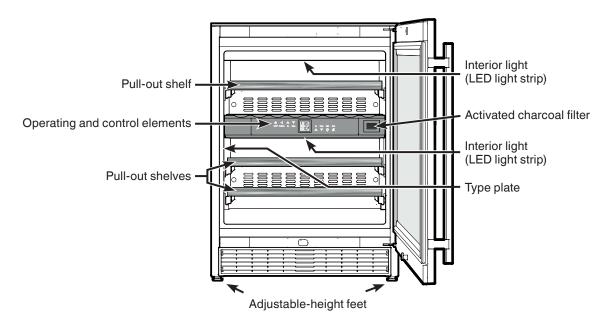

## Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance, ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance can be used by children of 8 years old and over, and also by persons with restricted physical, sensory or mental capacity or lack of experience and knowledge, if they are supervised or have been instructed on safe use of the appliance and understand the resulting risks. Children must not be allowed to play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not consume food which has been stored for too long, as it could cause food poisoning.

- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane, etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- Do not use electrical appliances inside the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- The LED light strips illuminate the interior of the appliance. They are not suitable for lighting a room.
- When transporting or operating the appliance at an altitude of more than 1500 m above sea level, the glass pane in the door can break due to the reduction in air pressure. Broken fragments are sharp-edged and can cause serious injury.

### Climate rating

The climate rating indicates the room temperature at which the appliance may be operated in order to achieve full refrigeration performance.



The climate rating is indicated on the type plate.

The position of the type plate is shown in the section entitled **Description of the appliance**.

Climate rating	Room temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C
SN-ST	+10°C to +38°C
SN-T	+10°C to +43°C

Do not operate the appliance outside the specified room temperature range.

## **Product data**

Product data is included with the appliance, as per Directive (EU) 2017/1369. The complete product data sheet is available on the Liebherr website under Downloads.

## Setting up

- Avoid positioning the appliance in direct sunlight or near cookers, radiators and similar sources of heat.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refriger-

ant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.

 Always install the appliance directly against the wall.

 Do not cover ventilation openings or grille.





The supplied dust filter prevents that dirt enters the motor compartment, reducing the refrigeration performance. Therefore always install the dust filter.




Remove the protective film from the dust filter.

Insert the filter at the bottom and click into place at the top.



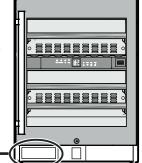

## **Appliance dimensions**

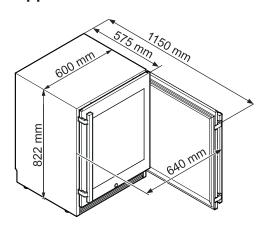


## Levelling the appliance


• Place the appliance in its final position at the place of installation.

Compensate floor unevenness using the adjustable feet.



The appliance must be aligned horizontally and vertically. If the appliance is not level, the main body of the appliance can be deformed and the door will not close properly.





Turn the spanner clockwise to raise the appliance and anticlockwise to lower it.

Position the spanner accordingly.


## Air circulation in the appliance plinth area


The refrigeration unit is located in the appliance plinth.

To ensure proper air circulation in the plinth area, install the foam moulding provided as shown in the illustration.


#### **Important**

If the foam moulding is not installed, the appliance will not achieve its full refrigeration performance during operation.



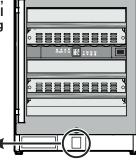

## Mounting the ventilation grille

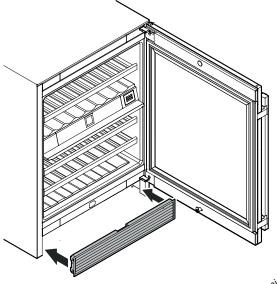

Fit the provided ventilation grille at the front and click into place.

#### **Electrical connection**

Only operate the appliance with alternating current (AC).

The permissible voltage and frequency are indicated on the type plate. The position of the type plate is shown in the section entitled **Description of the appliance**.


The socket must be properly earthed and protected by a fuse.

The tripping current of the fuse must be between 10 A and 16 A.

The socket must not be situated behind the appliance and must be easily accessible.

Do not connect the appliance using an extension cable or extension socket.

Do not use stand-alone inverters (conversion of direct current to alternating/three-phase current) or energy-saving plugs. Risk of damage to the electronic control system!




## Operating and control elements

The electronic control panel has the "touch capacitance technology". Any function can be activated by touching the corresponding icon.

The exact contact point is between the symbol and its label



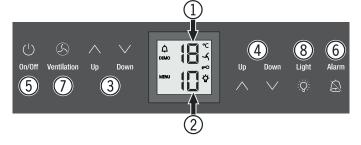

- ① Upper compartment temperature display
- ② Lower compartment temperature display
- ③ Upper compartment temperature setting buttons
- 4 Lower compartment temperature setting buttons
- ⑤ On/Off button (switching the appliance on and off)
- 6 Audible warning On/Off button
- 7) Fan switch
- Interior light On/Off button

#### Symbols in the display

Δ

Alarm (symbol flashes if the temperature inside the appliance is too high or too low)

**DEMO** Demo mode is activated

MENU Setup mode is activated (activating the child lock and adjusting the display brightness

The interior fan runs constantly

Child lock is activated

₽

The interior light is switched on constantly

## Switching the appliance on and off

#### Switching the appliance on

Press the **On/Off** button until the temperature display lights up.

# மு

On/Off


#### Switching the appliance off

Keep the **On/Off** button pressed for approx. 3 seconds so that the temperature display goes out.

## Setting the temperature

The temperature of both compartments can be set separately.

- ① Upper compartment
- ② Lower compartment



#### Reducing the temperature

Press the **Down** button.

#### Increasing the temperature

Press the **Up** button.

- When pressing one of the buttons for the first time, the display will start to flash.
- Pressing this button again enables you to change the temperature setting.
- The electronic control system will switch over automatically about 5 seconds after the last time you pressed the button, and the actual temperature will be displayed.

The temperature can be set at between +5°C and +20°C.

The following drinking temperatures are recommended for the various types of wine.

Red wines: +14°C to +20°C

Rosé wines: +10°C to +12°C

White wines: +8°C to +12°C

Sparkling wines, Prosecco: +7°C to +9°C

Champagne: +5°C to +7°C

If you are storing wine for long periods of time, it should be stored at a temperature of between +10°C and +12°C.

#### Fan

The interior fan ensures a constant and even interior temperature and a suitable climate for wine storage.

The humidity in the appliance can be increased even further by activating the **Ventilation** button. This has a particularly positive effect for long-term storage.



Ventilation

The increased level of humidity prevents the corks from drying out.

## Door open alarm

If the door is left open for more than 60 seconds, the audible warning signal will sound.

Alarm

If the door must be opened for a lengthy period to place items into the appliance, cancel the audible warning signal by pressing the **Alarm** button.



The alarm switches back to standby when the door is shut.

## **Temperature alarm**

If the temperatures in the interior are out of the permitted range, the audible warning signal will sound and the temperature display will flash.

• Cancel the audible warning signal by pressing the **Alarm** button.

After a lengthy power failure, the temperature in the interior may have risen to too high a level. After the power supply returns, the fall in temperature can be watched on the display.

The temperature display will stop flashing as soon as the temperature in the interior has reached the set value.

#### Temperature alarm after a fault in the appliance

If the appliance develops a fault, the temperature in the interior may rise too high or fall too low. The audible warning signal will sound and the temperature display will flash.

• Cancel the audible warning signal by pressing the **Alarm** button.

If the temperature displayed is too high (warm), first check whether the door is closed correctly.

If the temperature display continues to show a value that is too high or too low after one hour, contact the customer service department.

If F1, F8, E1, E2, E7 or E8 appears in the display, the appliance has suffered a fault.

In this case, contact the customer service department.


### Set-up mode

In set-up mode, you can set the child lock and adjust the brightness of the display. The child lock is designed to protect the appliance from being switched off and the temperature setting from being changed accidentally.

### Activating the child lock



### Deactivating the child lock











## EN


### Adjusting the display brightness





Use buttons Up and Down to select the desired setting.

h0 = display lighting offh1 = minimum brightnessh5 = maximum brightness



The adjusted brightness will be activated after one minute.

#### Note

If a button is pressed, the display lights up for one minute at maximum brightness.

When commissioning the appliance, the adjusted brightness will only be active once the set interior temperature of the appliance has been reached.

## Interior light

The interior of the appliance is lit by an LED light strip at the top of each compartment.

The interior light will always switch on when the appliance door is opened.

The interior light will go out approx. 5 seconds after the door is closed.

Press the **Light** button if you want the interior light to be on even when the door is closed.

#### Note

This function applies to the lighting of both compartments.

Furthermore, the brightness of the lighting can be adjusted.

- Press the **Light** button.
- Press and hold the Light button and at the same time press the temperature setting buttons to increase or decrease the brightness.




Note: The brightness will change in all compartments.

The light intensity of the LED light corresponds to laser class 1/1M.



The light cover may only be removed by customer service staff.

If the cover is removed, do not look directly at the light through optical lenses from close distance. This can damage your eyes.

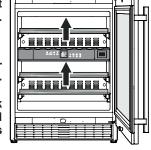


#### Labels

The appliance is supplied with one label for each wooden shelf.

Use these to label the type of wine stored on each shelf.

Additional labels can be obtained from your dealer.

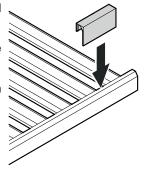


## Air exchange with activated charcoal filter

The way in which wines continue to mature depends on the ambient conditions.

The quality of the air is therefore decisive for preserving the wine.

We recommend that you replace the illustrated filter once a year. Filters can be obtained from your dealer.

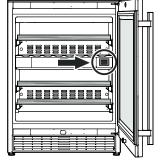


## Safety lock

The lock in the appliance door is equipped with a safety mechanism.

#### Locking the appliance

- Insert the key as shown by arrow 1.
- Turn the key 90°.

To unlock the appliance, the same procedure must be repeated in the same order.

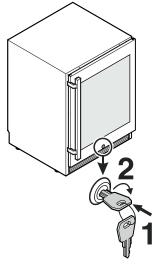


### Changing the filter

• Push the filter in and release it again.



Number of bottles

Storage diagram

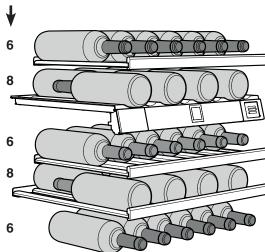

for 0.75 I Bordeaux bottles to standard NF H 35-124

Pull out the filter.




**Total 34 bottles** 




The maximum load per wooden shelf is 25 kg.

• Remove the back part of the filter.



• Fit the new filter to the cover.

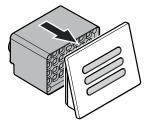

• Insert the filter, push it in as far as it will go and then release it again.

The filter is automatically locked into place.

You will hear a click.





## Cleaning

Before cleaning, always switch off the appliance. Disconnect from the mains or switch off or unscrew the fuse.


- Clean the inside and outer walls with lukewarm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.
- Use a glass cleaner to clean the glass surfaces and a commercially available stainless-steel cleaning agent for the stainless-steel surfaces.

# Do not use steam cleaners because of the risk of injury and damage.

- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- Do not damage or remove the type plate on the inside of the appliance. It is very important for servicing purposes.

## Cleaning the dust filter

The dust filter in the appliance plinth must be cleaned at least once a year.

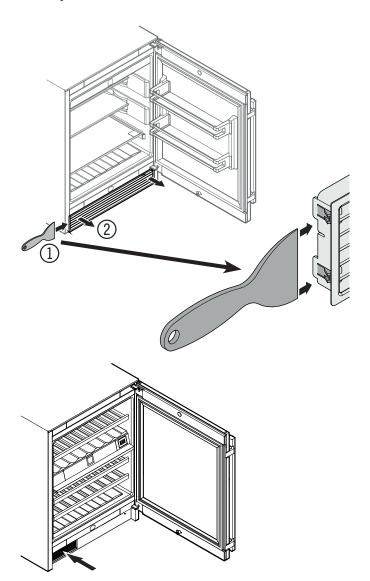


- Clean the dust filter using a vacuum cleaner.
- Click the ventilation grille back into place.


## Removing and inserting the wooden shelves

The wooden shelves can be removed for easier cleaning of the inside of the appliance.

#### Removing the wooden shelf

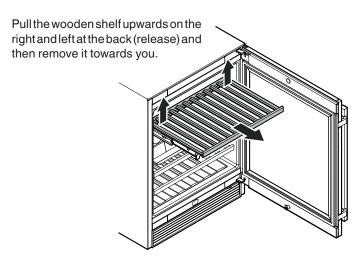


### Inserting the wooden shelf

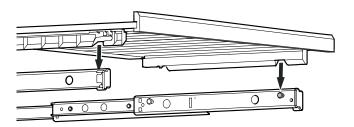

Extend the pull-out rails as far as they will go. Place the front recesses of the wooden shelf on the securing pins.

Slide the wooden shelf together with the pull-out rails into the appliance as far as they will go.

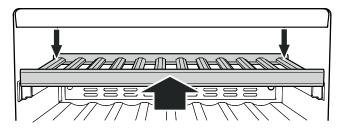

Push the wooden shelf right to the back so that it clicks into place at the front.

Push the wooden shelf downwards on the right and left at the back and click into place.

#### **Malfunctions**

- F1, F8, E1, E2, E7 or E8 appears in the display.
- The appliance has suffered a fault. Contact the customer service department.
- The fans inside the appliance are running although the fan function has been deactivated and the compressor (refrigeration unit) is idle.
- This is a normal operating state depending on the set interior temperature and ambient temperature at the place of installation.

You may be able to rectify the following faults by checking the possible causes yourself.

#### • Appliance does not function:

- Is the appliance switched on?
- Is the plug correctly fitted in the mains socket?
- Is the fuse intact?
- When inserting the mains plug, the refrigeration unit does not switch on, but a value is shown in the temperature display.
- Demo mode is activated. Deactivate demo mode as described in the section entitled **Demo mode**.


#### · Loud running noise:

- Is the appliance set up firmly on the floor?
- Does the appliance cause nearby items of furniture or objects to vibrate? Please note that noises caused by the refrigerant circuit cannot be avoided.

#### • The temperature is not low enough:

- Is the temperature setting correct (see "Setting the temperature")?
- Does the separately installed thermometer show the correct reading?
- Is the ventilation system working properly?
- Is the dust filter in the appliance plinth soiled? See section entitled
   "Cleaning the dust filter".
- Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type designation ①, service number ② and appliance number ③ as indicated on the type plate.

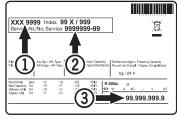

The position of the type plate is shown in the section entitled **Description of the appliance**.

## Shutting your appliance down


If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or switch off or unscrew the fuse.


Clean the appliance and leave the door open in order to prevent unpleasant smells.

The appliance complies with the relevant safety regulations and EU Directives 2014/30/EU and 2014/35/EU.

## Changing over door hinges


Door hinges should only be changed by a trained expert. Changing the door hinges must be done by two people.

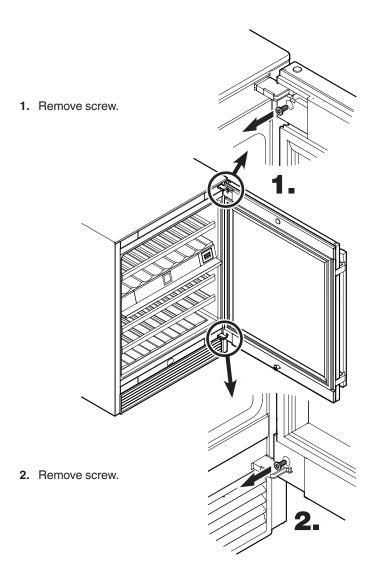


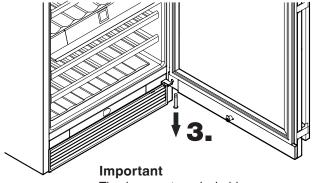


The door must now be held secure by somebody.

3. Pull out hinge pin.

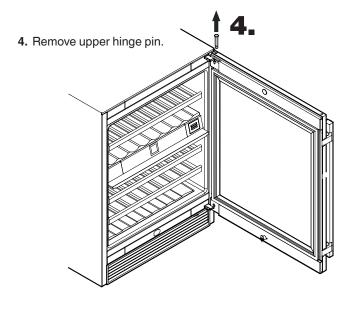


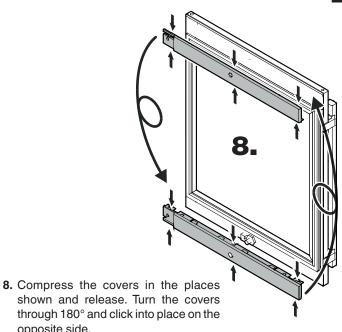

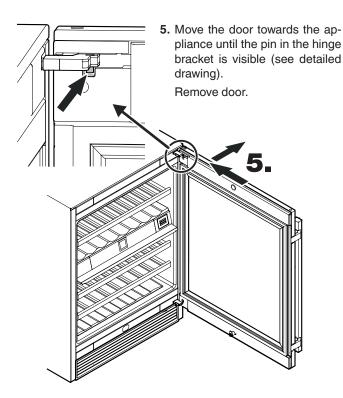


9. Click cover into place.


opposite side.

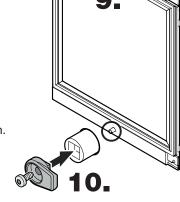



10. Screw on the door latch.

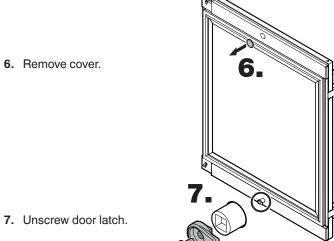

11. Transfer door handle and plugs to the opposite side.

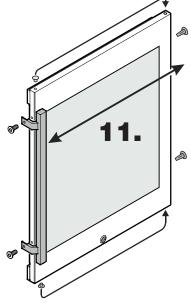


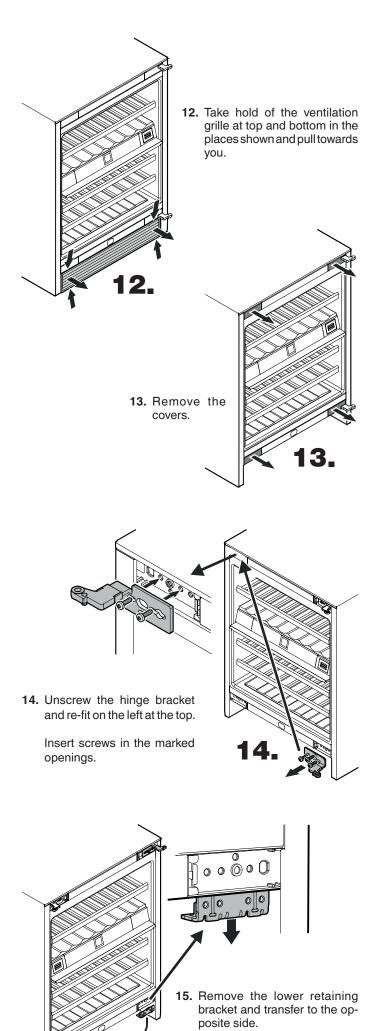

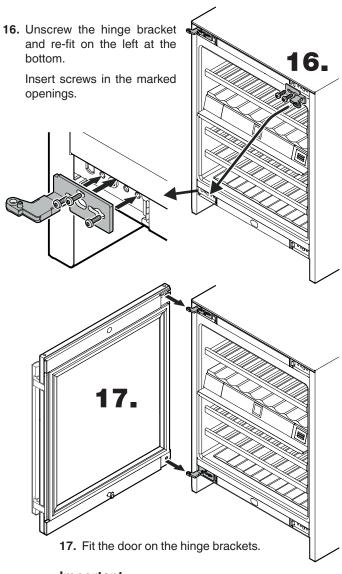

## **Important**


The door must now be held secure by somebody.

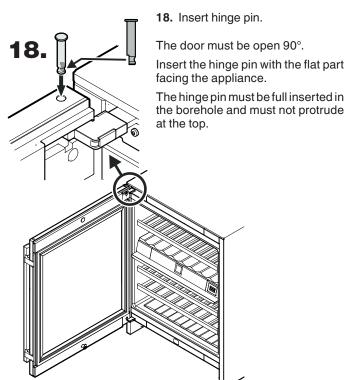

**19.** Insert the bottom hinge pin in the same way.

## Adjusting the lateral tilt of the door


If the door is at an angle, adjust the angle.

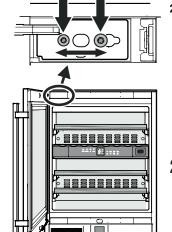


**22.** Undo screws and slide hinge bracket to the right or left.


Tighten screws.

22.

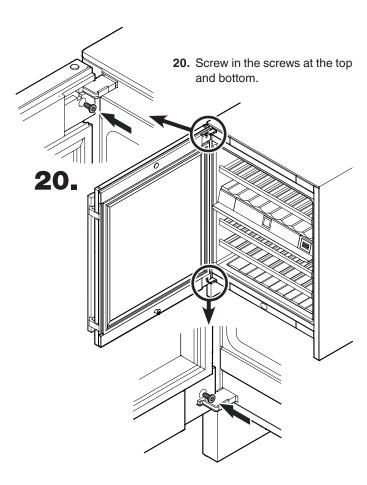

21. Close door and check that it is aligned with the side walls of the appliance.

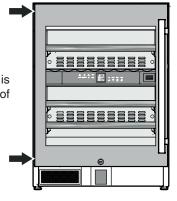

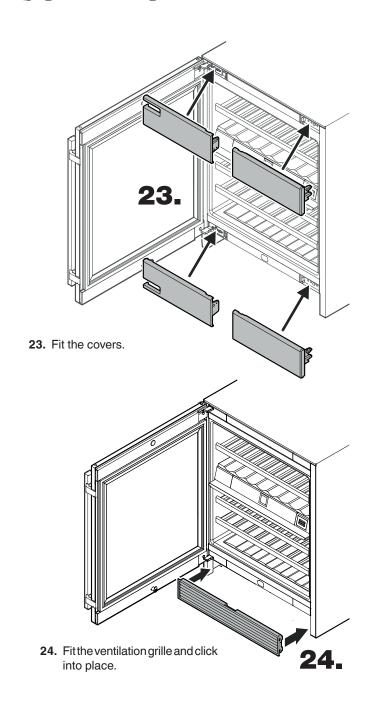





Liebherr Hausgeräte Lienz GmbH Dr.-Hans-Liebherr-Strasse 1 A-9900 Lienz Österreich www.liebherr.com

