

FLYCAM Flowline Master Professional Support for Camera (FLCM-FLN-MSTR-02)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Bag Packing

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.


Flowline Master Setup

NOTE: It is recommended to attach the minimum required weight (4kg / 8.81lb) for pulling down the balancing rope to ensure proper operation of your Flycam Flowline system.

- Join section-1 of support bar to section-2 with simple push-fit technique.



- Remove the side knobs and join section-2 with section-3 and again tighten the side knobs.

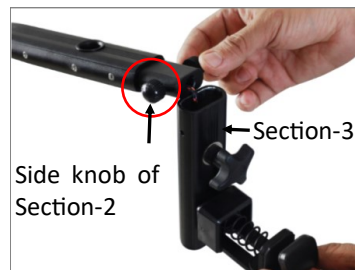

- Tighten & adjust the buckles provided at the chest and at the waist.



- Loosen the knob of hook and attach the camera with it. Tighten the knob to ensure slip free connection.



- Through the Tension Adjustment Knob, you can adjust the tension anti-clockwise according to the weight of your setup.



CAUTION: Do Not release the Lever without removing the setup. It may result in serious damage to the camera.



YOUR FLYCAM FLOWLINE MASTER PROFESSIONAL SUPPORT FOR ALL DRESSED UP AND READY TO GO



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.