


Action-Grip Tubular Car Mount (CM-ACGP-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

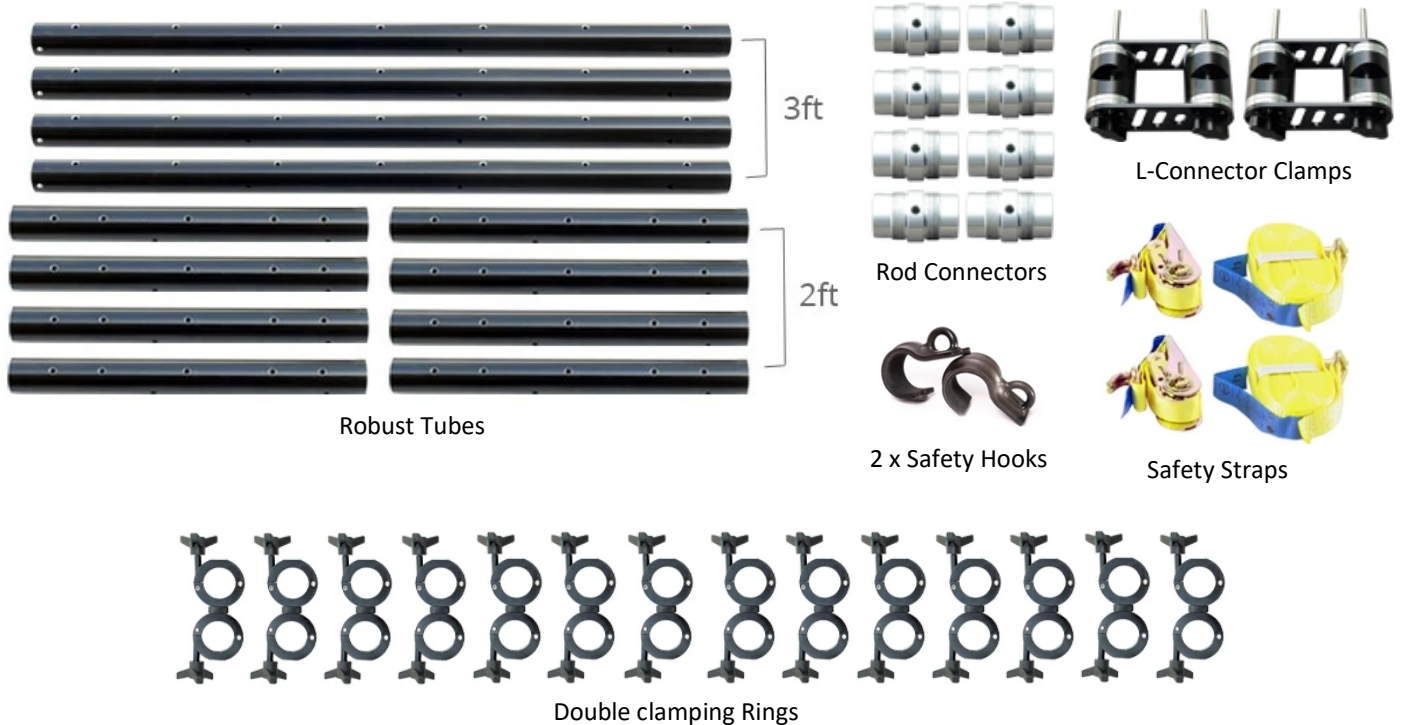

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Suction cup with dust Covers

Action-Grip Setup

- Remove the dust cover from the suction cup and place your suction cup on the selected position where you want to shoot.



- Press down the suction cup and keep pushing the pump to fix it on surface.




- Now attach clamp ring with Suction cup and tighten the knob.



- Remove the suction cup by air release button.



- Insert the robust tube to joint the clamp and tighten properly.

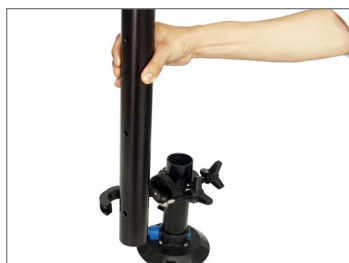

Note: You can easily adjust the angle 360° rotation, which gives extra flexibility, as shown



- Attach the joint clamp between the robust tubes as shown in the image.



- Now loosen the knobs from L-connectors clamp and remove the one side plate and robust tube holder clamp.



- Then insert the L-connectors clamp into the robust tube and re-insert the plate & robust tube holder clamp both side and tighten the knobs.



- Attach the L-connector clamp both side within robust tubes.

Note: You can adjust angle from 0° to 180°



YOUR PROAIM ACTION-GRIP CAR MOUNT ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.