

Alpha Mobile Workstation (TP-ALPA-02)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.




All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.



Alpha Stand **Setup**

• Loosen the knob of the Alpha stand and spread its legs on the floor (as per your requirement).












 Loosen the knob to adjust the stand height as per your need and tighten the knob back, as shown in the image.





NOTE: The Alpha Stand has 3 sections to adjust the height with quick & secure locking knobs. The central main post of the stand is adjustable, through which you can change its height as you require.

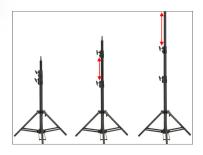

Alpha Wheels Setup

 Using an Allen key, loosen the bolts of the Alpha wheels.





• Properly insert the alpha wheels into the Alpha support stand.

NOTE: It is a set of three pneumatic wheels that revolve 360°, offering great mobility.





 After inserting the Alpha wheels, properly secure them with the help of an Allen key and push the locking lever to stabilize the wheel.

NOTE: Each wheel is secured to the standing leg with a locking lever and has a specially designed footbrake that keeps the stand completely steady, stable, and secure for reliable parking.





NOTE: Roll your stands smoothly around a set or location with Proaim Wheel Set, which combines perfectly with Proaim Alpha Support Stand and any 1x1" Square Legs Stands.





Alpha Workstation Tray Setup

 Loosen the clamp knob of the workstation tray holder and then mount it onto the alpha support stand.





 After mounting the workstation tray holder, tighten the clamp knob.





NOTE: It's tool-less mounting clamps make it super quick to connect, adjust & disconnect from a stand without hassle.





NOTE: Proaim Alpha Workstation/Case Tray transforms your C-Stand into the best standing & moving laptop workstation that you can take where your work requires it to be.





Alpha Tool Tray **Setup**

 Mount the Alpha tool tray by sliding it onto the leg of the Alpha support stand and secure it properly by tightening the knob.

NOTE: In order to mount, you just need to slide and attach it over the leg-straps of the Alpha stand & tighten with four knobs at the back.

NOTE: Proaim Alpha Tool Tray lets you keep your all essential & frequently used production tools near & organized.









NOTE: It's all set to hold your block batteries, small-sized RAID systems, Allen keys & other essential tools.



VESA Monitor Mount Setup

 Mount the monitor mount on the stand and secure it completely.

NOTE: Monitor Mount provides an additional 3/8"-16 thread on the top for accessory mounting, e.g. Compatible LCD arms, mounts, etc.





 Loosen the side knob of the stand mounting clamp as per your requirement.



 By loosening the side knob, you can move the monitor mount up to 180° up-down, as shown in the images.





• Loosen and remove the knob from the other side of the stand mounting clamp and loosen the inbuilt bolt using an Allen key.





 After loosening the inbuilt bolt, you can rotate the monitor mount up to 360°, as shown in the images.





• After the rotation, tighten the bolt and re-attach the knob.





• Remove the monitor mount from the stand mounting clamp and attach it to the LCD.





 Bolt-together the LCD and the monitor mount and then attach it to the stand mounting clamp.





• Once the monitor mount is attached to the stand mounting clamp, secure it properly using an Allen key as shown in the image.





Your setup is now ready.

 Alpha Camera Stand also supports photo equipment & lighting accessories like reflectors, soft boxes, lights, utility trays, workstations, and many more.

NOTE: The Stand has 5/8" baby pin mount on the top to attach the camera stabilizer system & gimbals with their support accessories.





YOUR PROAIM ALPHA MOBILE WORKSTATION ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.