

PROAIM Mitchell Base to Bowl Camera Adapter | 100mm. 150mm. Mitchell Top Plate (MP-306-00)

Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Mitchell Top Plate



4 x Bolts



2 x Washers



2 x Nuts

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Mitchell Top Plate Setup

- Mount the Mitchell top plate matching the threads on the horseshoe mount **(Not Included)**.




- Insert the bolts to secure the Mitchell top plate to the horseshoe **(Not Included)** properly as shown in the image.


Feature: Mitchell Top Plate is the perfect solution to all your Mitchell-mount accessory needs.



- After inserting the bolts in the Mitchell top plate, tighten them with the help of Allen key then mount the fluid head **(Not Included)** on the Mitchell top plate.

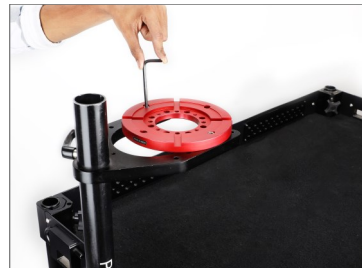


- After mounting the fluid head **(Not Included)** on the Mitchell top plate, tighten the Castle ring from the bottom as shown in the image.

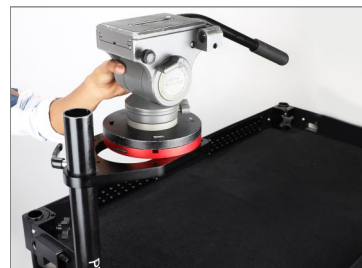

- Unlock the fluid head **(Not Included)** then remove the fluid head top plate by pushing the push pin button.



- Attach the plate to the bottom, matching the camera's threads as shown in the image.

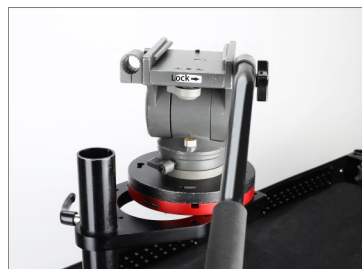

- Tighten it properly using a screwdriver. Then mount the camera (Not Included) onto the fluid head by sliding.



- Now setup is ready to use.



**YOUR PROAIM MITCHELL BASE TO BOWL CAMERA ADAPTER
MITCHELL TOP PLATE
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.