

## Monitor Articulated Arm for Camera Cart (VCTR-MA)

### Assembly Manual



### What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



2 x Rods (Length 40cm each)



2 X Pair Monitor Arm Clamps



Mounting Arm

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## ■ Monitor Articulated Arm for Camera Cart Setup

- Mount the monitor arm clamp onto the cart post and tighten the knob to secure it.



- Similarly, mount the second clamp on the same cart post and secure it well.



- Connect both the 40mm rods properly.



- Insert the rods into the monitor arm clamps and tighten the knobs .



### Mounting Arm Assembly

- Loosen the knob of the Mounting Arm and mount it on the rod.



- After mounting the arm, tighten the knob properly. Loosen the bolts from both sides using the Allen key.




**Note:** By loosening the bolts, you can move the mounting arm up to 180° up-down, as shown in the images.



- Loosen the bolt on the top of the mounting arm to rotate the arm up to 360°.



- Images showing mounting arm rotation.

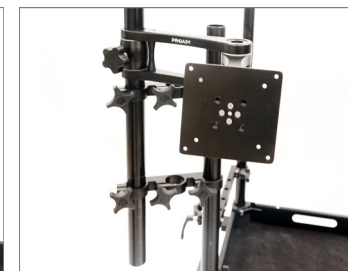

## ■ Monitor Setup

- Bolt-together the monitor and the mounting arm.



- Securely tighten the bolts using the Allen key.



## YOUR PROAIM MONITOR ARTICULATED ARM FOR CAMERA CART ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.