

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



2 x Poles



2 x VESA Mounts
 With Adjustable Arm



2 x Cross Tubes



Bag Packing



2 x Cross Bars



2 x Clamps



2 x T-Type Allen Keys
 (Sizes: 3x16" & 4mm)

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

INDEX

Sr. No	Particulars	Page No.
1	Multi-Monitor VESA Mount Setup	3
2	Clamp Assembly	3
3	Pole Mounting	3-4
4	Cross Tube Mounting	4-5
5	Cross Bar Mounting	5-6
6	VESA Mount Mounting with Adjustable Arm	6-8
7	LCD Monitor Mounting	8
8	Sound Chief Cart Setup	9
9	VESA mounting with clamp	9
10	Clamp Mounting	9
11	VESA Mount Mounting	9
12	VESA mounting without clamp	10
13	VESA Mount Mounting with Adjustable Arm	10
14	Cross Tube Mounting	10
15	Crossbar Mounting	11
16	Assembly of VESA Mount	12-13
17	LCD Monitor Mounting	13-14
18	Final Setup	14

Multi-Monitor VESA Mount Setup

Clamp Assembly

- Loosen the ratchet knob and open the clamp.



- Align and attach the clamp to the rod and tighten it using the ratchet knob.



- Similarly, attach the other clamp to the rod as shown in the image.



Pole Mounting

- Now, loosen the knob of the clamp and insert the pole by matching it with the clamp hole.



- After inserting the pole, tighten it using the clamp knob.



- Follow the same procedure to attach the other pole.



NOTE: Five position holes are provided on the pole so that height can be adjusted according to the setup requirement.



Feature: The provided holes help in adjusting the height at five different positions for seated/standing monitor viewing angles.



- Similarly, remove both the rod end caps.




- Similarly, remove both the rod end caps.



Cross Tube Mounting

- Insert the cross tube by aligning it with the hole of the pole.

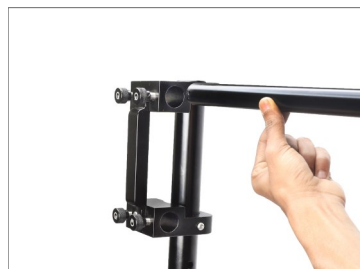

- Similarly, insert the second cross tube.




Cross Bar Mounting

- Loosen both the knobs of the cross bar.




- Now align the holes of the cross bar to cross tubes, and then insert the cross bar by simply sliding it in.

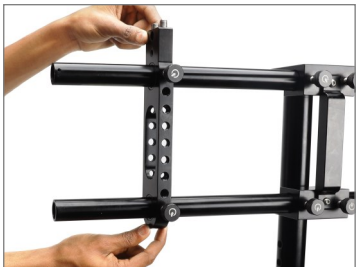

- After inserting the cross bar, securely tighten the knobs, and similarly insert the second cross bar.



- Securely tighten the bolt on the back side of the cross bar using a 4mm Allen key.

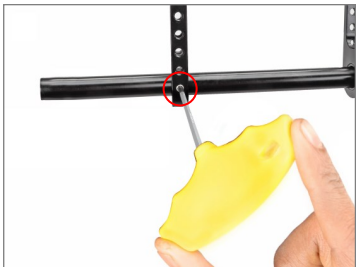


- Now insert both the cross tubes into the second pole.



- Properly tighten the knobs of the pole to secure the assembly.



- Then insert the rod end cap to secure the cross tube.

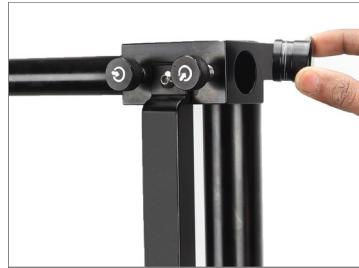


- Now, secure it using the provided knob on the pole.



VESA Mount Mounting


- Loosen the knob of the Adjustable Arm.

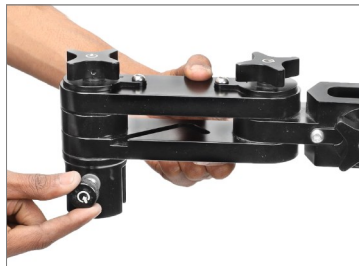



- Loosen and remove the bolt present on the side of the Adjustable Arm using a 4mm Allen key.




- Then, mount the Adjustable Arm along with the VESA Mount on the cross bar.

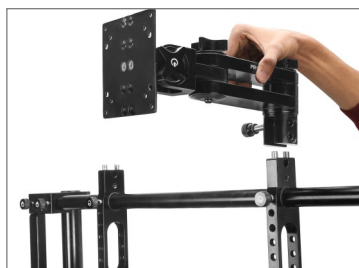

- Now, insert the bolt by aligning the thread holes of the Cross Bar with the VESA Mount and securely tighten it using a 4mm Allen key.

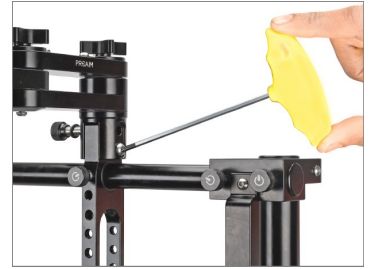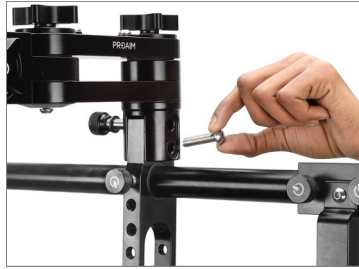


- Tighten the knob of the Adjustable Arm and secure it on the cross bar.

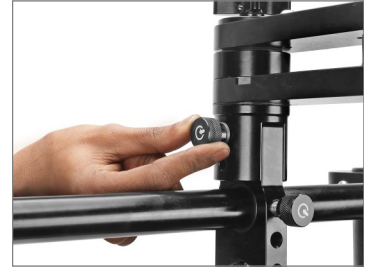

- Follow the same procedure to attach the second Adjustable Arm along with VESA mount.




- **NOTE:** By loosening the knob of the VESA Mount you can rotate it 180 degrees and set it at any desired angle.

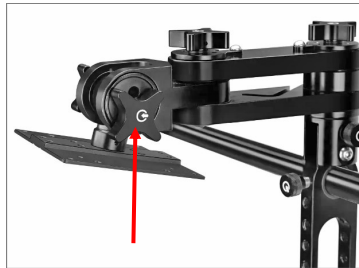


- Adjust the position of the VESA Mount according to your requirement.



- Remove the knobs from both sides of the Adjustable Arm and loosen the grub screw using a 3/16" Allen key.

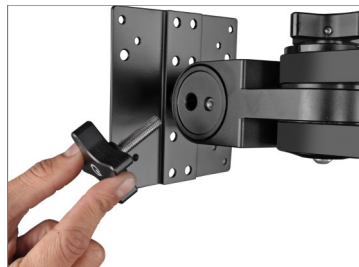


- Now detach the VESA Mount.

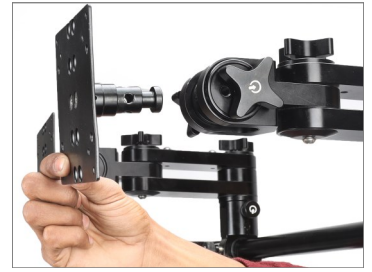

LCD Monitor Mounting


- Place the VESA Mount to the LCD monitor by aligning it with the thread hole at the back of the LCD monitor (Not Included).

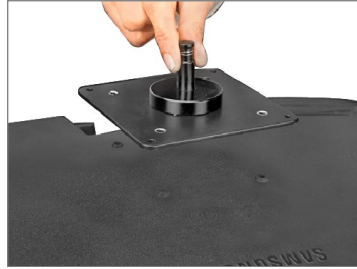

- Insert the bolt and tighten it using a 3/16" Allen key.
- Similarly, secure all the bolts by tightening them.



- Attach the LCD monitor to the Adjustable Arm. Now, secure it by tightening the knob.

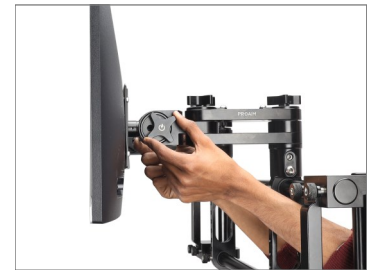

- Now our Multi-Monitor VESA Mount System setup is ready to use. You can mount two monitors to your cart.



Sound Chief Cart Setup

Method 1 : VESA mounting with clamp

Clamp Mounting

- Loosen the ratchet knob and open the clamp.



- Align and attach the clamp with the rod and then tighten it using the ratchet knob.



VESA Mount Mounting

- Loosen the knob and insert the pole into the crossbar and then tighten the knob.




- Similarly, insert the other pole into the crossbar.




Method 2 : VESA mounting without clamp

VESA Mount Mounting

- Insert the pole into the rod of the Sound chief cart.

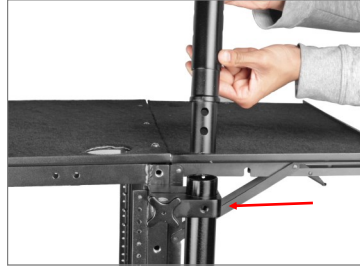


- Now loosen the knobs of the top and bottom clamp and slide the pole downwards and then tighten both the knobs.

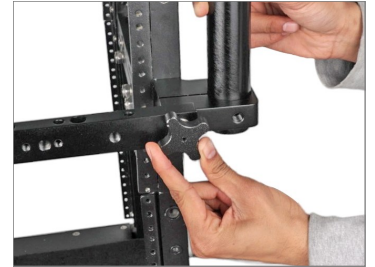

NOTE: The pole's joint should fall in the center of the clamp and then it should be secured by tightening the knob.

- Follow the same procedure to insert the other pole.

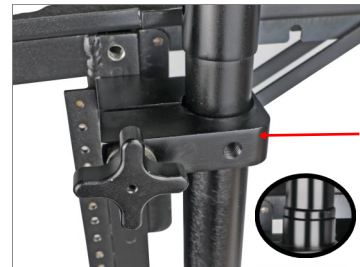

Cross Tube Mounting

- Insert the cross tube by aligning it with the hole of the pole.



- Similarly, insert the second cross tube.




Crossbar Mounting

- Loosen both the knobs of the cross bar.



- Now align the holes of the cross bar to cross tubes, and then insert the cross bar by simply sliding it in.

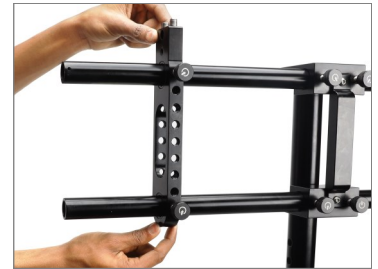

- After inserting the cross bar, securely tighten the knobs, and similarly insert the second cross bar.



- Securely tighten the bolt on the back side of the cross bar using a 4mm Allen key.



- Now insert both the cross tubes into the other pole.



- Tighten the knobs of the pole to secure the assembly.



- Insert the rod end cap to secure the cross tube.




- Now, secure it by tightening the pole's knob.



Assembly of VESA Mount with Adjustable Arm

- Loosen the knob of the Adjustable Arm.

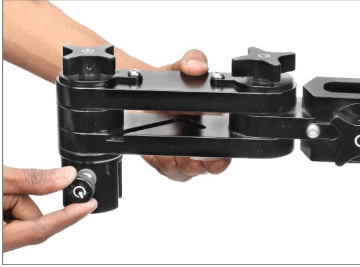


- Loosen and remove the bolt present on the side of the Adjustable Arm.





- Then, mount the Adjustable Arm along with the Vesa mount on the crossbar.





- Now, insert the bolt by aligning the thread holes of Cross Bar with the Adjustable Arm and secure the assembly using the 4mm Allen key.

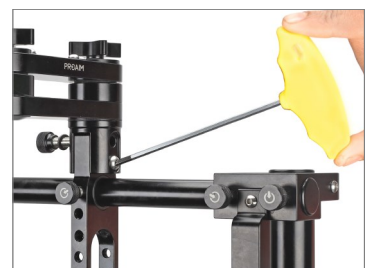

- Tighten the knob of the Adjustable Arm to secure it on the cross bar.

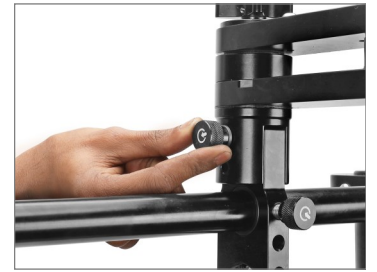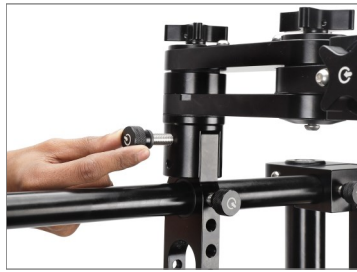

- Follow the same procedure to attach the other Adjustable Arm and Mount.

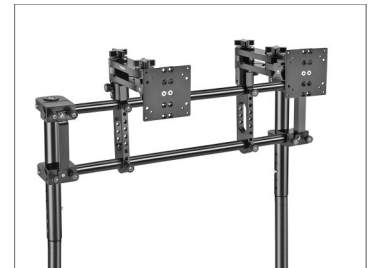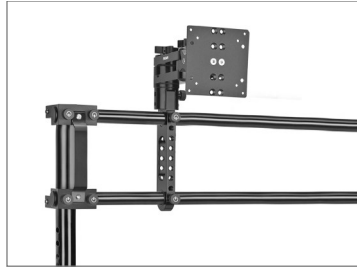

- Detach the VESA Mount by loosening the knob attached to it.



LCD Monitor Mounting


- Place and attach the VESA Mount by Aligning it with the thread hole at the back of the LCD.



- Insert the bolt and tighten it using the 3mm Allen key (Not Included).



- Attach the LCD monitor to the VESA Arm. Now, tighten the knob to secure it.

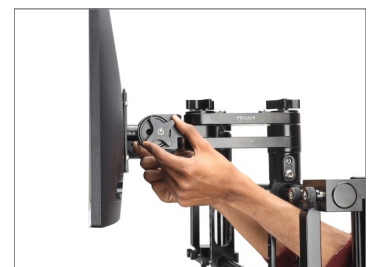

- Now our Multi-Monitor VESA Mount System setup is ready to use. You can mount two monitors to your cart.



YOUR PROAIM MULTI-MONITOR VESA MOUNT SYSTEM ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.