


Quad Bazooka Doorway Dolly (P-QUAD-SB)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

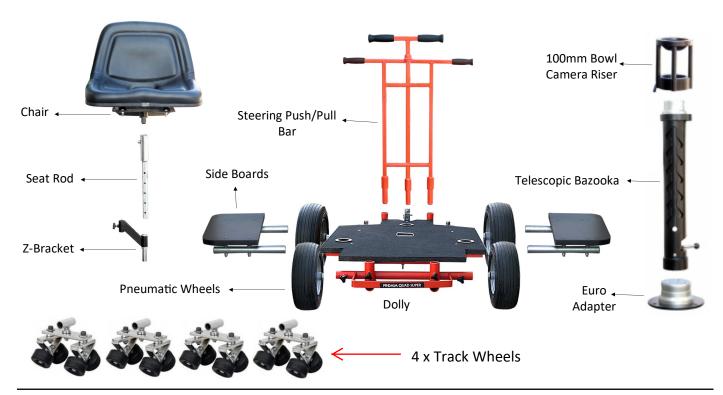

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Doorway Dolly Setup

 Position single Steering Push/Pull Bar centrally on the steering rod mount located on rear axle of dolly. Connect them properly by locking with provided knob.

NOTE: While controlling lightweight setups, you can only use single Steering Bar.

 Position dual Steering Push/Pull Bar on the steering rod mount located on rear axle of dolly. Connect them properly by locking with provided knob.










NOTE: You can use both the Steering Bars together for heavier set ups.



 Insert both the Side Boards into 2 connection rods found on each side of Main Dolly Platform and secure them properly.



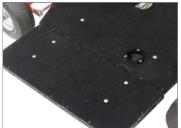

• Take out the allen bolts from dolly base to attach Euro Adapter.





 Place the Euro Adapter by carefully aligning the holes on dolly. Then tighten the allen bolts back to secure it properly on the base.






 Mount Telescopic Bazooka along with 100mm Bowl Camera Riser on Euro Adapter and Tighten it with integrated Quick Lock Lever.





 To mount the Chair, you need to connect Z-Bracket onto dolly base. Insert Seat Rod into Z-Bracket and lock it securely with locking knob. Now attach Chair with Z-Bracket and tighten the provided knob to fix it accurately.

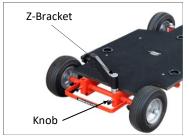




NOTE: Chair is adjustable and moves in forward/backward position, to provide more comfort to the operator.





NOTE: If you wish to use Quad Dolly with Track Wheels, you need to remove all 4 Pneumatic wheels.







 On the provided bushes of wheel rod, attach Track Wheels set. Re-tighten the nut. Take the help of provided tool, to secure all the wheels properly.





YOUR PROAIM QUAD BAZOOKA DOORWAY DOLLY ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.