

## Assembly Manual



### ■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Rotating Offset 4 Way Camera Leveller


---

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

## ROM-1 Rotating Offset 4 Way Camera Leveller Setup

- Loosen the castle nut.

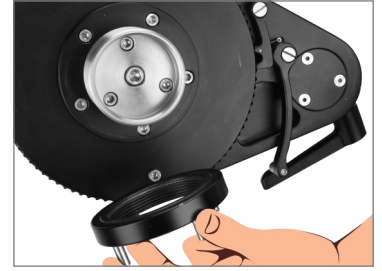

- Mount the ROM-1 on the tripod.



- Attach the castle nut to secure the ROM-1.




- Loosen all four knobs of ROM-1.




- You can adjust its level to your requirement, as shown in the image.



- Rotate the upper portion of ROM-1 by unlocking its knob.

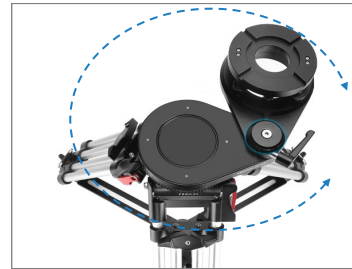

- The ROM-1 will rotate 360°, as shown in the image.

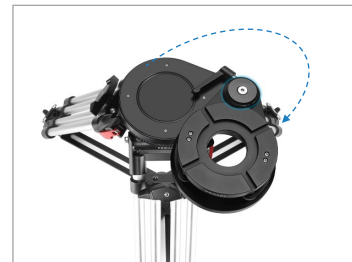

- Unlock the geared locking rotation by flipping it towards the rotating head.



- The head will rotate 360°, as shown in the image.




- Insert fluid head (Not included).




- Secure the fluid head by attaching the castle nut to it.



- Remove the camera plate by unlocking the knob of the fluid head.

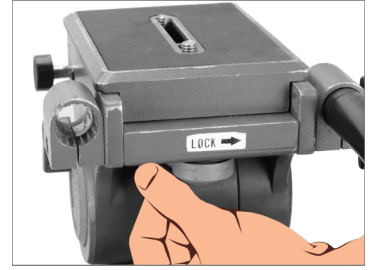

- Press the push button of the camera plate and remove it.
- Attach the camera plate to the camera **(Not Included)**.

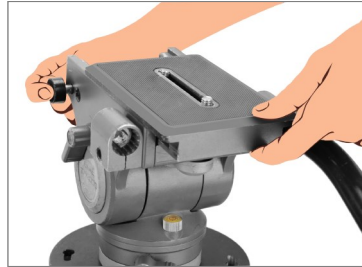

- Secure the camera using a screwdriver **(Not Included)**.



- Mount the camera setup on the fluid head.



- Your final setup is ready, as shown in the image.



**YOUR PROAIM ROM-1 ROTATING OFFSET 4 WAY CAMERA LEVELLER  
ALL DRESSED UP AND READY TO GO!**



**(SHOWN WITH OPTIONAL ACCESSORIES)**

**Warranty:** We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

**Liability:** We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

**Contact Us:** In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.