


PR◊AIM Universal 9" Monitor Director Cage (P-DMC-59)

Assembly Manual



■ What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

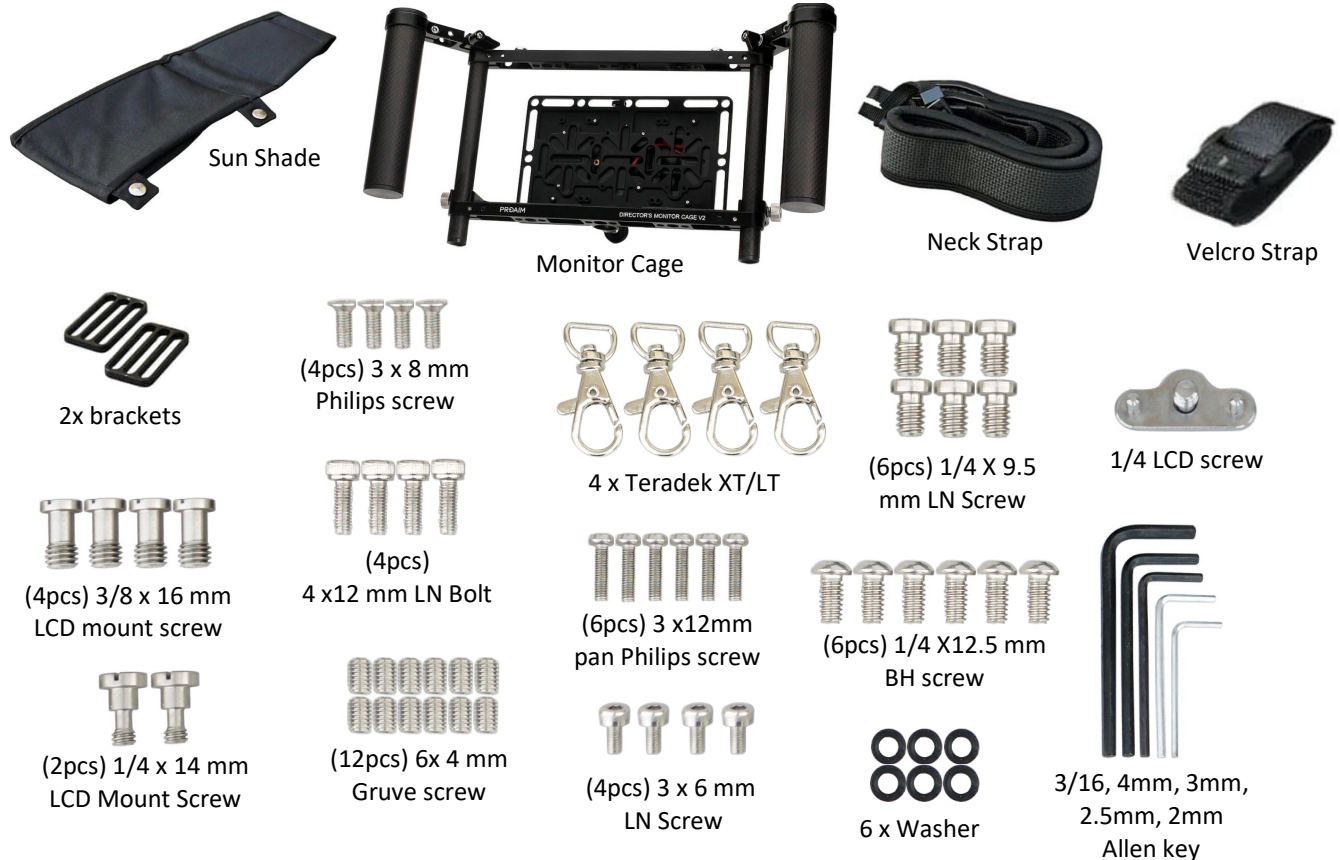

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Monitor Cage Setup

- Attach the LCD securely into the cage and tighten the screw with the help of provided allen key.



- Mount the monitor cage into the stand and tighten the provided knob to secure it properly.



NOTE: you can adjust the height of the cage according to the LCD monitor.



- Insert the side handles to the monitor cage and tighten the knob.



- Remove the battery plate by loosening the screw both side cage rod.



- Slide the v-mount battery and attach the Battery into Battery plate.



- Push the button of the top battery plate and remove the v-mount Battery.



- Insert the Sun shade into the provided space in order to attach it with the monitor cage.



- Insert the strap hook into the cage provided four connection point.



- The monitor cage easily held in hand.



**YOUR PROAIM DIRECTOR'S MONITOR CAGE
ALL DRESSED UP AND READY TO GO!**



Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.