





GENERATION Z

INSTALLATION





Table of Contents

Equipment package contents	3
Name of each part	4
Specification	5
CADR Performance to ISO14644 m3/hr	6
Filter setup before use	7
Setup	8
Function	9
Dust sensor	10
Dust Sensor Cleaning	11
Filter cleaning	12
Filter replacement	13
Smart phone connection	14
Safety precautions	17
FAQ	18
Warranty	19





Equipment package contents

- 1 air purifier
- 1 adapter
- 1 user manual
- 1 remote control










Name of Each Part





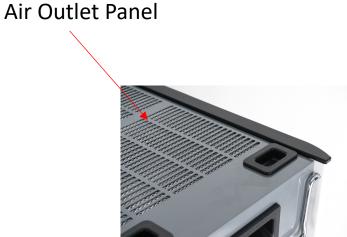

Top **Front Back**





Specification

Model	Generation Z
CADR	1156m3/hr
Coverage	230m2
Noise (dB(A))	<70db
Power (W)	110W
Voltage	220V
Rated Frequency	50Hz
Product dimension	890x530x330mm
Package Dimension	950x570x380mm
Net/ Gross weight	26.5kg/29kg





CADR Performance to ISO14644 m3/hr

Speed Setting	1	2	3	4
Generation Z	174	704	973	1156



Noise – Decibel Volume

Speed Setting	1	2	3	4
Generation Z (dB[A])	37	45	55	60





Before Use - Filter removal

Open the Filter cover
 Pull down on the filter cover handle to open
 Pull the upper cover


Take out the filter and cut open the plastic bag.Ensure there is no plastic remains around the purifier









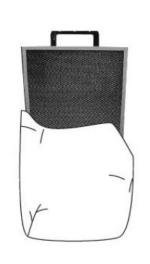









Settings - To ensure optimum performance

- Keep the product at least 120cm from the ceiling
- Keep the product at least 30 cm from the wall

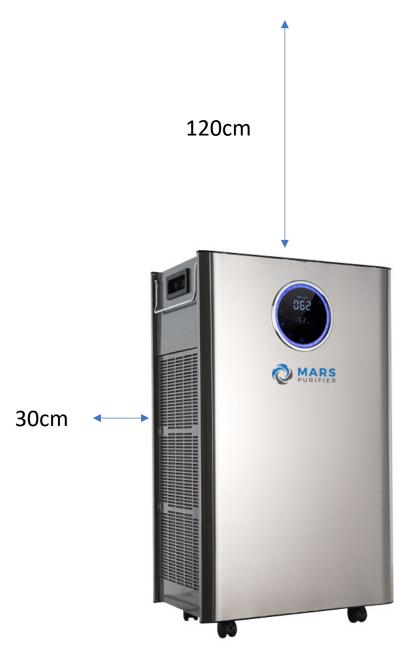



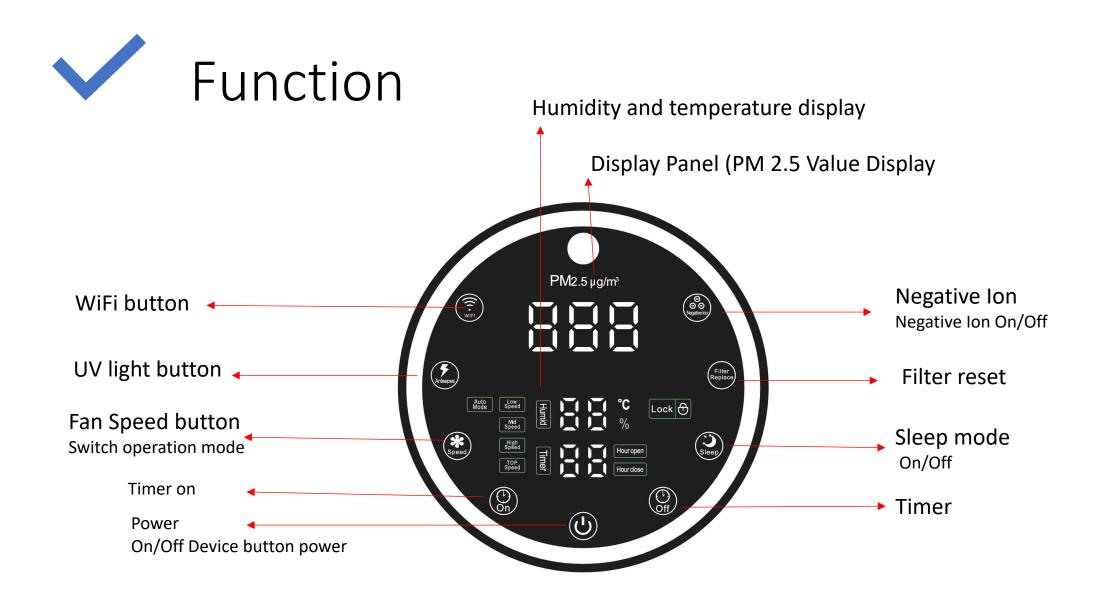





Dust Sensor

This product is equipped with a 'Dust sensor' which can detect pollution particles in the air

- At 'Auto mode' the sensory detects dust, can automatically control the air flow and start to work
- Substances easily detected dust, mite corpses and excrements, pollen, mould spores, tobacco smoke and pet dander etc.







Dust sensor Cleaning


Clean once about every 3 months

1. open the cover plate of the dust sensor_



2. Use a vacuum cleaner to remove dust in the sensor

3. Wipe the lens with a dry cotton swab.

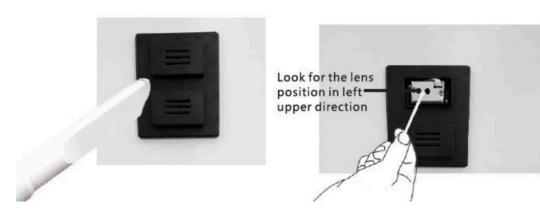





Filter Cleaning

Take out filter and Absorb the larger dust sticking around the filter





Notice

- Be careful not to damage the surface of the filter
- Do not wash the filter
- When removing the filter, if the operator touches the "catalyst deodoriser" inner black side (activated carbon), it is possible to cause dirty hands





Filter Replacement

standard time for replacement is 1 year.

About filter replacement time

The replacement time will vary according to the method of use and the location where the product is set at. When used in places with heavy air pollution, the replacement time will be advanced

Filter replacement warning light

The 'filter replacement' light will flicker when the filter life reaches the limits. When the indicator lights up, it is recommended to replace the filter in order to maintain the performance of the machine

Filter replacement light reset method

Press the 'Filter' button for 5 seconds till the indication light is off then finish resetting.

Notice


In order to absorb and purify harmful gases, the formula activated carbon contained in the filter element may produce smell of slight acidity, which is a normal phenomenon.






Smart phone connection - Tutorial


- 1. Scan QR code to download app
- 2. Touch the on/off button of the machine t start the machine. Then touch the WiFi button for 3-5 seconds. When you hear a buzzer sound, you can release your hand. At this time, the indicator light go the WiFi button flashes (a stable signal near the device shout router)
- 3. Find the installed APP icon, click open, and register
- 4. After complete ting the password setting, you will enter the following page, click "Add Device", select small appliance, select air purifier, and enter the machine distribution network page.

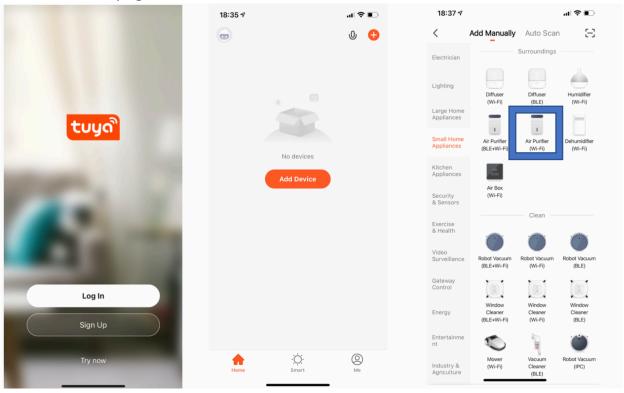




4. Follow the on screen instructions

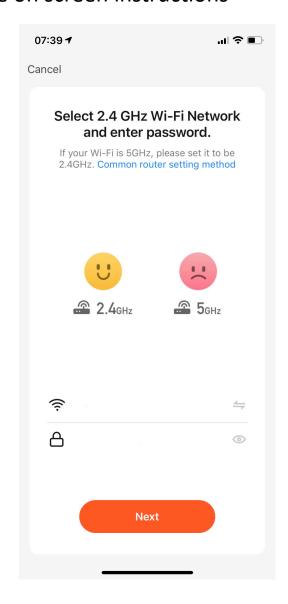

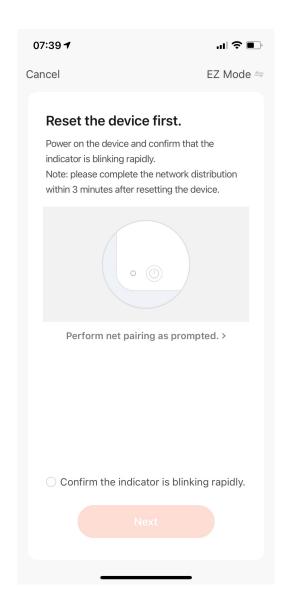

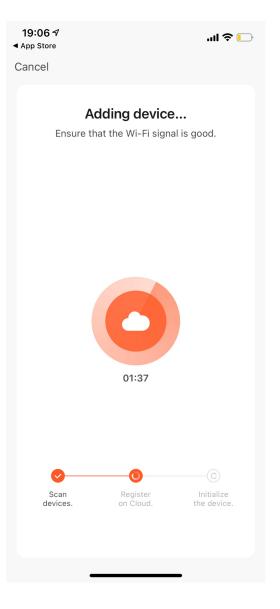



7. After successful network configuration, click "Finish" to enter the main page of device operation







Safety precautions

Handling	 When moving, please make sure the purifier stops running and power plug is pulled out. Hold the firmly on the side of the machine to avoid excessive vibration or falling
Installation	 Do not start the machine in case of danger The device air inlet should be at least 20cm from the wall or any other object.
Power supply precautions	 Do not squeeze, bend or twist the power cord, as the inner cord may be exposed or broken Do not pull the power cord from the adapter when disconnecting the power cord. Do not use inappropriate AC outlet. Do not use the supplied power adapter on any other device
AC power cord	 Use the power adapter and socket as indicated below to avoid fire, electric shock or damage. Please use only the supplied power adapter and do not use any other brand of power adapter Disconnect the adapters power cord from the AC socket before performing maintenance or moving the machine.
In Use	 Stop using the product immediately if there is abnormal noise, peculiar smell, high temperature or the fan is rotating irregularly Do not put fingers or foreign objects into the protective gear, movable parts, air inlet and air outlet. Do not put hair, fabric, etc close to the main engine to avoid getting into or blocking the air inlet and outlet. Do not sit, lean on or tilt the machine. When used with the combustion unit, please ensure proper ventilation to avoid carbon monoxide positioning.
Use limitation	 Do not use the machine in the following situations, otherwise electric shock, fire. And other damage may occur. Unstable places Bathroom, places with high temperature, high humidity and fire prone places.





SYMPTOM	CONFIRM THE ITEMS	HANDLING METHOD	
No exhaust air volume No change air volume The air volume is less than that when it was purchased.	 Check the filter is removed from the plastic bag Check the filter is installed in correct way Check is there any dirt in the filter? It will effect the performance Confirm if the current operation mode is auto mode? Or sleep mode? 	 Remove filter form packing bag Double check that the filter is installed in the correct way Clean the filter, if there is no improvement, it is necessary to replace with a new filter. Please confirm if the operation mode can be changed through the mode switch button 	
Although set to automatic mode, there is no response to dust and smell	1. Is the sensor blocked by walls or obstacles?	 If blocked remove the obstacles, if there is no obstacles clean the 'sensor part' on the back of the machine. 	
Smell	 Is the catalytic deodoriser of the filter new? Is it used in the space where most people smoke or cook? "Catalyst deodorant device" contains activated carbon and so on, sometimes will give out a weak odour. Is it from another room? 	 Due to the use of high performance activated carbon as the raw material, the smell will appear at the beginning of use, usually after a week or so, the initial smell will weaken. The filter has the property that can adsorb odour, so it can store odour temporarily. After running for a short time, the odour will gradually weaken It can also be used after removing the "catalyst deodorant device". There will be no deodorization effect at this time. Please put the catalytic deacrator device in plastic bags for storage. Sometimes it's the smell of a previously used room. Over a short period of time, the odour will slowly diminish. 	
Filter screen cleaning indicator light does not go off	1. Whether the reset of filter screen replacement indicator is implemented	Ease rest the filter screen replacement indicator.	
Leakage of black powder from the filter	1. This is the raw material activated carbon powder.	 Although it is harmless to human body, please place sheets of newspapers etc when replacing the filter. 	
The odour cannot dissipate	 The Deodorisation ability of catalyst deodoriser can be restored to the corresponding degree automatically. Based on the environment in which it is used, it sometimes fails to recover. The odour components (pet, building materials) that are produced continuously at ordinary times cannot be completely removed. 	 Please place the dismantled "catalyst deodorant device" in a well ventilated place for about half a day The smell that is constantly produced in usual time cannot be completely removed, so please take measures such as ventilating the room at the same time. 	





Name	
Address	
Post code	
Contact number	
Distributor	
Sale Date	
Product Name	
Manufacturer Serial Number	

This card should be filled clearly and sent back to our team for registration within one month after purchase.