**WARNING!**

Failure to follow instructions may cause scalding or damage to this product and/or your microwave.

- Always add 200ml/6.5oz of water to the sterilizer before sterilizing.
- Empty sterilizer of residual water before each subsequent use.
- Ensure that unit doesn't boil dry.
- Only use water without any additives.
- Always follow loading instructions and do not overload.
- Do not use bleach or chemical sterilizing solutions or tablets in the sterilizer or on items to be sterilized.
- Do not place metal items in the sterilizer, as this may cause damage to the microwave.
- Always use the appropriate heating time for the power of your microwave unit (see wattage/time table).
- Only sterilize feeding bottles and other items that are suitable for sterilizers. Check the user manual of any item you want to sterilize to ensure it is suitable for microwave sterilizers.
- Ensure that the removable lid is properly fastened to the base before placing the sterilizer in the microwave.
- Let the sterilizer cool down for 10 minutes before you remove it from the microwave.
- Be careful when you move or open the sterilizer, since the water in it may still be hot.
- When removing the sterilizer from the microwave, use caution as it will be hot and will contain hot water. Hold the sterilizer level and place on a hard, heat-resistant surface.
- Do not remove the lid from the sterilizer immediately after sterilizing, as the steam that comes out is very hot. Let the sterilizer cool down, as steam can cause burns.
- When removing the lid, point it away from you to allow steam to escape, as shown in diagram 7.
- Always wash your hands before touching sterilized items.
- Use caution when handling sterilized items since they may be hot.
- After each use, remove any remaining water from the sterilizer.
- Always let the sterilizer cool down before you store it.
- Always keep out of the reach of children.
- Do not expose the sterilizer to extreme heat or direct sunlight.
- Do not place the sterilizer on a hot surface.
- The nanobébé Microwave Steam Sterilizer is intended for household use only.

Before using your sterilizer, please ensure that you read these instructions carefully. Please save these instructions for future reference. This sterilizer is designed for use with nanobébé feeding bottles and accessories.

**More from nanobébé****Bottle Cooler & Travel Pack**

Multi-layered insulated baby bottle cooler.

Safely store and transport breast milk for on-the-go parents!

Flexy Pacifier/Soother

Extra-soft nipple/teat
Lightweight & ergonomic

Breastmilk Bags and Organizer

Fast thawing for optimal nutrient preservation

Smart Warming Bowl

Quick & even warming
Optimal for breastmilk

Compact Drying Rack

Fast, hygienic drying
Stores flat

Breastmilk Bottle

Designed to preserve
breastmilk nutrients

How to use your Microwave Sterilizer



STERILIZES
IN ONLY
4MIN

Made in Israel for
Nutrits Ltd.
P.O. Box 7239
Tel Aviv, Israel 6107121
G25-00045-19-2

Customer service:
nanobebe.com

Sterilizing is a must to ensure your baby's feeding accessories are safe and germ-free. Our microwave steam sterilizer eliminates 99.9% of bacteria in just 4 minutes. With a closed lid, its contents remain sterile for 24 hours, so you can wake up to bottles that are sterile and ready for use.


- Fits most microwaves and bottles
- Eliminates 99.9% of household bacteria
- Holds bottles, accessories, and breast pump parts
- With closed lid, contents remain sterile for 24 hours
- BPA free



Before using your sterilizer, please ensure that you read these instructions carefully. Please save these instructions for future reference. This sterilizer is designed for use with nanobébé feeding bottles and accessories.

PARTS GUIDE

- Removable lid
- Removable perforated tray
- Sterilizer base
- 3 x long pegs
- 3 x short pegs

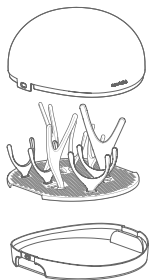

BEFORE FIRST USE:

Before you use the sterilizer for the first time, clean it thoroughly as described below.

1. Remove the lid and pour 200ml/6.5oz of water into the base through the perforated tray (diagram 2). Note: if the base does not contain enough water, the sterilizer may be damaged in the microwave.
2. Replace the lid on the sterilizer and push down the clips to lock it into place (diagram 5).
3. Place the sterilizer in the microwave. Ensure that the microwave is clean and dry before you start sterilizing. Note: if you have a combination microwave oven, ensure that the oven or grill is switched off and has cooled down before you put the sterilizer in it.
4. Select the appropriate microwave wattage and time (see wattage/time table) and let the microwave operate.
5. Allow to cool for 10 minutes with open microwave door before removing the sterilizer from the microwave. It is recommended that oven gloves be used to prevent scalding.
6. Pull open the clips (diagram 5) and remove the lid, pointing it away from you (diagram 7).
7. Pour out any remaining water and rinse the base and tray thoroughly.

USING THE NANOBÉBÉ MICROWAVE STEAM STERILIZER:

1. Wash all bottles and feeding accessories in hot soapy water or in a dishwasher (top rack only) to remove any milk residue. Separate all parts for washing and disassemble the screw ring and nipple/teat before sterilizing.
2. Remove the lid and pour 200ml/6.5oz of water into the sterilizer base through the perforated tray, as shown in diagram 2.
3. Rest bottle body and base on pegs (diagram 4).
4. Hang bottle caps, screw rings, nipples/teats, pacifiers/soothers, breast pump adapters and other accessories on pegs (diagram 3).
5. Place the lid over the sterilizer base and push down the clips to lock the lid into place (diagram 5).
6. Place the sterilizer in the microwave, select the appropriate wattage according to the wattage/time

wattage	full power	cooling time
up to 850w	8 minutes	10 minutes
850-1000w	6 minutes	10 minutes
1000w+	4 minutes	10 minutes

table, and let the microwave operate.

7. When the microwave cycle has ended, open the microwave door and allow to cool for 10 minutes before removing the sterilizer from the microwave. It is recommended that oven gloves be used to prevent scalding.
8. Pull open the clips (diagram 5) and remove the lid, pointing it away from you (diagram 7).
9. Remove the sterilized items.
10. If the sterilizer is left unopened, its contents will remain sterile for up to 24 hours.
11. Drain, rinse and pat dry all sterilizer parts to prevent scale buildup.

CLEANING THE NANOBÉBÉ MICROWAVE STEAM STERILIZER

Clean the lid, the perforated tray, pegs and the base after every use, to prevent scale buildup. Never use abrasive cleaning agents or aggressive liquids such as bleach to clean the sterilizer.

1. Clean the sterilizer parts in hot water with some dish washing detergent or in the dishwasher
2. After cleaning, dry all parts thoroughly and store in a clean, dry place.

FLEXY PACIFIER/SOOTHER

Calm and soothe your newborn with the nanobébé Flexy Pacifier/Soothe, The pacifier/soother babies love from day one.

- Extra-soft nipple/teat for baby's comfort
- Lightweight, ergonomic design helps keep the pacifier/soother in baby's mouth
- One-piece silicone construction adheres to the American Academy of Pediatrics' guidelines for newborns
- Unique nipple/teat promotes healthy oral development
- BPA free



Before using your nanobébé Flexy Pacifier/Soothe, please ensure you read these instructions thoroughly. Please keep this instructions leaflet for future reference as it includes important information.

For your child's safety

WARNING! Do not tie pacifier/soother around child's neck as it presents a strangulation danger.

- Never attach ribbons or cords to a pacifier/soother as your child may be strangled by them.
- Inspect carefully before each use, especially when the child has teeth. Pull the pacifier/soother in all directions. Throw away at the first signs of damage or weakness. For safety and hygiene replace the pacifier/soother after 4 weeks of use.
- Do not leave pacifier/soother in direct sunlight or near a source of heat, or leave in disinfectant for longer than recommended as this may weaken the nipple/teat.
- Do not store in direct sunlight or near a source of heat.
- Do not store with or allow to come into contact with harsh chemicals.
- The display case is not intended to be used for sterilization or storage and should be disposed of correctly.

CLEANING AND STERILIZATION

- Suitable for sterilization in the nanobébé Microwave Steam Sterilizer.
- Before first use sterilize in the nanobébé Microwave Steam Sterilizer or place in boiling water for at least 5 minutes.
- After sterilization, please allow pacifier/soother to cool for at least 5 minutes and remove any trapped water before use by squeezing the nipple/teat. This is to ensure hygiene.
- Clean before each use.
- Wash in hot soapy water and rinse in clean water or clean in a dishwasher (top shelf only).
- Do not clean or allow to come into contact with solvents or harsh chemicals, damage could result.
- Do not sterilize the display case.

STORAGE AND USE

- Never dip nipple/teat in sweet substance or medication. Your child may get tooth decay.
- Replace the pacifier/soother after 4 weeks, for safety and hygiene reasons.
- In the event that the pacifier/soother becomes lodged in the mouth, DO NOT PANIC; it cannot be swallowed. Remove from the mouth with care, as gently as possible.