
## RUTGERSOM



Rutgerson tape folder manual - English



## How to use the Rutgerson Tape Folder 1650

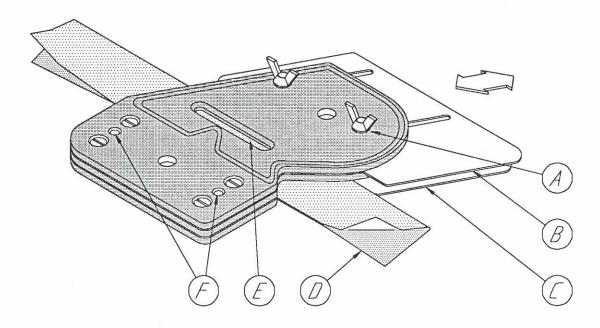

The Rutgerson Tape Folder greatly increases efficiency for the time consuming operation of creasing tapes.

- 1. Loosen the two wing nuts (A). Push the two stainless plates (B) + (C) upwards.
- 2. Fold/crease half a metre of the tape (D) you want to fold, exactly in the middle.
- 3. Insert the folded/creased tape into one of the slots. Use the narrow slot for tapes lighter than 280 grams/sqm, and the wider slot for tapes heavier that 280 grams/sqm. The fold should point towards the stainless plate. (If necessary you can feed the tape with a scissor or spike through the slot (E)).
- 4. Push the stainless plate down against the folded tape. Tighten the wing nuts again.
- 5. Pull the tape straight through the tape folder.

A tip: It is a lot easier to do this if you place the folder in a vice or bolt on to a bench either vertically or horizontally, through the holes (F) to suit your need.

Phone: +46 303 20 66 50, Fax: +46 303 608 89

www.rutgerson.se