

S·detec®


가스누설점검액 (에스·디텍®)

S-LOK®
VALVE & FITTINGS

특징

- S·detec® 가스누설점검액으로 손이 닿기 어려운 부분의 누설도 검사를 할 수 있습니다.
- 유연한 튜브는 접근하기 어려운 부분의 검사가 편리하도록 길이가 연장됩니다.
- 수직면에서의 사용 및 미세한 누설도 기포작용이 발생하여 누설을 확인 할 수 있습니다.
- 편리한 사용, 무독성, 불연성, 부식성이 없습니다.
- 검사 후 얼룩 없이 깨끗하게 증발합니다.
- 주요성분 : Distilled water, glycerine and others
- 사용온도 : -2°C to 93°C (27°F to 200°F)

사용안내

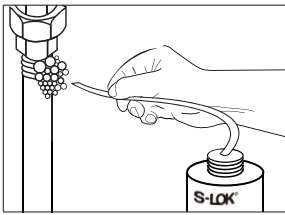


M-SLD-02

튜브 끝을 시험하고자 하는 연결부에 위치 시킵니다.
S·detec 용기를 바로 세운 상태에서 손으로 눌러 용액을 연결부에 도포합니다.
시험부위에서 누설이 발생하면 거품이 형성 됩니다.

Ordering Information

주문번호	용량	튜브길이
M-SLD-01	3.8 L (1 gal)	-
M-SLD-02	240 mL (8 oz)	30 cm (12 inch)

제품비교

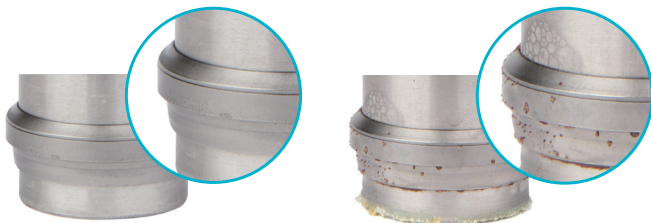

S·detec®	Detergent
부식이 발생하지 않음	부식 발생
얼룩이 남지 않음	얼룩이 남음

경고

에스디텍 가스누설점검액은 외부 표면에만 사용 하십시오.

Headquarter

부산시 강서구 녹산산단361로 27

TEL : +82-51-899-6733

FAX : +82-51-899-6789

E-mail : sales@ehansun.co.kr

overseas@ehansun.co.kr

NEW



M-SLD-01



M-SLD-02



www.slok.co.kr


S·detec®

Liquid Gas Leak Detectors

Feature

- **S·detec®** liquid gas leak detectors detect gas leaks in hard-to-reach areas.
- Flexible tube extends for hard-to-reach areas.
- Detects even on very small leaks and vertical surfaces.
- Easy to use, non-toxic, non-corrosive, non-flammable and free of chlorine.
- **S·detec®** liquid evaporates cleanly after testing.
- Composition : Distilled water, glycerine and others
- Temperature range : -2°C to 93°C (27°F to 200°F)

Instructions

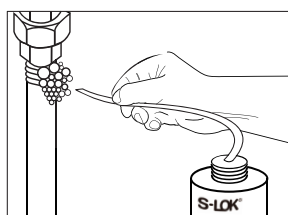


M-SLD-02

Hold S·detec tube end at a pressurized connection. Squeeze upright bottle to apply a stream of S·detec liquid leak detector. Seek for bubbles which indicates leakage.

Ordering Information

Ordering Number	Container Size	Flexible Tube Length
M-SLD-01	3.8 L (1 gal)	-
M-SLD-02	240 mL (8 oz)	30 cm (12 inch)

Product comparison

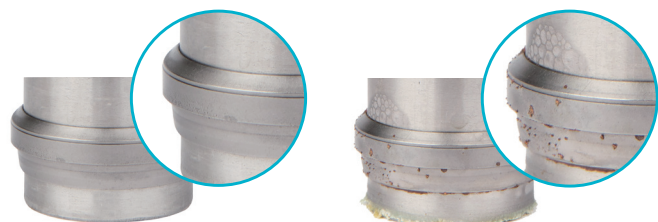

S·detec®	Detergent
Non-corrosive	Corrosion
Dry clean without stains.	Stains and clots are formed.

NEW



M-SLD-01



M-SLD-02

Warning

Use S·detec liquid gas leak detectors only on external surfaces.

Headquarter

27 Noksansandan 361-ro,
Gangseo-gu Busan, 46754, Rep. of KOREA

TEL : +82-51-899-6733

FAX : +82-51-899-6789

E-mail : sales@ehansun.co.kr

overseas@ehansun.co.kr



www.slok.co.kr