

SHOWER TENT USER MANUAL

SKU: SH-TENT-SY20

V1.1



ABOUT US

Founded in 2018, the San Hima brand stands for passion and enthusiasm for exploring the spectacular nature of the great outdoors. Since its inception, the trusted solutions and proven designs that San Hima offers to the market have made adventure and travelling flexible and enjoyable!

Based in Australia, San Hima has under its umbrella a wide selection of outdoor solutions, including cargo systems, vehicle protection accessories and tow & trailer parts, that are designed to help you carry your gear wherever your passion takes you and boost your performance when conquering the peaks!

At San Hima, we have wild souls and we are committed to designing products that are tough enough to take on any adventures and at the same time, making them safe and easy to use. These values in our conviction are what drive us to make innovations. Since pursuit your passion shouldn't be complicated.

Live the Peak, Conquer the Everest, San Hima is your brand of choice!

SAFETY INSTRUCTIONS

- In windy conditions it is highly recommended not to erect the shower tent as personal injury and / or property damage may occur.
- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your shower tent.
- Do not set up your shower tent under trees because of potential lightning strikes or falling tree limbs in inclement weather.
- Do not cut or modify the shower tent or mounting accessories.
- Do not exceed the vehicle manufacturer's weight limits.
- Do not use damaged or excessively worn products.
- Keep exits clear.
- Remain cautious when pegs are in use.
- Keep an eye out for children when the shower tent is in use.
- Stow away the shower tent before operating the vehicle.



KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHOWER TENT.

- Do not operate any devices which burn fuel inside the shower tent.
- Do not smoke in or near the shower tent.
- Do not cook inside the shower tent.
- Keep a look out for any airborne burning embers that may come in contact with the tent. Keep a fire extinguisher or bucket of water nearby.

IMPORTANT FACTS



Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside of your shower tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside the shower tent. It is NOT LEAKAGE through the fabric. It can be minimized by removing wet clothing from your shower tent and by providing good ventilation through the shower tent.

CARE AND MAINTENANCE

- To extend the life of your tent, it is recommended to pack it up when not in use.
- When it is time to pack up, check that fabric is dry and free from dirt and debris, then reverse the set up process.
- Do not pack pegs inside your shower tent. Use the provided accessory storage bag.
- If your shower tent requires cleaning, we recommend to use lukewarm soapy water and a clean sponge to wipe down the material. Do not use abrasive cleaners or bleach.

PACKAGE CONTENTS

- Shower Tent with Travel Bag x1
- L Brackets x2
- Sandwich Plates x2
- Elastic Hanging Rope x1
- Wrenches x2
- Mounting Hardware Kit x1
- Shower Hook x1
- Accessory Storage Bag x1
- User Manual x1

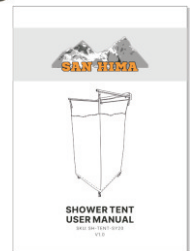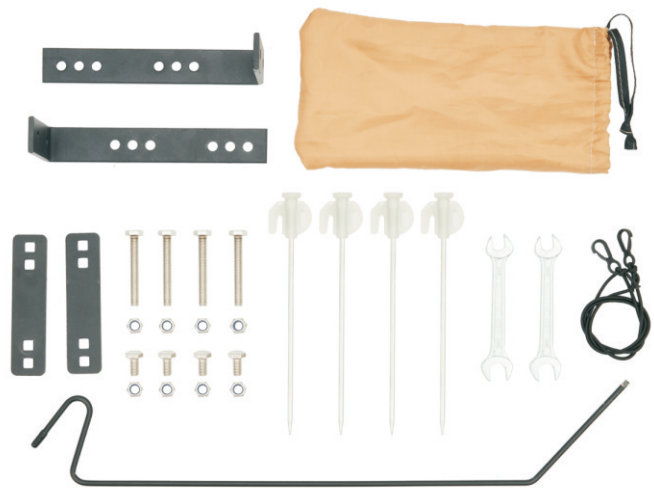

SPECIFICATIONS

Open Size (Shower Tent)	94cm x 94cm x 176cm
Closed Size (Storage Bag)	105 x 13 x 13cm
Product Weight	7.3kg
Shower Tent	
Material	420D Ripstop Oxford
Water Column	2,000mm
UV Resistant	Yes
Travel Bag	
Material	650D PVC
Water Column	8,000mm
UV Resistant	Yes
Frame	
Material	6063-Grade Aluminium
LED Light	
Rated Voltage	5V
Rated Power	10W
Lumens	867lm
Connector	USB Type A
L Brackets & Sandwich Plates	
Material	Powder Coated Steel

INSTALLATION

STEP 1

(1) If you mount your shower tent to a platform rack, you won't need to use the sandwich plates or the longer bolts.

Instead, use T-bolts (not included) and bolt the L brackets directly to the rack.

Note: Please position the brackets to clear your vehicle or your trailer body panels.



(2) If you mount your shower tent to the mesh of a roof rack, the L brackets go on top of the mesh and the sandwich plates underneath. Use the long bolts to sandwich them together.



STEP 2

Slot the shorter bolts into the back of the aluminium frame, and slide the bolts to align with the holes on the L brackets.



STEP 3

Insert the bolts through the holes on the L brackets. Add and tighten the nuts on the back. Tip: If you are doing this by yourself, tie a strap around one end of the travel bag, so you can focus on the other end without it falling down.



SETUP

STEP 1

Unzip the shower tent bag and release the straps, allowing the fabric to be released.



STEP 2

Move the arms outwards and lock in place.



STEP 3

Unfold the fabric and allow it to hang. You can adjust the straps at the top to achieve the required height from the ground.



STEP 4

Peg out the four corners and tension the straps as required.



STEP 5

Plug the USB Type A connector of the LED light strip to the USB Type A port of your power source.





WARRANTY

San Hima warrants that each shower tent that is purchased while this Warranty is in effect will be free from defects in materials and workmanship for a period of 1 year from the date of receiving the product from San Hima or its authorized distributor/dealer. If it is believable to be defective during the 1-Year Warranty Period, San Hima will, at its option, replace it with the same or similar product, or issue a refund for the defective San Hima product. And San Hima will pay for the cost of shipping or transportation of a defective component. This warranty terminates if a Purchaser transfers the product to any other person. And please retain your purchase receipt for Your records.

Please ensure that the San Hima shower tent should be installed and set up in accordance with warnings and instructions listed in the user manual, and should be used for the purpose for which it was designed.

Any and all warranty coverage does not cover: normal wear and tear, incorrect installation or setup, damages as a result of failure to follow information in the user manual, unusual, improper or negligent use or misuse, using the San Hima shower tent other than for the purpose for which it was originally designed, improper repair or maintenance, alteration, abuse, acts of nature, terrorism, vandalism or adverse conditions.

If further information or investigation is required or if the claim does not meet the requirements under our warranty, San Hima'll let you know.