


FREEMOTION®

BACK EXTENSION

Model No. ES815.0

Serial No. _____

Write the serial number in the space above for reference.

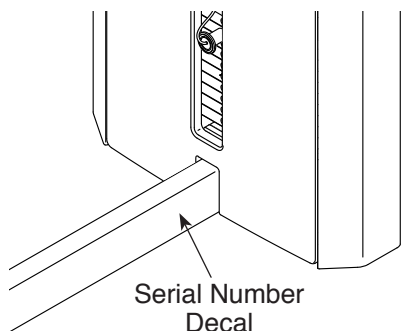

QUESTIONS?

If you have questions, or if parts are damaged or missing, please see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

OWNER'S MANUAL

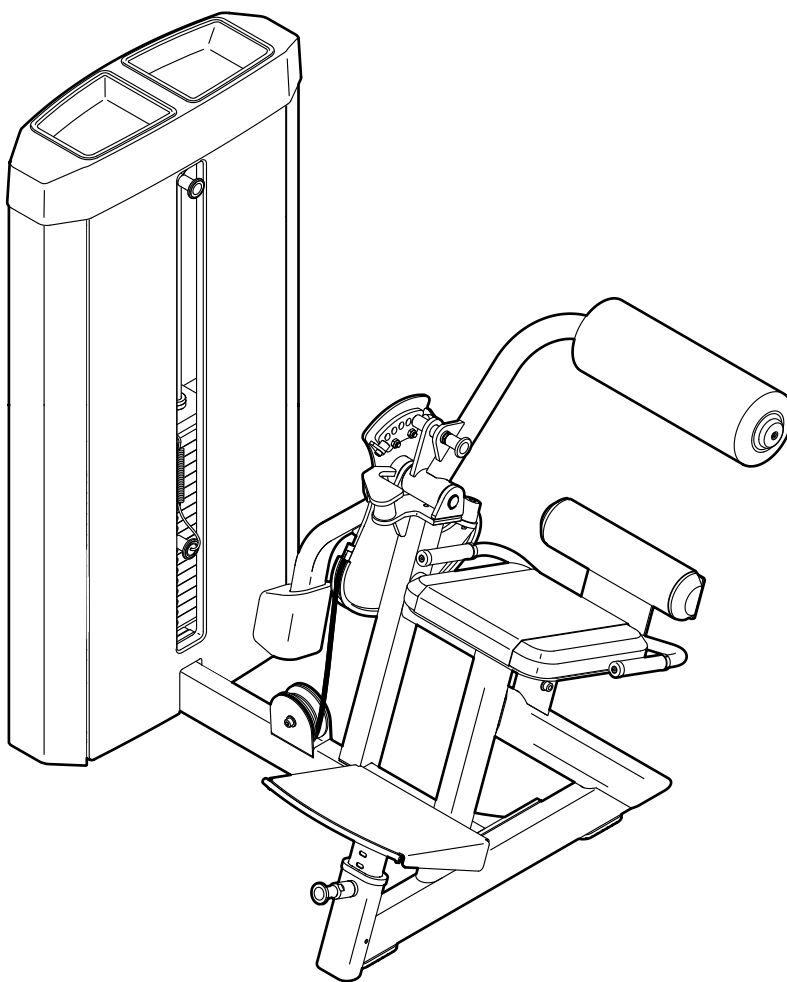


TABLE OF CONTENTS

IMPORTANT PRECAUTIONS.....	3
WARNING DECAL PLACEMENT	4
BEFORE YOU BEGIN.....	5
PART IDENTIFICATION CHART.....	6
ASSEMBLY	7
ADJUSTMENT	17
MAINTENANCE AND TROUBLESHOOTING.....	18
CABLE DIAGRAM.....	20
PART LIST.....	21
EXPLODED DRAWING.....	22
HOW TO CONTACT CUSTOMER CARE.....	Back Cover
LIMITED WARRANTY.....	Back Cover

FREEMOTION is a registered trademark of ICON Health & Fitness, Inc.
FORMULA 409 is a registered trademark of The Clorox Company.
SIMPLE GREEN is a registered trademark of Sunshine Makers, Inc.
Teflon is a registered trademark of E. I. du Pont de Nemours and Company.



IMPORTANT PRECAUTIONS

⚠️ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your strength equipment before using your strength equipment. Freemotion Fitness assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. It is the responsibility of the owner to ensure that all users of the strength equipment are adequately informed of all precautions, have read and understood all warning and caution labels, and are informed of how to use the strength equipment properly.
2. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
3. Use the strength equipment only as described in this manual.
4. It is the responsibility of the owner to ensure that there is enough space around the strength equipment for the intended exercise.
5. Use the strength equipment only on a level surface. Cover the floor beneath the strength equipment to protect the floor.
6. Anchor the strength equipment to the floor with the anchor strap (see page 5) where required or where possible to provide maximum stability.
7. All users of the strength equipment should be instructed to report any injury or strength equipment irregularity to facility staff immediately.
8. Keep children under age 16 and pets away from the strength equipment at all times.
9. The strength equipment is designed to support a maximum user weight of 350 lbs. (159 kg).
10. Always wear athletic shoes for foot protection while exercising.
11. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength equipment while it is in use.
12. Make sure that the weight pin is completely inserted into one of the weights.
13. Check the cable, cable connection, and pulleys before each use of the strength equipment. Make sure that all parts are properly tightened. Replace any worn parts immediately.
14. Make sure that the cable remains on the pulleys at all times. If the cable binds while you are exercising, stop immediately and make sure that the cable is on the pulleys and that nothing is interfering with the cable or the pulleys.
15. Over exercising may result in serious injury or death. If you feel faint, if you become short of breath, or if you experience pain while exercising, stop immediately and cool down.

WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). If a decal is missing or illegible, see the back cover of this manual and request a free replacement decal. Apply the decal in the location shown. Note: The decal(s) may not be shown at actual size.

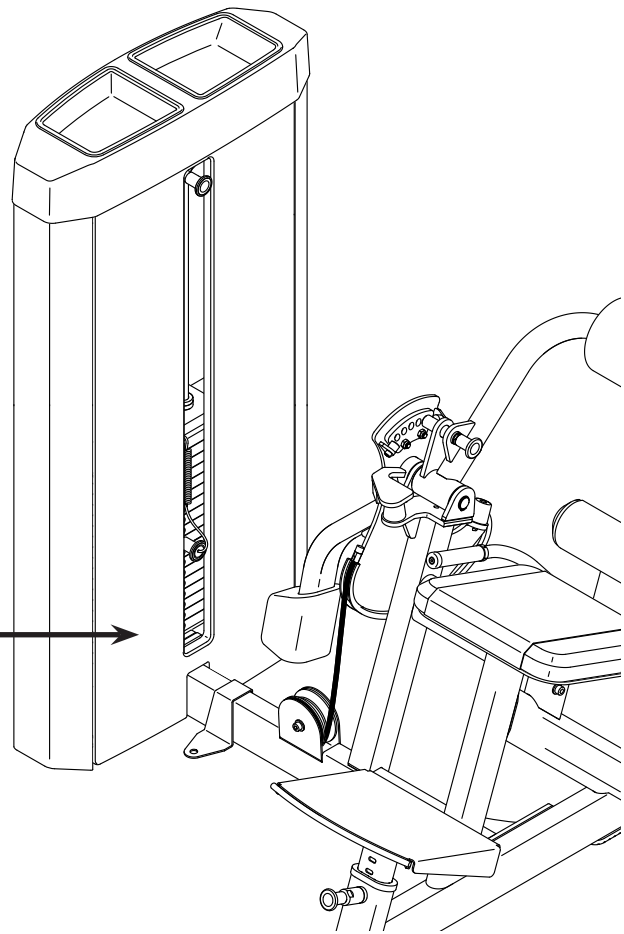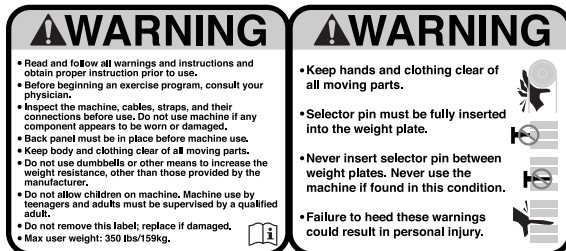


BEFORE YOU BEGIN

Thank you for selecting the FREEMOTION® BACK EXTENSION strength equipment. With natural motion, the BACK EXTENSION strength equipment enables you to work your body's muscle groups more effectively and efficiently.

For your benefit, read this manual carefully before using the strength equipment. If you have questions after reading this manual, please see the back cover

of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

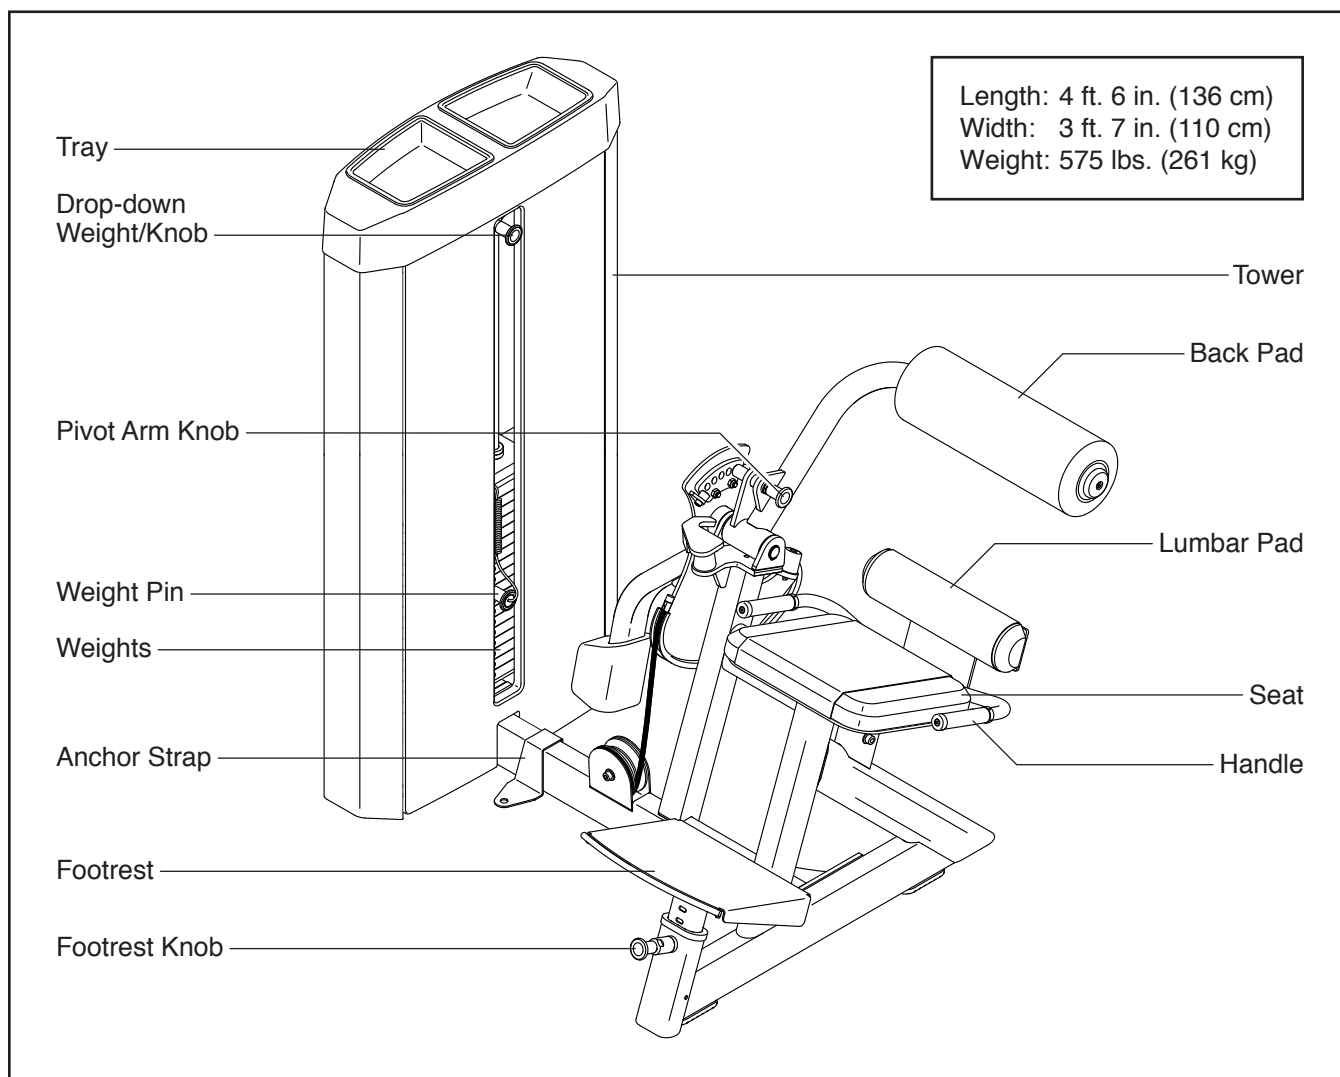


PART IDENTIFICATION CHART


Use the drawings below to identify small parts used for assembly. The number in parentheses by each drawing is the key number of the part, from the PART LIST near the end of this manual. The number following the parentheses is the quantity needed for assembly. **Note: If a part is not in the hardware kit, check to see whether it has been preattached.**




M5 x 10mm
Screw
(75)–8




M6 x 12mm
Screw
(36)–2



M6 x 20mm
Screw
(63)–1




M8 x 30mm Screw
(52)–6

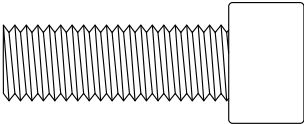


M10 x 30mm Screw
(39)–8




M10 x 70mm Screw/Bolt (41)–2

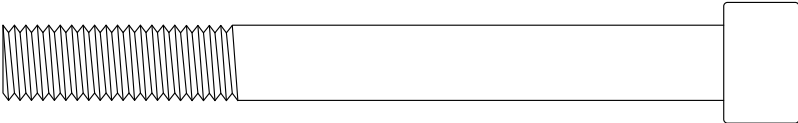


M10 x 95mm Screw (70)–2



M6 Washer
(46)–2

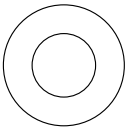

M8 Washer
(45)–6

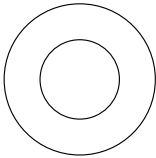

M10 Washer
(43)–12

ASSEMBLY


- Assembly requires two persons.
- Because of its weight and size, assemble the strength equipment in the location where it will be used. Make sure that there is enough clearance around the strength equipment.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.
- For help identifying small parts, see page 6.

- The following tools (not included) are required for assembly:

one adjustable wrench



one Phillips screwdriver




a set of metric hex keys



Assembly may be more convenient if you have a set of wrenches. To avoid damaging parts, do not use power tools.

1. Attach the Inner Frame (7) to the Outer Frame (29) with four M10 x 30mm Screws (39), two M10 x 70mm Screws (41), and six M10 Washers (43); **do not tighten the Screws yet.**

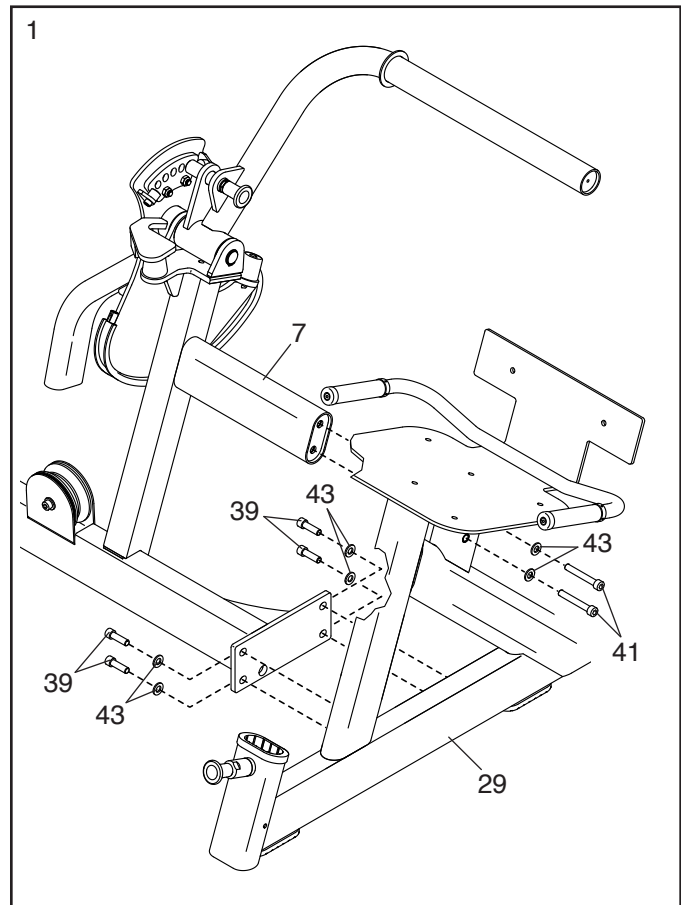


2. **See the inset drawing.** Loosen the Stop Screw (82) in the Outer Frame (29); **it is not necessary to remove the Stop Screw.**

Orient the Footrest (61) as shown.


Next, pull the Footrest Knob (49), insert the Footrest (61) into the Outer Frame (29), and release the Footrest Knob into one of the adjustment holes in the Footrest. **Move the Footrest upward and downward slightly to make sure that the Footrest Knob is engaged in one of the adjustment holes.**

Then, tighten the Stop Screw (82).

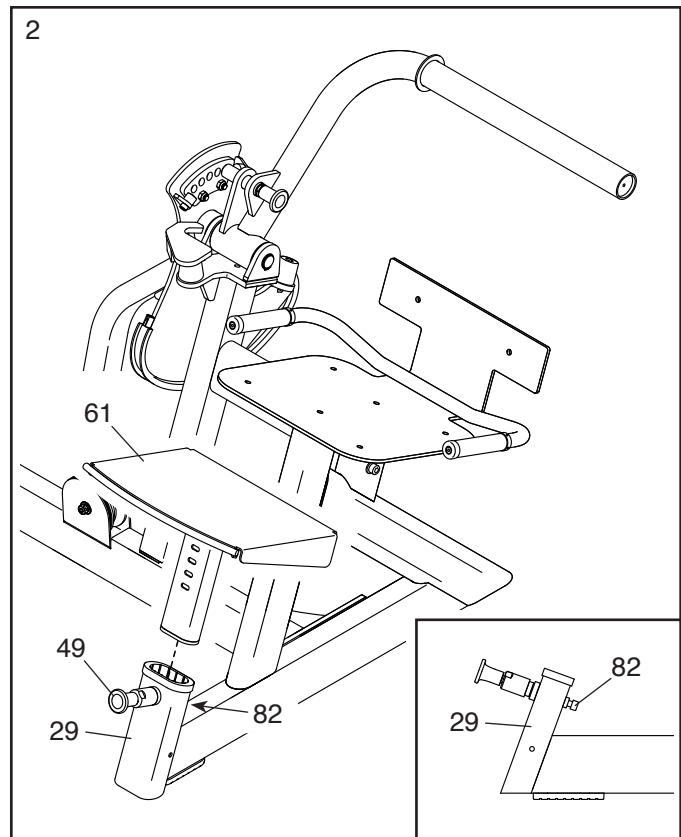


3. Slide the Back Pad (37) onto the Pivot Arm (50).


Then, attach the Pad Cap (80) to the Pivot Arm (50) with an M6 x 20mm Screw (63).

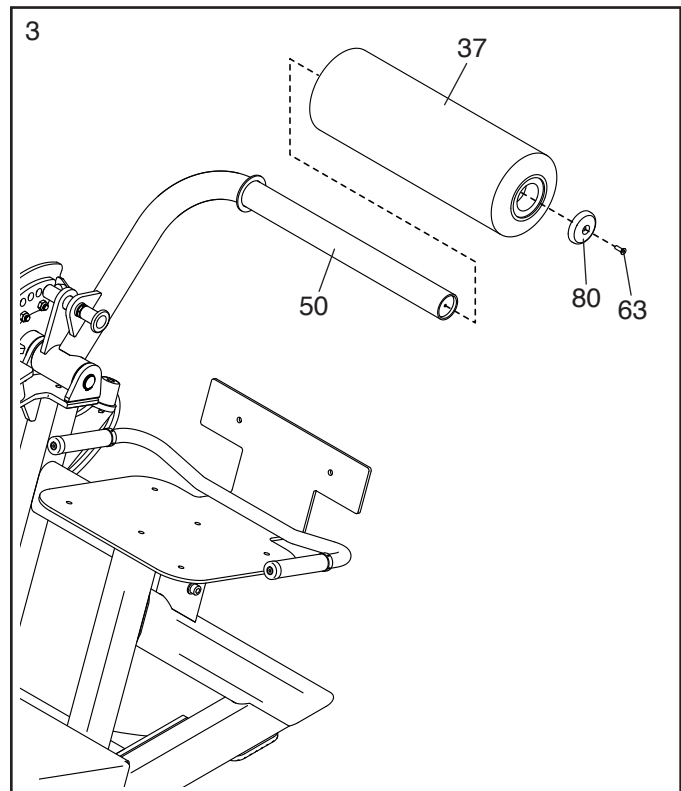

4. Attach the Seat (62) to the Outer Frame (29) with four M8 x 30mm Screws (52) and four M8 Washers (45); **start all four Screws, and then tighten them.**

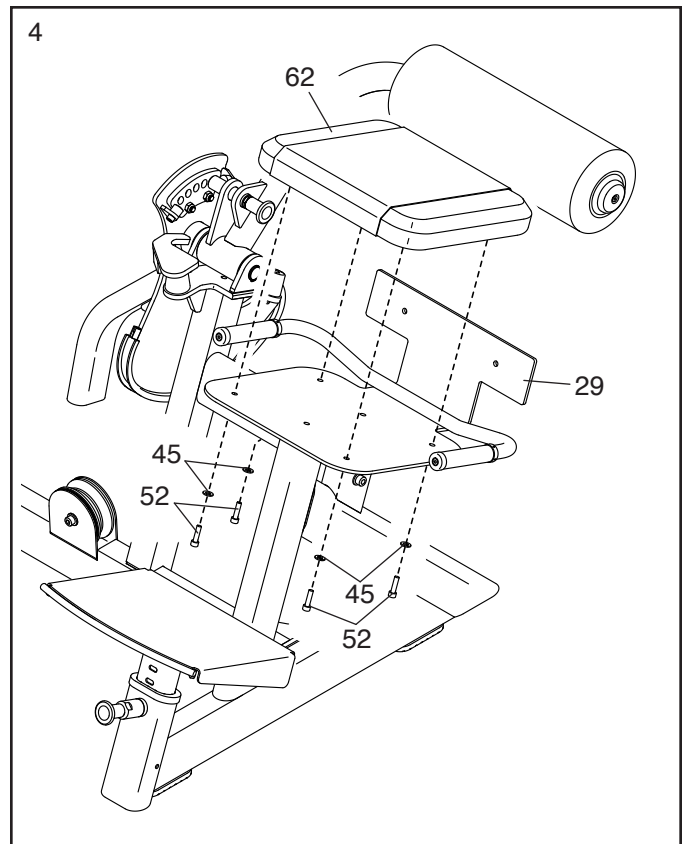

5. Attach the Lumbar Pad (51) to the Outer Frame (29) with two M8 x 30mm Screws (52) and two M8 Washers (45).

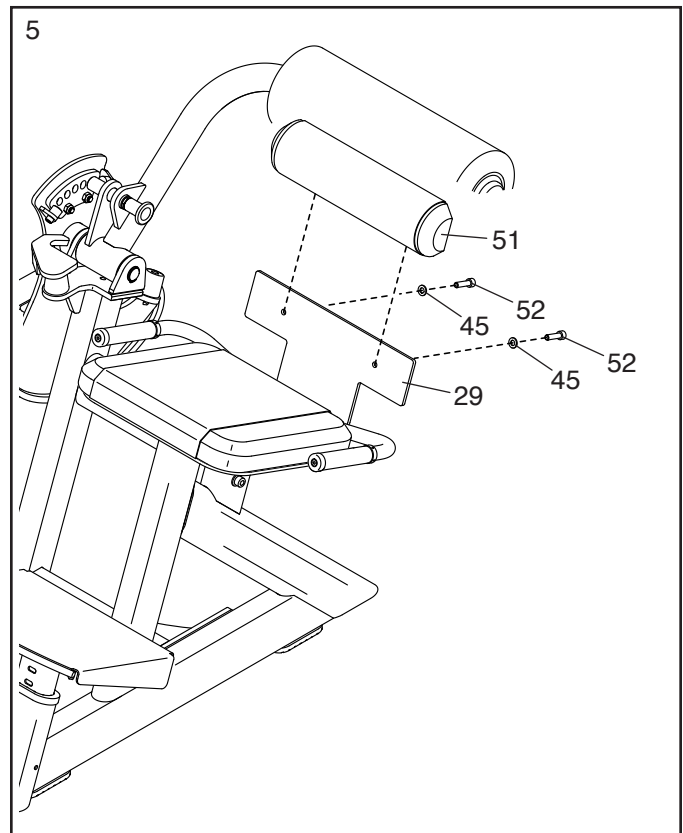


6. Remove the indicated parts (42, 41, 43, 28) from the pulley bracket on the Inner Frame (7).

Next, **orient the Cable (31) so that the threaded end (A) is in the indicated position**, and insert the Cable through the Inner Frame (7) as shown.


Then, attach the V-pulley (28) that you just removed inside the pulley bracket on the Inner Frame (7) with the M10 x 70mm Bolt (41), the two M10 Washers (43), and the M10 Locknut (42) that you just removed.

See the inset drawing. Press the indicated end of the Cable (31) into the socket on the Cam (58).

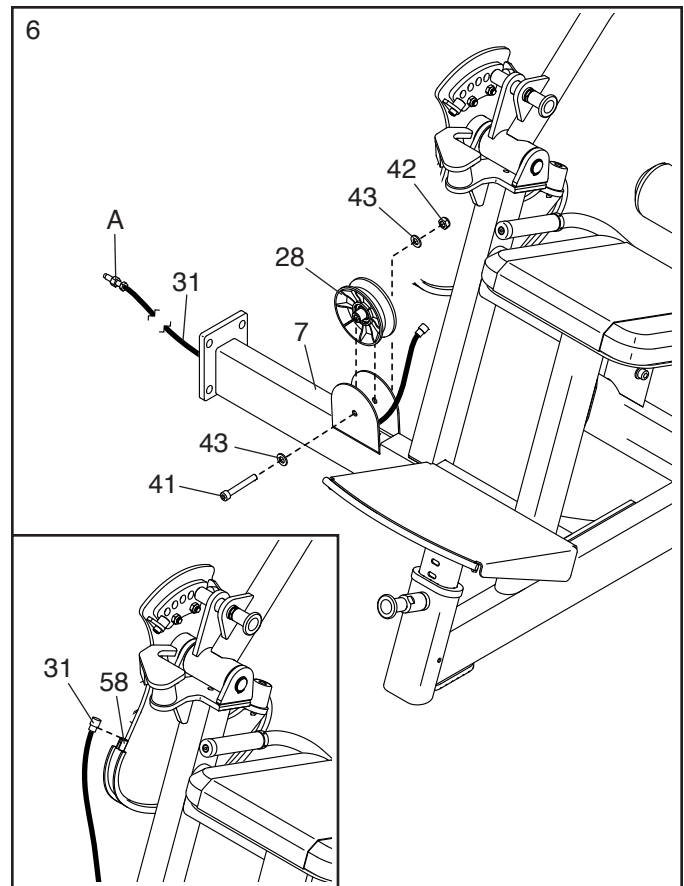

7. Orient the Tower Frame (1) as shown, and set it near the Inner Frame (7). **Have a second person hold the Tower Frame to prevent it from falling until you complete step 8.**


Then, remove the indicated parts (39, 43, 27, 42, 38, 24) from the Tower Frame (1).

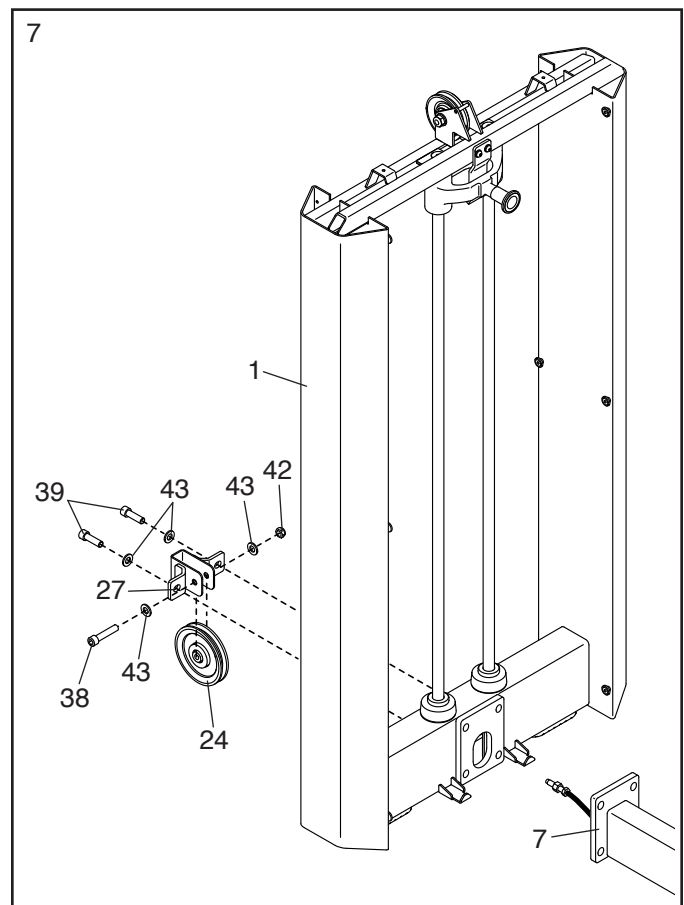

8. Insert the Cable (31) through the Tower Frame (1) as shown.

Then, attach the Inner Frame (7) to the Tower Frame (1) with four M10 x 30mm Screws (39) and four M10 Washers (43); **start all four Screws, and then tighten them.**


See step 1. Tighten the four M10 x 30mm Screws (39) and the two M10 x 70mm Screws (41).

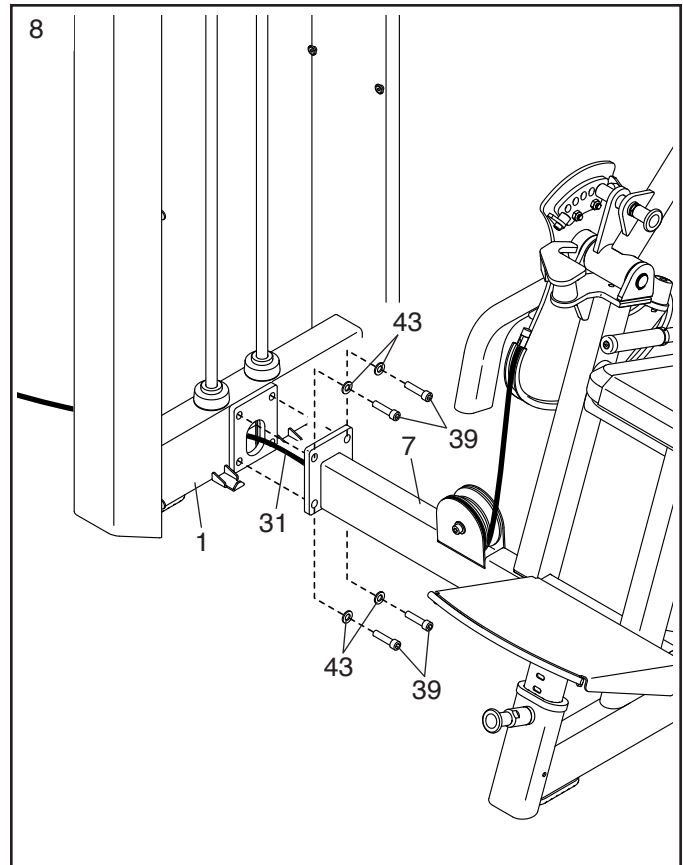

9. Route the Cable (31) upward through the Pulley Bracket (27).

Next, attach the Large Pulley (24) that you removed in step 7 inside the Pulley Bracket (27) with the M10 x 50mm Bolt (38), the two M10 Washers (43), and the M10 Locknut (42) that you removed in step 7.

Then, attach the Pulley Bracket (27) to the Tower Frame (1) with the two M10 x 30mm Screws (39) and the two M10 Washers (43) that you removed in step 7.

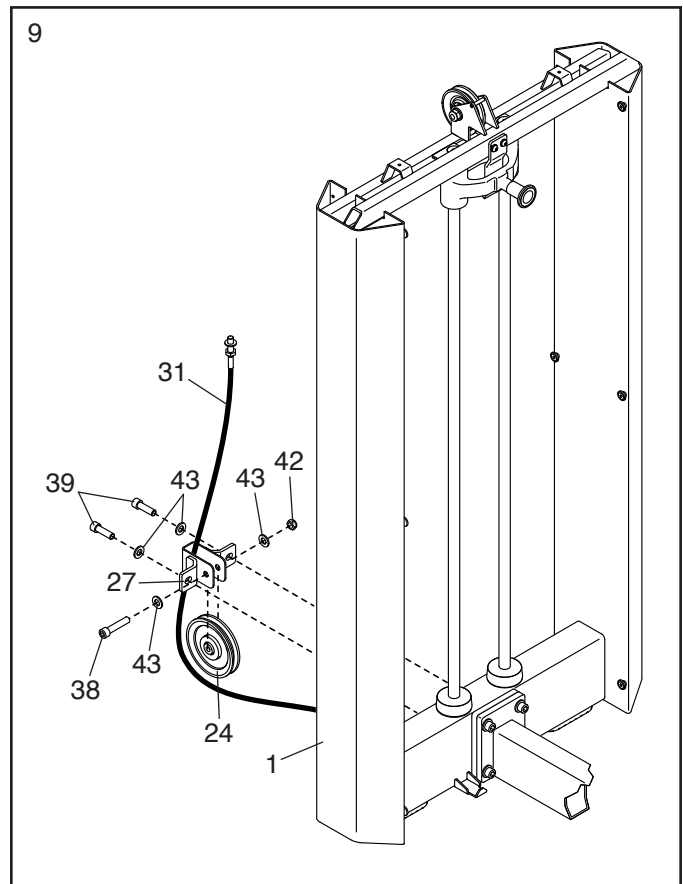


10. Pull the Drop-down Weight Knob (20) and slide the Drop-down Weight (10) downward on the Weight Guides (30).

Next, loosen the two M8 x 20mm Set Screws (19) a few complete turns; **it is not necessary to remove the Set Screws.**

Look under the top of the Tower Frame (1) and remove the two E-clips (73) from the two Weight Guide Bushings (18).


Next, have a second person hold the Weight Guides (30). Lift the Weight Guide Bushings (18) out of the Tower Frame (1).

Then, tip the upper ends of the Weight Guides (30) toward the Inner Frame (7), and slide the Drop-down Weight (10) upward off the Weight Guides.

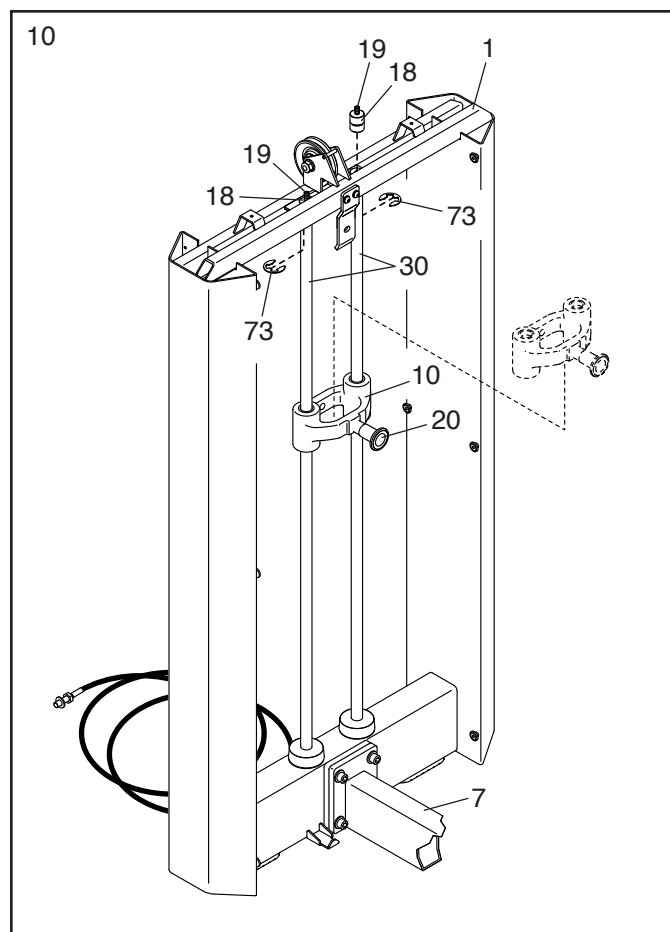

11. Look at the decals (B) on the seven 20-pound Weights (47) and the eleven 10-pound Weights (8), and find the decal that has the **largest** number on it. Orient that Weight so that the decal is facing the Inner Frame (7), and slide the Weight onto the Weight Guides (30).

Repeat this step with the remaining 20-pound Weights (47) and 10-pound Weights (8).

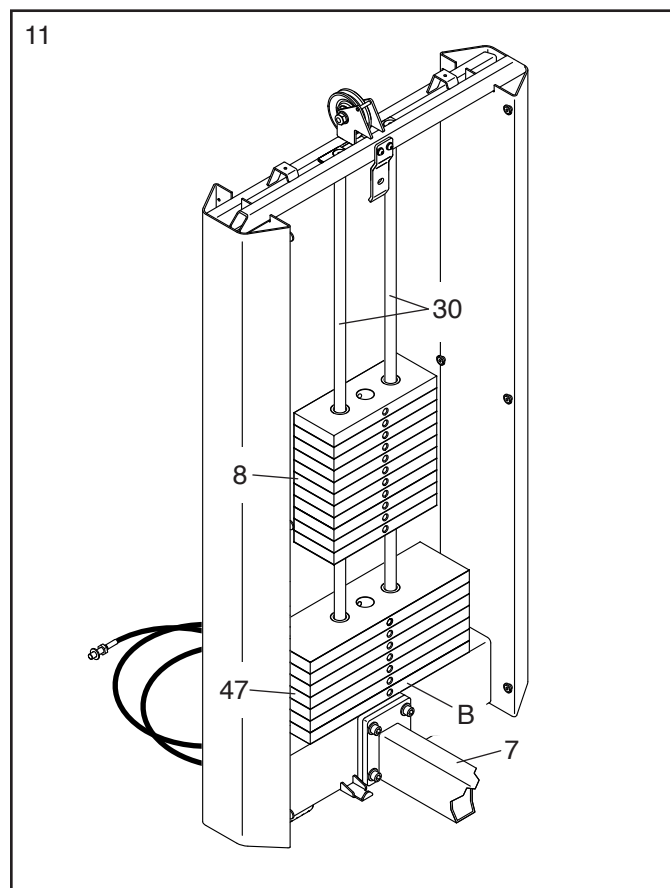


12. Orient the Top Weight (9) and the Drop-down Weight (10) as shown; **make sure that the Weight Pin (12) on the Top Weight is on the indicated side.**

Slide the Top Weight (9), the two Upper Weight Bumpers (16), and the Drop-down Weight (10) onto the Weight Guides (30).

Next, insert the two Weight Guide Bushings (18) into the Tower Frame (1), and slide them onto the upper ends of the Weight Guides (30).

Next, attach the two E-clips (73) to the Weight Guide Bushings (18).

Then, tighten the two M8 x 20mm Set Screws (19) into the Weight Guide Bushings (18).

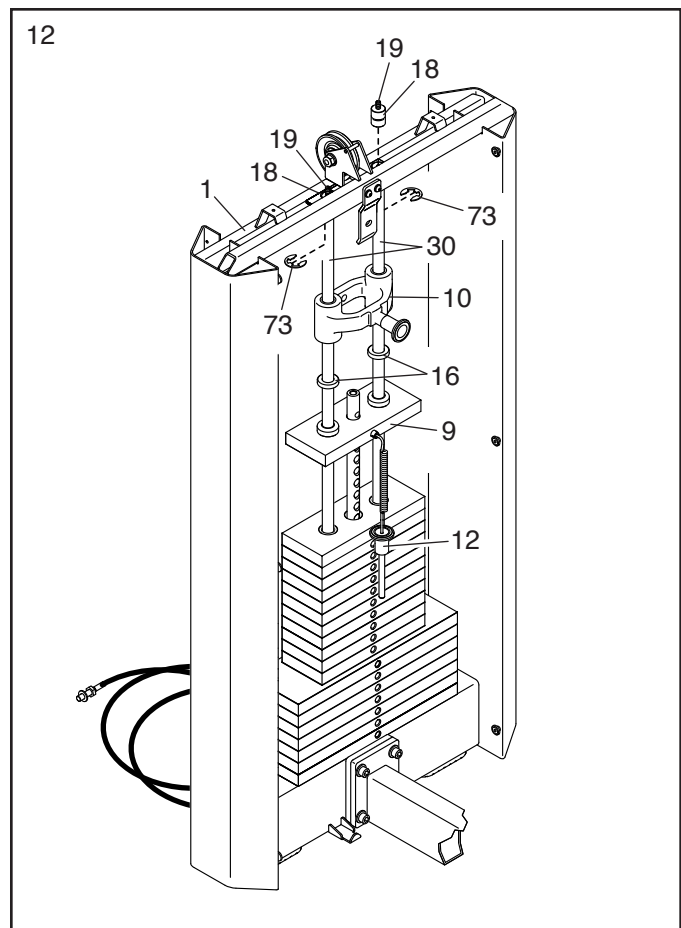


13. Remove the indicated parts (42, 38, 43, 23) from the pulley bracket on the Tower Frame (1).

Next, route the Cable (31) through the pulley bracket and downward through the opening in the center of the Tower Frame (1).

Next, attach the Small Pulley (23) that you just removed inside the pulley bracket with the M10 x 50mm Bolt (38), the two M10 Washers (43), and the M10 Locknut (42) that you just removed. **Make sure that the Cable (31) is between the Small Pulley and the rod (C) on the pulley bracket.**


Then, slide the Drop-down Weight (10) upward until the Drop-down Weight Knob (20) snaps into the hole in the Latch Bracket (26). **Make sure that the Drop-down Weight Pin (not shown) is engaged in the hole.**

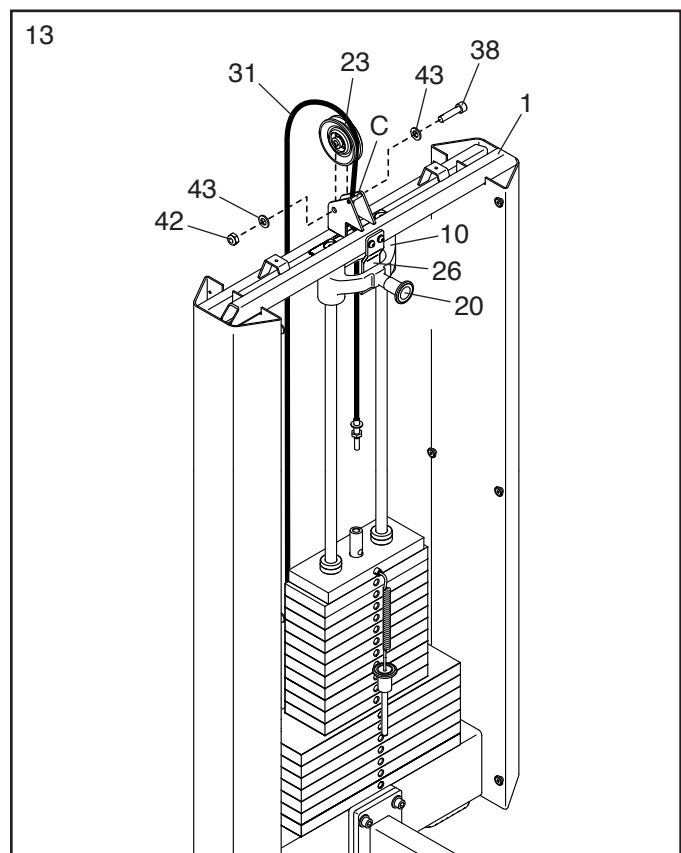


14. Finger tighten the jam nut (D) as far as possible onto the end of the Cable (31).

Next, tighten the end of the Cable (31) into the Weight Selector (11) until the Top Weight (9) is lifted off the 10-pound Weights (8). Then, loosen the end of the Cable until the Top Weight just rests on the 10-pound Weights.

Then, tighten the jam nut (D) on the Cable (31) against the Weight Selector (11).

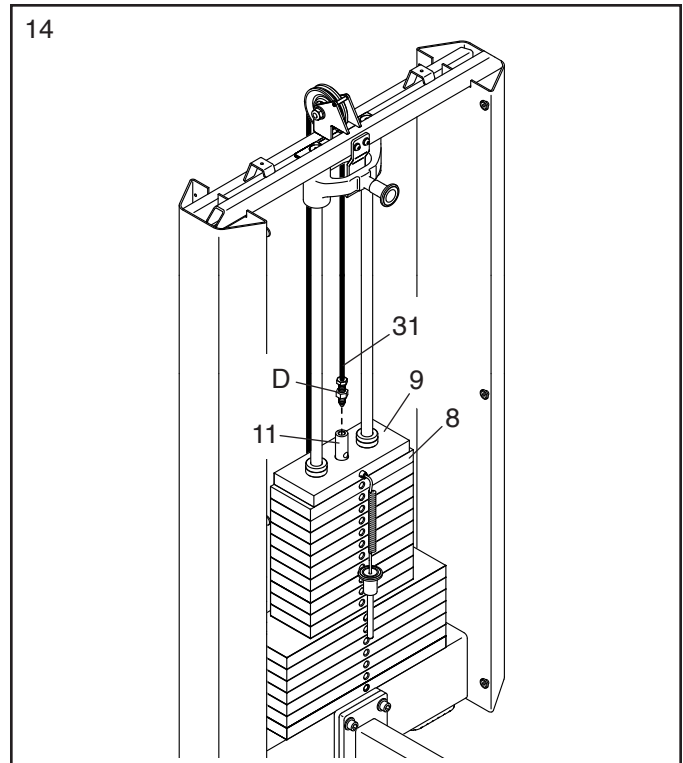


15. Attach the Counterweight (77) to the arm on the Cam (58) with two M10 x 95mm Screws (70) and two M10 Washers (43).

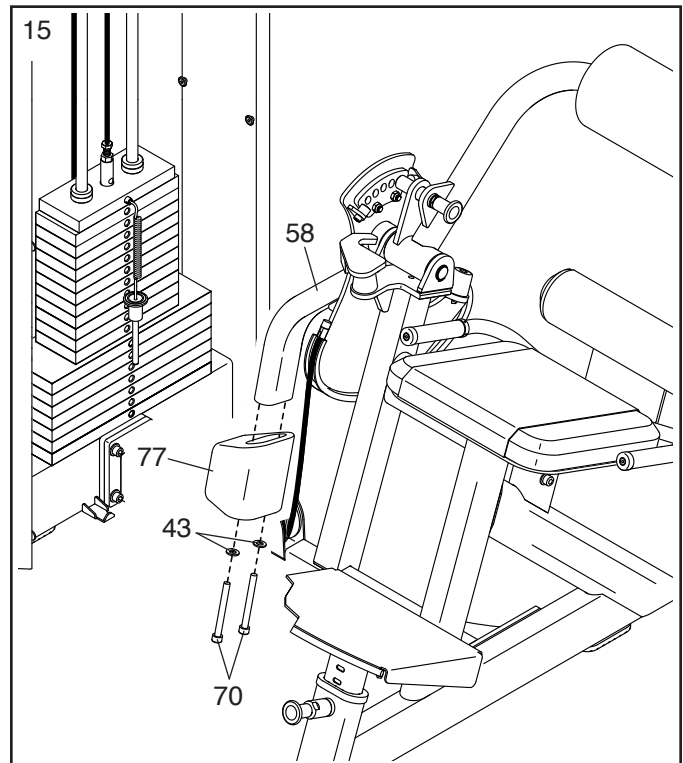

16. Identify the Rear Cover (6).


Attach a Cover Bracket (76) to each side of the Rear Cover (6) with two M5 x 10mm Screws (75) as shown.

Attach the other two Cover Brackets (76) to the Front Cover (5) in the same way.

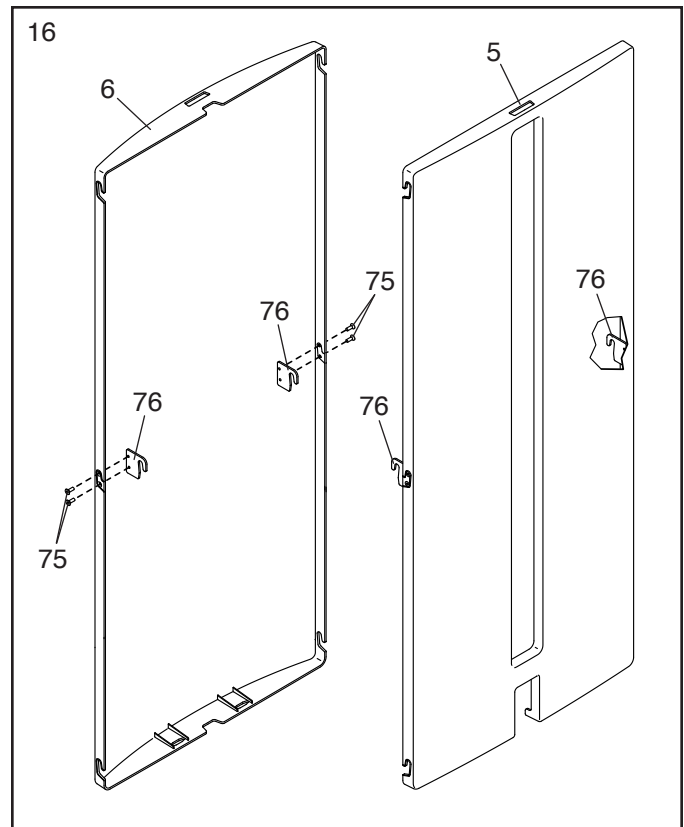

17. Hook the Front Cover (5) onto the indicated six Cover Mounts (32) on the Tower Frame (1).


Attach the Rear Cover (6) to the Tower Frame (1) in the same way.

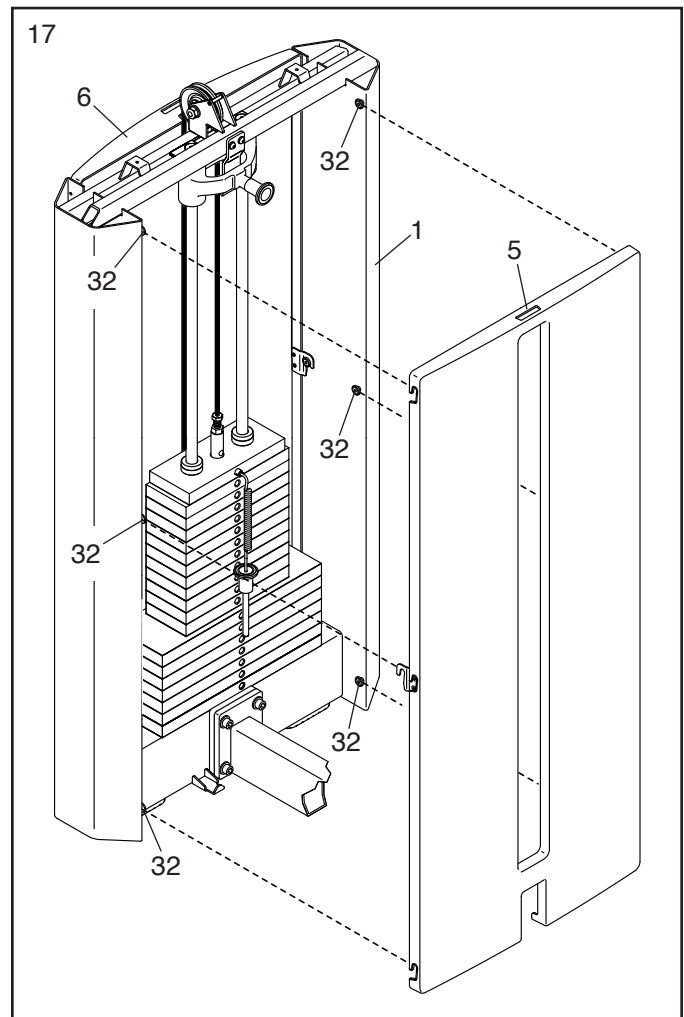

18. Remove the Right and Left Trays (3, 4) from the Tower Cap (2).

Next, orient the Tower Cap (2) as shown, and attach it to the Tower Frame (1) with two M6 x 12mm Screws (36) and two M6 Washers (46).

Then, insert the Right and Left Trays (3, 4) into the Tower Cap (2).

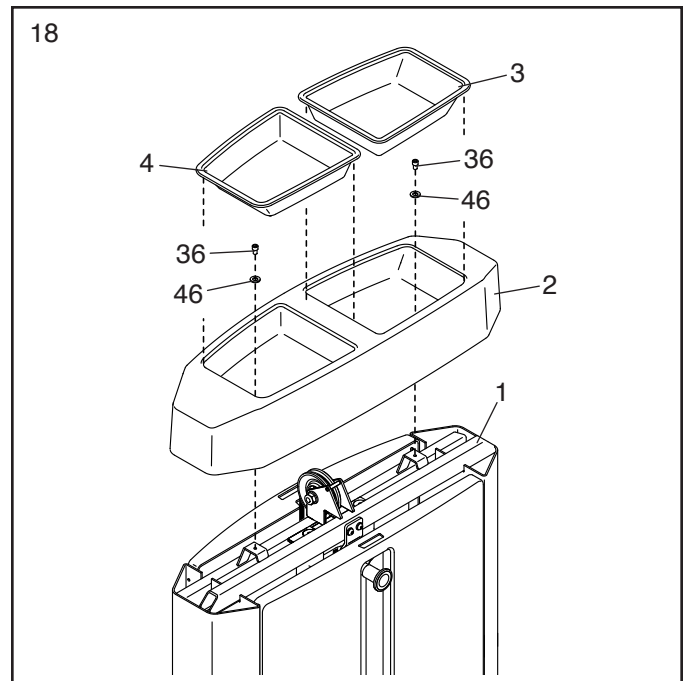

19. **Make sure that all parts of the strength equipment are properly tightened.** To protect the floor or carpet from damage, place a mat under the strength equipment.

ADJUSTMENT


This section explains how to adjust the strength equipment. **Make sure all that parts are properly tightened each time the strength equipment is used. Replace any worn parts immediately.**

ADJUSTING THE RESISTANCE

To change the amount of resistance, insert the weight pin (A) into the desired weight (B). **Make sure that the weight pin is fully inserted. Note: To use only the top weight, insert the weight pin into the hole (C) in the weight selector above the top weight.**

To add 5 lbs. (2.25 kg) of resistance, pull the indicated knob (D) and lower the drop-down weight (E) onto the weight stack.


When you are not using the drop-down weight (E), slide it upward until the knob (D) snaps into the hole in the latch bracket (F). Move the drop-down weight upward and downward slightly to make sure that the knob is fully engaged in the hole.

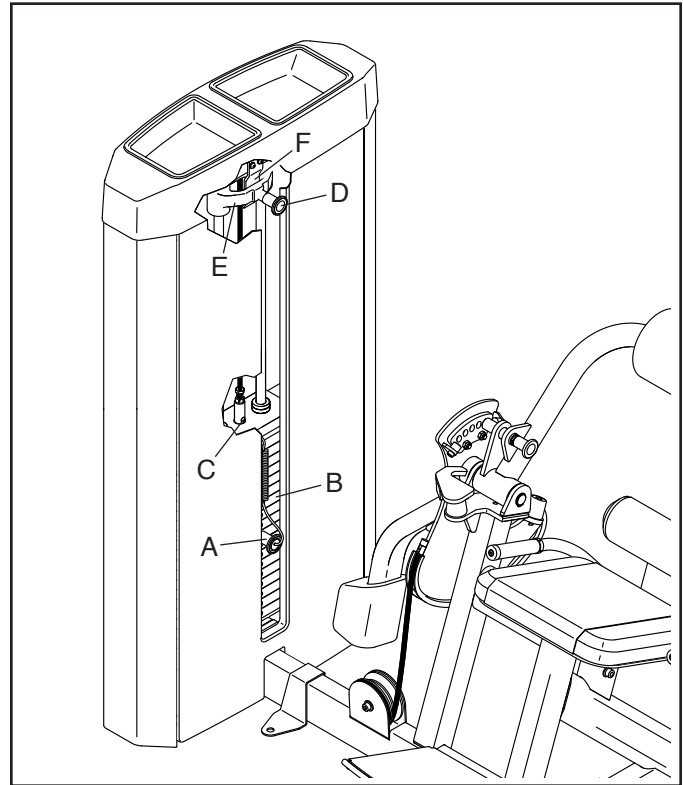

ADJUSTING THE BACK PAD AND THE FOOTREST

To adjust the starting position of the back pad (G), pull the pivot arm knob (H), pivot the back pad forward or backward, and then release the pivot arm knob. **Move the back pad forward and backward slightly to make sure that the pivot arm knob is engaged in one of the adjustment holes in the selector plate (I).**

To adjust the height of the footrest (J), pull the footrest knob (K), raise or lower the footrest, and then release the footrest knob. **Move the footrest upward and downward slightly to make sure that the footrest knob is engaged in one of the adjustment holes in the footrest post (L).**

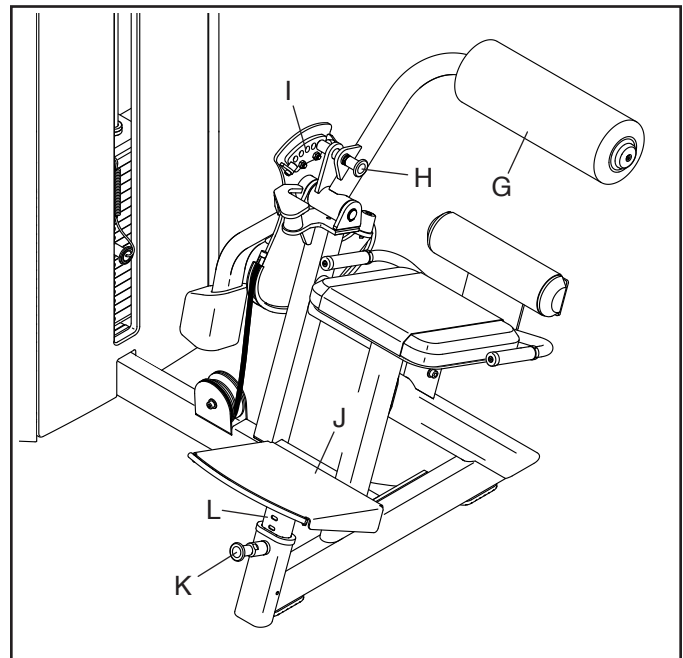

MAINTENANCE AND TROUBLESHOOTING

For optimal performance of the strength equipment and to reduce the chances of injury to users, you must perform preventive maintenance on a regular basis. Instruct all personnel to perform the procedures described in this section. Personnel must also record and report any accident. To maintain the strength equipment's warranty, use only FREEMOTION parts for repair or replacement. If there are any questions or concerns, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

DAILY MAINTENANCE

General Cleaning

Clean the strength equipment using a soft cloth dampened with mild soap and warm water. If necessary, use a soft bristle brush with the cleaning solution.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

Difficult Stains

Spray the stain with a non-abrasive household cleaner such as FORMULA 409®, SIMPLE GREEN®, or a similar product. Rub the stained area gently and then let the cleaning solution sit for a few minutes.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

If necessary, repeat these steps using a soft bristle brush.

Optional Method for Difficult Stains

Rub the stained area gently using a soft cloth dampened with rubbing alcohol.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

CAUTION: Follow the directions and the safety precautions of the manufacturer of each cleaning product used. Freemotion Fitness and its vendors cannot be held liable for injuries or damage resulting from the use or misuse of cleaning products. **IMPORTANT:** When using any cleaning product, try it first in an unnoticeable place to ensure that there is no damage to the material. Do not use abrasive cleaners; strong cleaners; or solvents such as lacquer thinner, kerosene, gasoline, or similar liquids. Such substances may scratch the strength equipment, damage plastic parts and decals, or cause other damage.

WEEKLY MAINTENANCE


Hardware

Check all nuts, bolts, and screws, and tighten them if necessary. **IMPORTANT:** All cushions have dense plywood supports with tee-nuts that are used to attach the cushions to the strength equipment. Because the tee-nuts are held by the plywood, they will not withstand the torque that standard nuts will. When tightening the bolts or screws securing a cushion, turn them only until they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future. Note: Your strength equipment may not have cushions.

Cable Inspection

Check the entire length of the cable by slowly performing one repetition on the strength equipment. Inspect the cable on the exterior of the strength equipment and the cable on the interior. Run your fingers along the cable, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn cable that should be replaced:

- A. a torn or split sheath that exposes the cable
- B. a kinked or severely bent cable
- C. a curled or twisted sheath
- D. a stretched sheath with a thinning cross-section

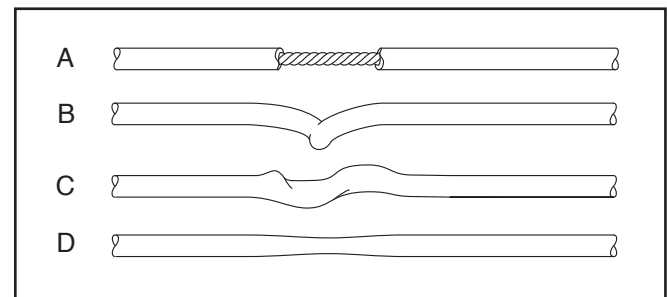


Cable Adjustment

To determine whether the cable is properly adjusted, slowly raise and lower the top weight by performing one repetition.

If the cable is loose, the top weight will not be lifted immediately when you begin the repetition.

If the cable is too tight, the top weight will not rest on the weight beneath it when you complete the repetition. It may also be difficult to insert the weight pin into the weights.

If the cable is too loose or too tight, loosen the jam nut (A) on the end of the cable (B) attached to the weight selector (C). Next, tighten the end of the cable into the weight selector until the top weight (D) is lifted off the weight beneath it. Next, loosen the end of the cable until the top weight just rests on the weight beneath it. Then, tighten the jam nut against the weight selector.

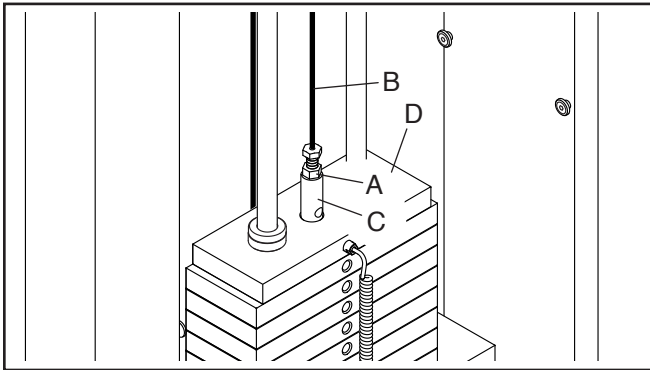

MONTHLY MAINTENANCE

Grips


Check the grips and replace them if needed.

Weight Guide Lubrication

Clean and lubricate each weight guide by wiping it with a soft cloth containing 10W-40 or 10W-30 lightweight motor oil. Apply only a light coating over the entire length of the weight guide. **Do not use TEFLON®-based lubricants.**

CABLE DIAGRAM

The diagram at the right shows the correct route of the cable. Use the diagram to make sure that the cable is correctly routed. **If the cable is not correctly routed, the strength equipment will not function properly and damage may occur.**

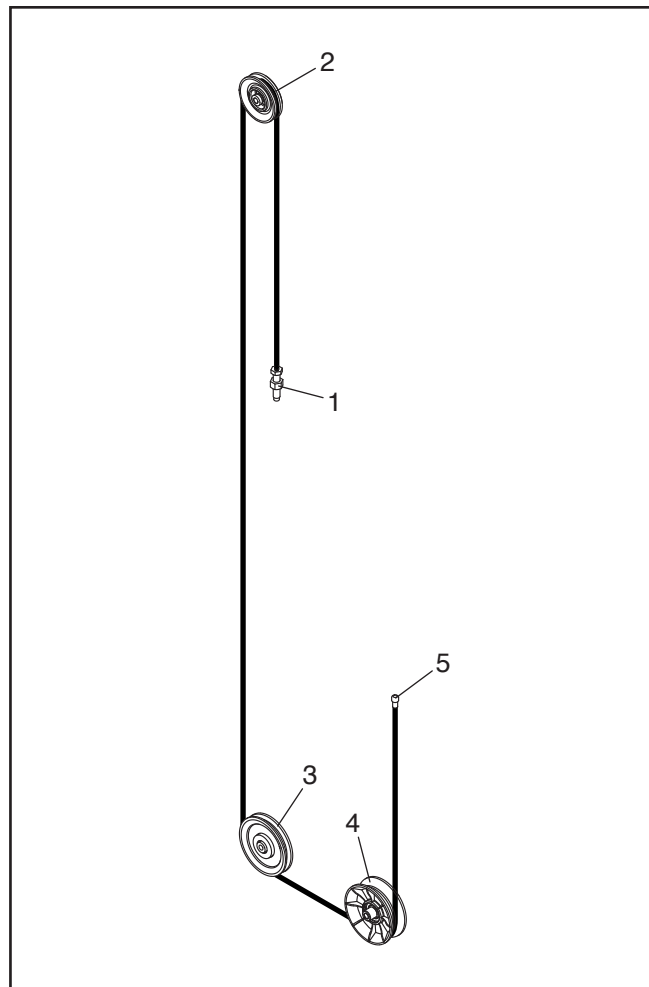

PART LIST


Model No. ES815.0 R1019A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Tower Frame	44	8	M8 x 25mm Screw
2	1	Tower Cap	45	14	M8 Washer
3	1	Right Tray	46	6	M6 Washer
4	1	Left Tray	47	7	20-pound Weight
5	1	Front Cover	48	1	Axle
6	1	Rear Cover	49	1	Footrest Knob
7	1	Inner Frame	50	1	Pivot Arm
8	11	10-pound Weight	51	1	Lumbar Pad
9	1	Top Weight	52	6	M8 x 30mm Screw
10	1	Drop-down Weight	53	1	Seat Cover
11	1	Weight Selector	54	2	Handgrip Collar
12	1	Weight Pin	55	2	Handgrip Cap
13	2	Lower Weight Bumper	56	3	Plastic Washer
14	2	Weight Guide Cap	57	2	Handgrip
15	1	Roll Pin	58	1	Cam
16	2	Upper Weight Bumper	59	2	Large Bumper
17	4	Copper Bushing	60	1	Selector Plate
18	2	Weight Guide Bushing	61	1	Footrest
19	2	M8 x 20mm Set Screw	62	1	Seat
20	1	Drop-down Weight Knob	63	2	M6 x 20mm Screw
21	1	Drop-down Weight Spring	64	4	Bearing
22	1	Drop-down Weight Pin	65	4	M4 x 3mm Set Screw
23	1	Small Pulley	66	2	M6 x 30mm Screw
24	1	Large Pulley	67	1	Pivot Arm Pin
25	4	Foot	68	1	Pivot Arm Spring
26	1	Latch Bracket	69	1	Outer Frame Bushing
27	1	Pulley Bracket	70	2	M10 x 95mm Screw
28	1	V-pulley	71	1	Pivot Arm Bushing
29	1	Outer Frame	72	2	M10 x 35mm Screw
30	2	Weight Guide	73	2	E-clip
31	1	Cable	74	1	Anchor Strap
32	12	Cover Mount	75	8	M5 x 10mm Screw
33	2	Snap Ring	76	4	Cover Bracket
34	12	M6 x 16mm Flat Head Screw	77	1	Counterweight
35	2	M6 x 16mm Bracket Screw	78	2	Small Bumper
36	2	M6 x 12mm Screw	79	1	Footrest Cap
37	1	Back Pad	80	1	Pad Cap
38	2	M10 x 50mm Bolt	81	2	M8 x 16mm Screw
39	10	M10 x 30mm Screw	82	1	Stop Screw
40	1	Pivot Arm Knob	83	1	Bearing Cover
41	3	M10 x 70mm Screw/Bolt	84	—	(Not Used)
42	5	M10 Locknut	85	2	M6 x 16mm Screw
43	24	M10 Washer	*	—	Owner's Manual

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. *These parts are not illustrated.


EXPLODED DRAWING A

Model No. ES815.0 R1019A

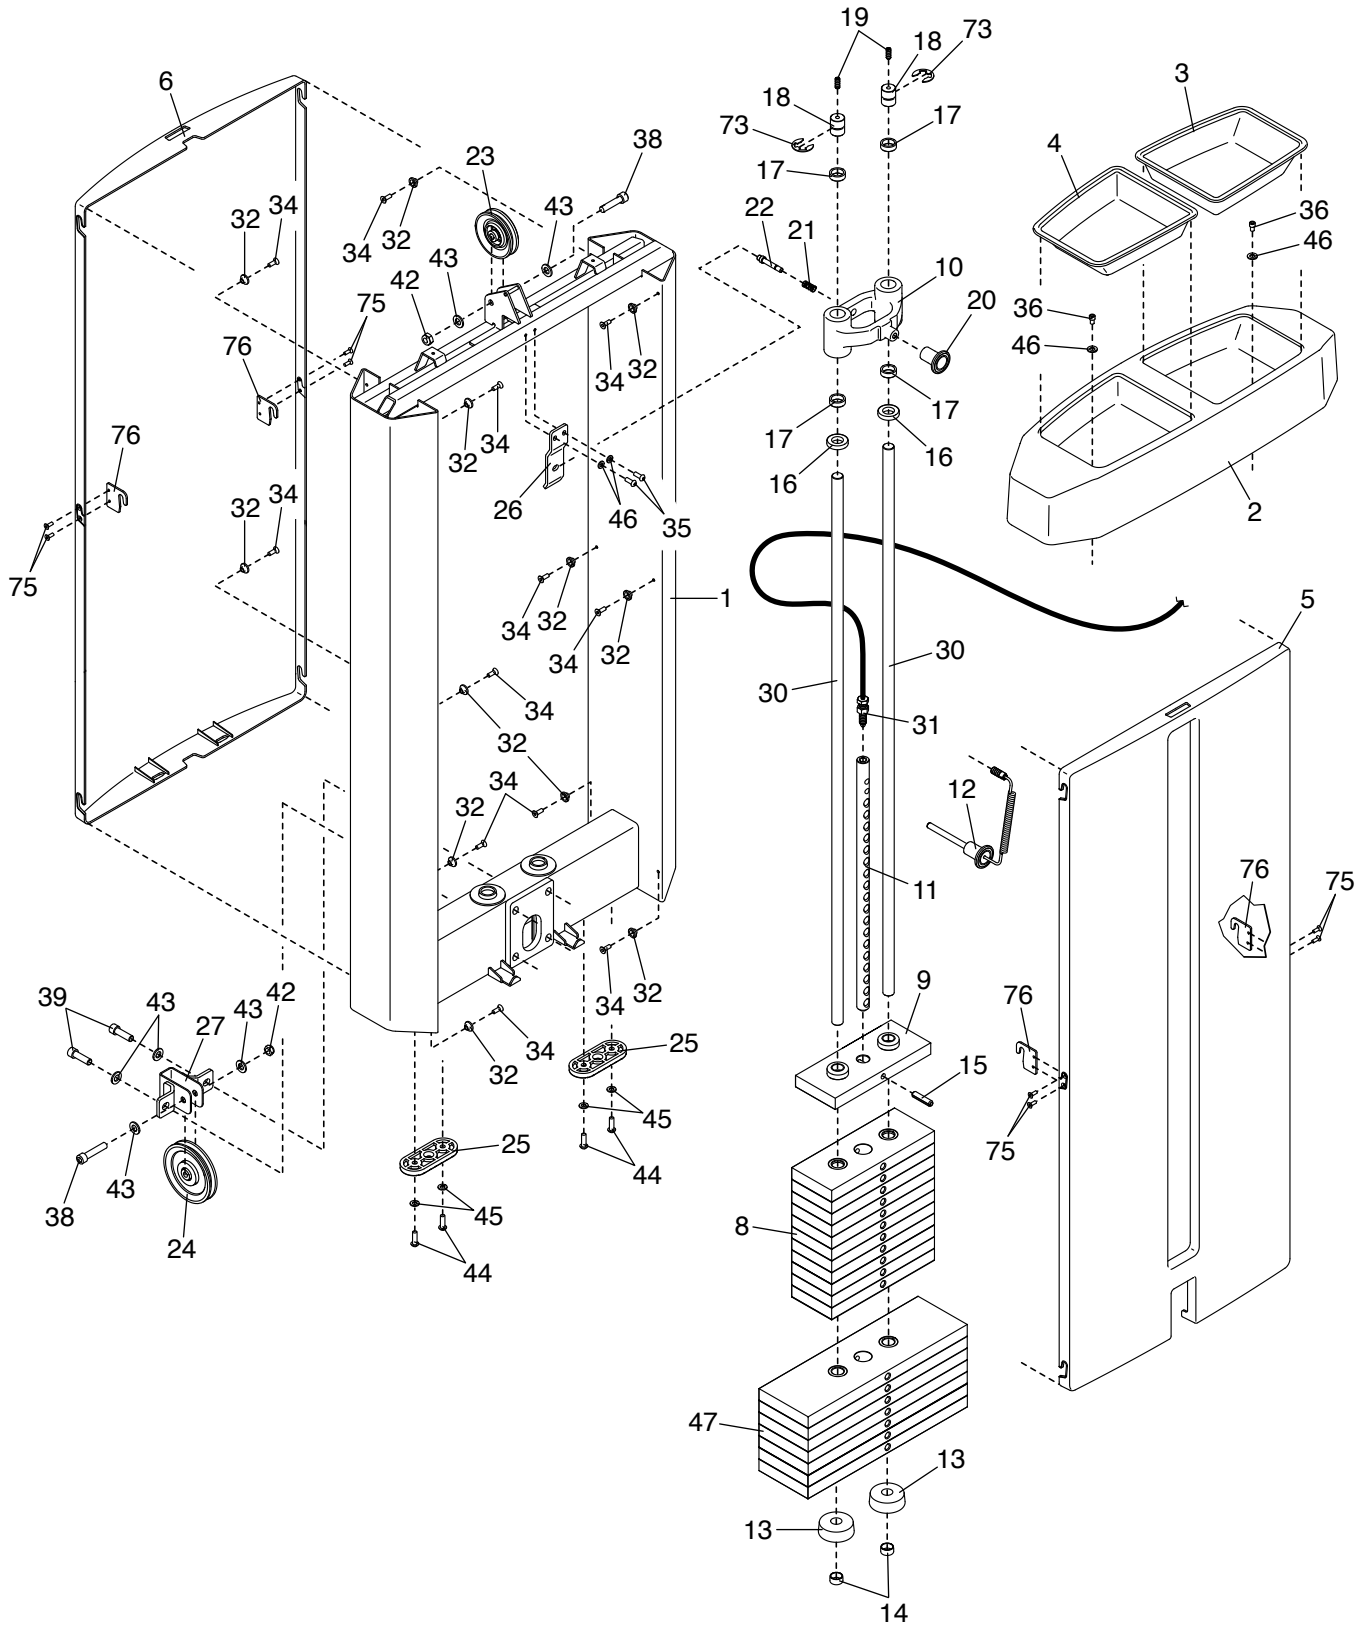

EXPLODED DRAWING B

Model No. ES815.0 R1019A

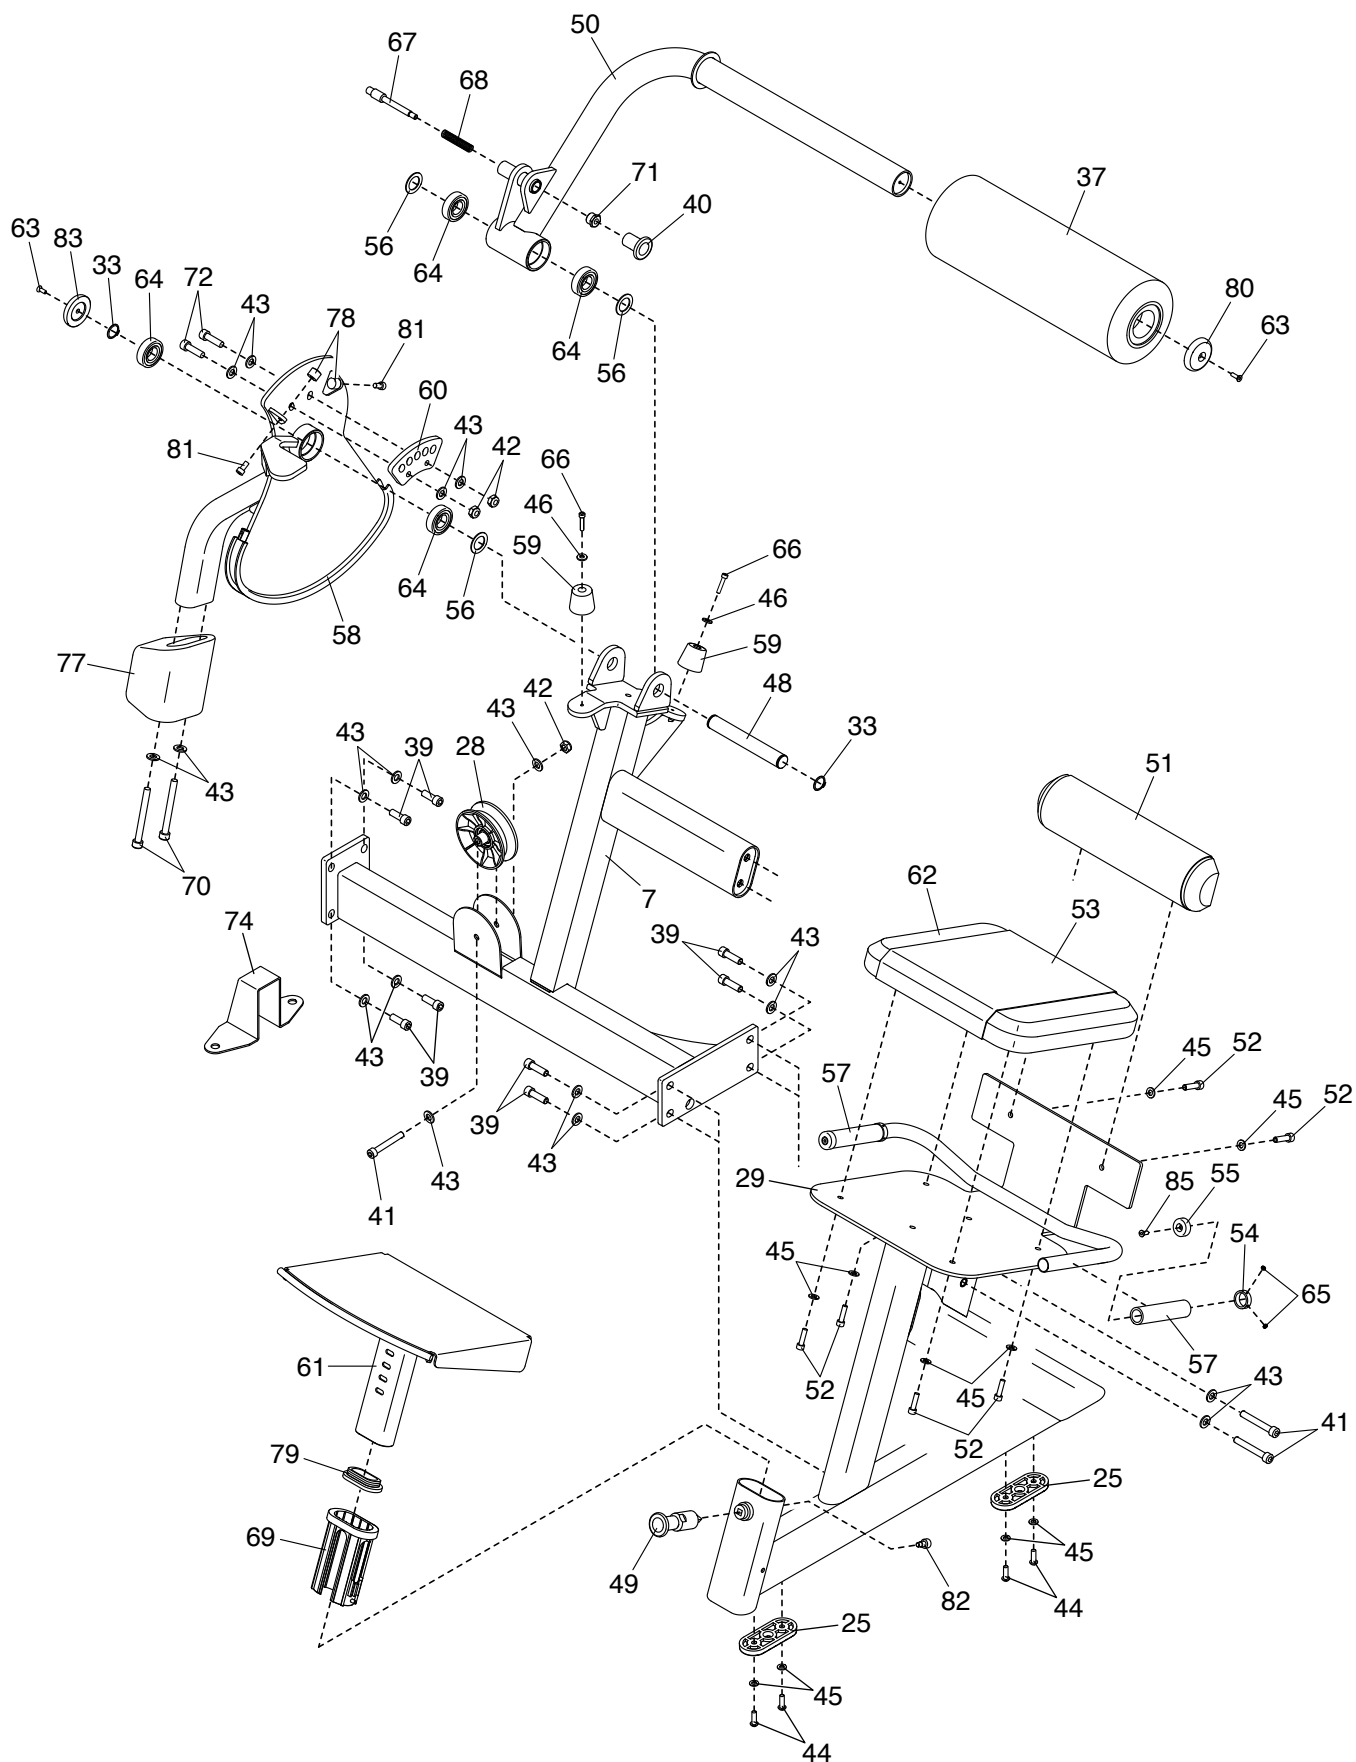

HOW TO CONTACT CUSTOMER CARE

If you have questions after reading this manual, or if parts are damaged or missing, please contact Customer Care at one of the phone numbers or addresses listed below. **Please note the model number, serial number, and name of the product (see the front cover of this manual) before contacting Customer Care. If you are ordering replacement parts, please also note the key number and description of each part (see the PART LIST and the EXPLODED DRAWING near the end of this manual).**

In the United States

Call: 1-800-201-2109, Mon.–Fri. 6 a.m.–6 p.m. MT

Email: customercare@freemotionfitness.com

Write:

Freemotion Fitness
1500 South 1000 West
Logan, UT 84321-9813
United States

Outside the United States

Call: 001-800-527-5417 or 001-435-786-3521,

Mon.–Fri. 6 a.m.–3 p.m. USA Mountain Time

Email: intlcustomercare@freemotionfitness.com

LIMITED WARRANTY

WARRANTY PERIODS AND COVERAGE

Freemotion Fitness warrants this product to be free from defects in workmanship and material under normal use and service conditions. Parts and labor are warranted for one (1) year, unless otherwise specified on the invoice.

The warranty period commences on the invoice date of purchase. Any parts repaired or replaced during this warranty period will be warranted for the remainder of the original warranty period.

CONDITIONS AND LIMITATIONS

The following will void the warranty on this product:

1. This warranty applies only to the original owner and is non-transferable.
2. The labor warranty applies only to products sold in the US and Canada. Contact your authorized Freemotion Fitness dealer for details on labor coverage in your country.
3. Any misuse, abuse, or improper service.
4. Users in excess of the maximum user weight listed in this manual. Note: This product may not have a maximum user weight.
5. Damage caused by moving the product or improper storage including moving or storing the product on its side.
6. Use or storage of the product outdoors or in high-humidity environments including spa and pool areas.
7. Damage caused by improper wiring or insufficient electrical current. Note: This product may not have wiring.

This warranty shall not apply to the following:

1. Cosmetic items including grips, decals, and labels.

2. Pick-up and delivery or freight charges involved with a repair.
3. Any problem as a result of improper assembly or delivery.

WHAT TO DO IF SERVICE IS REQUIRED

Freemotion Fitness warranty service may be obtained by contacting the authorized dealer from which you purchased this product. Make sure to retain your original invoice and serial number information. If this product experiences a failure under the warranty terms set forth, Freemotion Fitness shall provide at their option either repair, replacement, or refund of the purchase price. Freemotion Fitness compensates service providers for warranty trips within their service area. You may be charged additionally for service calls beyond this service area.

Freemotion Fitness is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or cost of removal or installation; or other consequential damages. Some regions do not allow the exclusion or limitation of consequential damages. Accordingly, the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights that vary from region to region.

TO CONTACT FREEMOTION FITNESS

See HOW TO CONTACT CUSTOMER CARE above.