



INSTALLATION INSTRUCTIONS

JIMNY - REAR DOOR TABLE

VER 2 - ADJUSTABLE



Table Closed



Table Open


Loosen ties and drop down.




Table Open - Adjusted

Adjust for level with thumb screw & ties.


- 1.** Remove plastic door trim by carefully pulling it straight out away from the door.
- 2.** Drill the 8 holes in the door marked in red (**pic 1**) out to 9mm and using a riv-nut tool install the M6 riv-nuts into those holes.
- 3.** The table can now be positioned on the door and the bolts can be inserted into the riv-nuts with the 2x plastic spacers positioned in the centre holes between the door and the back panel of the table, marked in blue (**pic 2**).
- 4.** At this stage only turn each bolt in a few turns, so the bolts are still loose and the table isn't pulled tight against the door.
- 5.** The rubber trim can now be installed along the top edge of the aluminium checker plate between the door and the table back panel (**pic 3**).
- 6.** All of the bolts securing the table back panel to the door can be fully tightened and your table is ready to go.

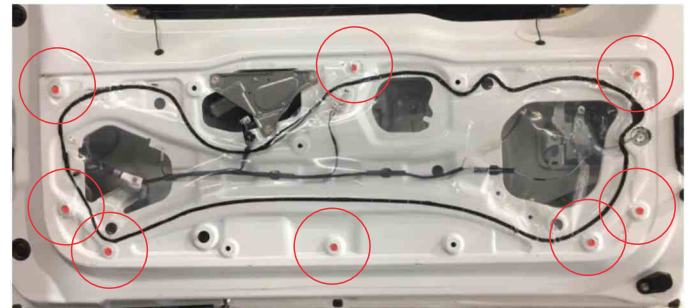

pic 1

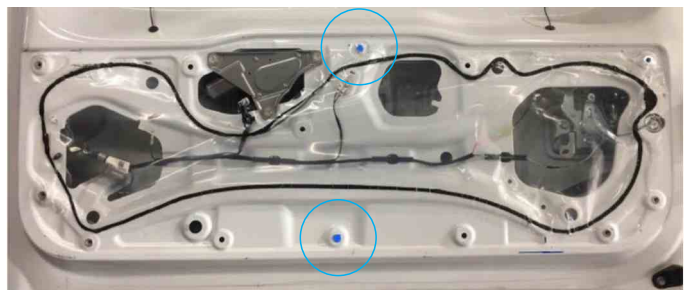

pic 2

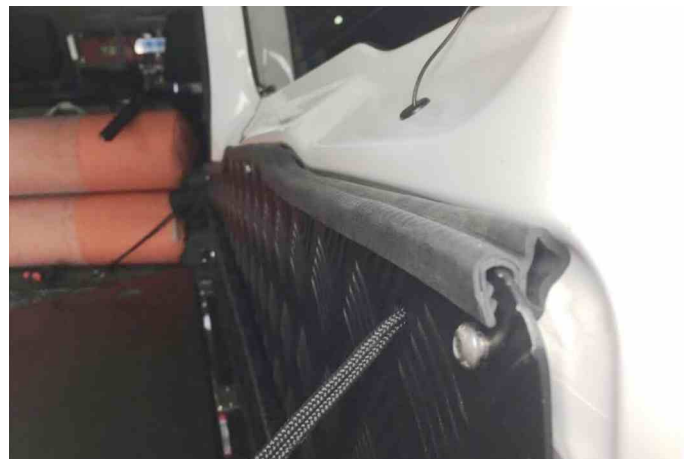

pic 3

Seriously Suzi

9-383 Dorset Rd, Bayswater 3153
(Entrance off Melrich Road)

PH: 0429 226 157

seriously suzi

info@seriouslysuzi.com.au

www.seriouslysuzi.com.au