

STEALTH® P3 HALF FACE MASK C/W TWIN HEPAC® P3 R D FILTERS

Materials

Stealth® Face Mask Body: TPE Medical Grade - Silicone & latex

free.

Stealth® Mask Strap: Nylon-Polyester

Stealth® Mask Valve & Fittings: Silicone / Nylon
HEPAC® P3 R D Filter: Synthetic composite/TPE frame
HEPAC® P3 R D Nuisance Odour: Synthetic composite with

carbon fabric/TPE frame Stealth® Strap Clips: Nylon

Stealth® Grill locking Turn Buckle and Boss: POM Stealth® Packaging: 100% Recyclable Paper card

Protection

Breathing System for protection from dusts, mists, fumes and micro-organisms e.g. bacteria & viruses.

Shelf Life

Shelf Life Mask & Filters: 5 years

See storage conditions on Instructions for Use. Filters are

re-usable and changeable.

Certifications

Mask: EN140:1998

Filters: EN143:2000+A1:2006 - P3 R D

Certificate - BSI CE2797

Performance(Test conducted by Inspec, results in average)


Penetration test (filtration) at 95l per min			
Sodium chloride	Limit allowed	Limit allowed	
0.001%	0.05%	0.05%	
Breathing Resistance			
(in mbar)	30L p min	95L p min	
Inhalation Resistance	0.38	1.26	
Limit allowed	1.2	4.2	
TIL – Total Inward Leakage (5 exercises done by 10 people with different subjects)			
Average results	0.14%		
Limit allowed	2%		

Ordering Information

	Code	Description
	F01.1.001 S/M F01.1.003 M/L	Stealth® P3 Half Face Mask C/W HEPAC® P3 R D Twin Filters
60	F02.1.001	HEPAC® P3 R D Replacement Twin Filters
60	F02.1.001N	HEPAC® P3 R D Nuisance Odour Replacement Twin Filters
4	F01.5.014	Stealth® Half Mask Storage Case





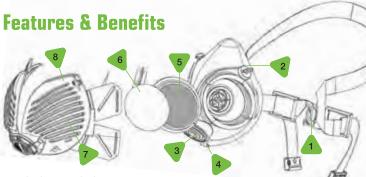

1» QUICK RELEASE STRAP

Single piece head & neck strap with quick release clip for easy adjustment.

2» NON-ALLERGENIC MASK

 $\label{lem:mask-body} \mbox{Manufactured from high-grade materials the TPE mask body is Latex \& silicone free.}$

3» EXHALATION VALVE

Downward facing valve ensures no exhalation fumes steam or fog glasses/goggles.

4» SAMPLE PORT

Built in for non-destructive face fit testing.

5» REPLACEABLE FILTERS

Twin HEPAC® pleated encapsulated filter provides 99.99% filtration.

6» PRE FILTER

Attached as standard prolonging life of filter & extra dust loading capability.

7» GRILL LOUVRES

Specific angles to allow air passage for maximum breathing.

8» GRILL PROTECTION

Protects 100% of the filter surface area from particulates directly clogging the filter ensuring better filtration efficiency & breathing resistance.

