# **WEIGHT INDICATOR INTO BOX - WEIGHING AND BATCHING**








































PVC end-fittings for sheath (on request)



AUMAS THE WIND TO THE RESTRICTION OF THE PARTY OF THE PAR	
W200Box	6

PROGRAM	OIML	IECEX (EX)	М	NMI TRADE APREVED	<b>©</b>	EHE Ex	EHE	c <b>91</b> 2 us	CODE
BASE	R76 - R61	•	•	•	•	•	•	•	W200BOX-B
LOAD	R76 - R61	•	•	•	•	•	•	•	W200BOX-C
UNLOAD	R76 - R61	•	•	•	•	•	•	•	W200BOX-S
3 PRODUCTS	R76 - R61	•	•	•	•	•	•	•	W200BOX-3
* 6 PRODUCTS	R76 - R61	•	•	•	•	•	•	•	W200BOX-6
* 14 PRODUCTS	R76 - R61	•	•	•	•	•	•	•	W200BOX-14
Multiprogram	R76 - R61	•	•	•	•	•	•	•	W200BOX-MU
* External 8-relay modules included.			ON	REQUI	EST				

#### **CERTIFICATIONS**

OIML OIML R76:2006, class III, 3x10000 divisions, 0.2 µV/VSI / OIML R61 - WELMEC Guide 8.8:2011 (MID)

c**SU**us UL Recognized component - Complies with the United States and Canada standards

EHC Complies with the Eurasian Custom Union standards

CERTIFICATIONS ON REQUEST

M Conformity assessment (initial verification) in combination with Laumas weighing module

ATEX II 3GD (zone 2-22)

The external relay modules must be protected.

IECEx (zone 2-22) IEĈEx

The external relay modules must be protected.

EH[ Ex Complies with the Eurasian Custom Union standards for use in potentially explosive atmospheres

• NMI NMI Trade Approved - Complies with the Australian standards for legal use with third parties

**(c)** Complies with the regulations of the Russian Federation for legal use with third parties

#### **FIELDBUSES**

**MODBUS RTU** MODBUS/TCP

















# **WEIGHT INDICATOR INTO BOX - WEIGHING AND BATCHING**



#### DESCRIPTION

- Weight indicator in IP67 polycarbonate box with 4+2 PG9 cable glands-plugs, suitable for wall mounting.
- Dimensions: 170x140x95 mm (4 fixing holes Ø 4 mm; centre distance: 152x122 mm).
- 6-digit semi-alphanumeric red LED display (14 mm height).
- 8 signalling LED.
- 5-key keyboard.
- Real-time clock/calendar with buffer battery.
- The instrument can be configured and managed using the free "Instrument Manager" PC software, which you can download from www.laumas.com.

#### INPUTS/OUTPUTS AND COMMUNICATION

- RS485/RS232 serial ports for communication via protocols ModBus RTU, ASCII Laumas bidirectional or continuous one way transmission.
- 5 relay outputs controlled by the setpoint values or via protocols (4 outputs if analog output is present).
- 3 optoisolated PNP digital inputs: status reading via serial communication protocols (2 inputs if analog output is present).
- 1 load cell dedicated input.
- Current or voltage 16 bit optoisolated analog output (option on request).

#### **MAIN FUNCTIONS**

- Connections to:
  - PLC via analog output (on request);
  - PC/PLC via RS485/RS232 (up to 99 instruments with line repeaters, up to 32 without line repeaters);
  - remote display and printer via RS485/RS232;
  - up to 8 load cells in parallel by junction box;
  - intelligent junction box or other multichannel instruments: allow the use of advanced functions as digital equalization, load distribution analysis and automatic diagnostics.
- Digital filter to reduce the effects of weight oscillation.
- Theoretical calibration (via keyboard) and real calibration (with sample weights and the possibility of weight linearization up to 8 points).
- Tare weight zero setting.
- Automatic zero setting at power-on.
- Gross weight zero tracking.
- Semi-automatic tare (net/gross weight) and preset tare.
- Semi-automatic zero.
- Displaying of the maximum weight value reached (peak).

CE-M version: 2014/31/EU-EN45501:2015-OIML R76:2006

via software (password), hardware or fieldbus.

Weight subdivisions displaying (1/10 e).

- Direct connection between RS485 and RS232 without converter.
- Weight value printing with date and time via keyboard or external contact.
- TCP/IP WEB APP
  - Integrated software in combination with the Ethernet TCP/IP option for remote supervision, management and control of the instrument.

System parameters management protected by qualified access

Three operation mode: single interval or multiple range or

# **BASE PROGRAM**

- Hysteresis and setpoint value setting.
- The indicator can be used as a remote display with setpoints.
- 12 groups selection by 5 setpoint via external selector switch or contact (option on request).

#### **BATCHING PROGRAM**

- 99 settable formulas.
- Batching resume after a blackout.
- Automatic fall calculation.
- Tolerance error control.
- Precision batching through slow function.
- Precision batching through tapping function.
- Consumption storage.
- Printing of batching data.
- Alarm contact management.
- Selection of the first 12 formulas via external selector switch or contact (option on request).
- Batching start via external contact or keyboard.

#### Only for:

#### LOAD and 3/6/14 PRODUCTS programs

Autotare at batching start.

# UNLOAD program

- Automatic loading of the product into the weighed structure.
- Management of batching with big bags.

### 3/6/14 PRODUCTS program

Formulas programming in fixed or variable steps.

### **MULTIPROGRAM**

The Multiprogram instruments do not have any selected program but can be set by the installer with different operating modes: BASE, LOAD, UNLOAD, 3 PRODUCTS, 6 PRODUCTS, 14 PRODUCTS.

• Calibration.

multi-interval.

Alibi memory (option on request).

The following values can be printed via keyboard or external contact: gross weight, net weight, tare, preset tare, date, time, ID code (alibi memory).








### **TECHNICAL FEATURES**

Power sup	oply and consumption	12÷24 VDC ±10%; 5 W
Number o	f load cells • Load cells supply	up to 8 (350 Ω) - 4/6 wires • 5 VDC/240 mA
Linearity •	Analog output linearity	<0.01% full scale • <0.01% full scale
Thermal d	rift • Analog output thermal drift	<0.0005% full scale/°C • <0.003% full scale/°C
A/D Conve	erter	24 bit (16000000 points) - 4.8 kHz
Divisions	(with measurement range ±10 mV and sensitivity 2 mV/V)	±999999 • 0.01 μV/d
Measurem	nent range	±39 mV
Usable loa	ad cells sensitivity	±7 mV/V
Conversio	ons per second	300/s
Display ra	inge	±99999
Decimals	Display increments	0÷4 • x1 x2 x5 x10 x20 x50 x100
Digital filte	er • Readings per second	10 levels • 5÷300 Hz
Relay outp	puts	5/4 - max 115 VAC/150 mA
Optoisolat	ted digital inputs	3/2 - 5÷24 VDC PNP
Serial por	ts	RS485, RS232
Baud rate		2400, 4800, 9600, 19200, 38400, 115200 (bit/s)
Optoisolat	ted analog output (option on request)	16 bit = 65535 divisions. 0÷20 mA; 4÷20 mA (up to 300 $\Omega$ ) 0÷10 V; 0÷5 V; ±10 V; ±5 V (min 10 k $\Omega$ )
Humidity	(condensate free)	85%
Storage te	emperature	-30°C +80°C
Working to	emperature	-20°C +60°C
	Relay outputs	5/4 - max 30 VAC, 60 VDC/150 mA
c <b>71</b> 2° us	Working temperature	-20°C +50°C
	ver source	

#### METROLOGICAL SPECIFICATIONS OF TYPE-APPROVED INSTRUMENTS

Applied standards	2014/31/UE - EN45501:2015 - OIML R76:2006
Operation mode	single interval, multi-interval, multiple range
Accuracy class	III or IIII
Maximum number of scale verification divisions	10000 (class III); 1000 (class IIII)
Minimum input signal for scale verification division	0.2 μV/VSI
Working temperature	-10°C +40°C

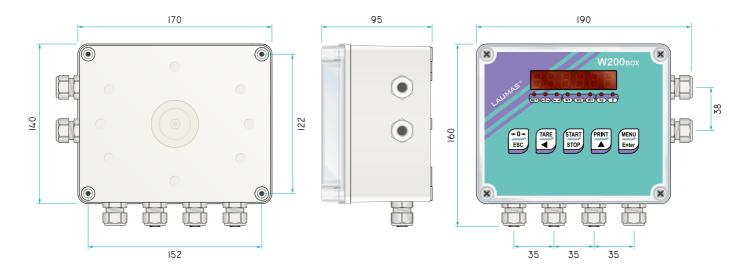







### OPTIONS ON REQUEST AND COMPATIBILITY WITH BATCHING PROGRAMS

	ACCESSORIES	CODE
0000	6 PVC end-fittings for sheath.	W200BOX-U B C S 3P 6P 14P • • • • • •
	INTERFACES AND FIELD BUSES	
ANALOG OUTPUT	Optoisolated 16 bit <b>analog output</b> .  → One input and one output not available.	* OPZW1ANALOGICA B C S 3P 6P 14P
RS485 <sup>+</sup>	Additional RS485 port.  → One input and one output not available.  → Not compatible with E/EC option.	* OPZW1RS485 B C S 3P 6P 14P • • • • • •
CANOPER	CANopen protocol.	* OPZW1CA  B C S 3P 6P 14P  •
DeviceNet	DeviceNet protocol.	* OPZW1DE  B C S 3P 6P 14P  •
<b>中国中</b> 中	Profibus DP protocol.	* OPZW1PRW200BOX B C S 3P 6P 14P
EtherNet/IP	Ethernet/IP protocol - Ethernet port.  → Internal crimp wiring.	* OPZW1ETIPCR  B C S 3P 6P 14P  •
ETHERNET TCP/IP	Ethernet TCP/IP protocol - Ethernet port. Integrated software for remote supervision, management and control of the instrument.  Internal crimp wiring.	* OPZW1ETTCPCR B C S 3P 6P 14P • • • • • •
MODBUSITCP	Modbus/TCP protocol - Ethernet port.  → Internal crimp wiring.	* OPZW1MBTCPCR B C S 3P 6P 14P • • • • • •
PROFIEUS - PLOFINET	Profinet IO protocol - Ethernet port.  → Internal crimp wiring.	* OPZW1PNETIOCR  B C S 3P 6P 14P  •
0-10	Weight reading from 0-10 VDC input (15 $k\Omega).$	OPZWING010 B C S 3P 6P 14P • • • • • •
4-20	Weight reading from 4-20 mA input (120 $\Omega$ ).	OPZWING420 B C S 3P 6P 14P • • • • • •

<sup>\*</sup> Select one option among those marked with an asterisk.

Tel: 01704 536010 Email: sales@gnw.co.uk







# OPTIONS ON REQUEST AND COMPATIBILITY WITH BATCHING PROGRAMS

	EXPANSIONS	CODE
.000-0	Base: 12 groups selection by 5 setpoint via external selector switch. Load, Unload, 3/6/14 Products: selection of the first 12 formulas via external selector switch.	* EC B C S 3P 6P 14P • • • • • •
	Base: 12 groups selection by 5 setpoint via external contact.  Load, Unload, 3/6/14 Products: selection of the first 12 formulas via external contact.	* E B C S 3P 6P 14P
ANALOG OUTPUT	Simultaneous use of E/EC option with the analog output.	OPZWAEC B C S 3P 6P 14P
	External 5-relay module to increase the capacity of SPDT contacts to 115 VAC/2 A.	RELE5M  B C S 3P 6P 14P  • • • •
	External 8-relay module to manage from 1 to 6 products; 8 relays up to max 115 VAC/2 A.  Module included with models 6/14 PRODUCTS.  12÷24 VDC 115 VAC 230 VAC	RELE6PROD24V RELE6PROD115V RELE6PROD230V B C S 3P 6P 14P
	External 8-relay module to manage from 7 to 14 products to be added to RELE6PROD module; 8 relays up to max 115 VAC/2 A. Module included with model 14 PRODUCTS.	RELE14PROD  B C S 3P 6P 14P  •

\* Select one option among those marked with an asterisk.









# OPTIONS ON REQUEST AND COMPATIBILITY WITH BATCHING PROGRAMS

	APPLICATIONS - SOFTWARE	CODE
FORM	Formulas setting in percentage.	OPZWFORPERC  B C S 3P 6P 14P  • • •
	Setting a quantity to be batched greater than the scale capacity with automatic calculation of cycles.  Not available for CE-M approved version.	OPZWQMC  B C S 3P 6P 14P  - • - • • • •
	Intermediate unloadings during the batching.  Not available for CE-M approved version.	OPZWSCARI  B C S 3P 6P 14P  • • • •
	Partial unloadings at cycle end.  Not available for CE-M approved version.	OPZWSCARP B C S 3P 6P 14P • • •
	Alibi memory.	OPZWALIBI B C S 3P 6P 14P • • • • • •
	Data transfer from the instrument to the PC, via RS232 (directly) or RS485 (by converter) serial port. These data (weighed values, batchings, alarms) can be imported and processed on the PC using the PROG-DB software included. We suggest to use this option when the indicator is always connected to the PC.	OPZWDATIPC  B C S 3P 6P 14P
10729kg 12120kg 2117kg	Manual batching with remote displays connected in parallel to the instrument via RS485 serial port; allows to display on different remote displays the following batching information: formula and product number, remaining quantity to be batched, gross weight.	OPZWLAUMAN  B C S 3P 6P 14P

