




Anderson Knob Guard Instructions

Fig.1



Your new Anderson knob guard comes with 2 stainless bolts with plastic covers. The covers are to prevent scratching and provide an excellent grip to tighten with out tools.

Fig. 2

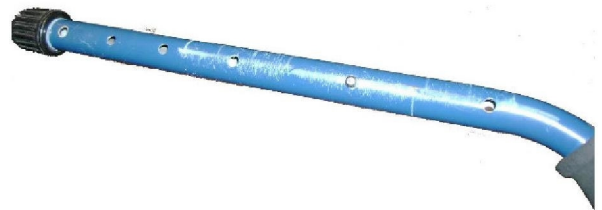

To install the guard the first and last electronics mounting spring pins must be removed. All three may need to be removed at first then reinstall the midspring pin that holds the battery in place.

Fig. 3



The best method for removing the spring pins is to use a long piece of hard wire with a small hook bent onto the end. This will allow you to hook the pin from the inside of the detector shaft while pushing both sides of the pin in from the outside.

Fig. 4



Which side the guard will go on will depend on what hand you swing with. Install the provided bolts through the guard, electronics and detector shaft and tighten until snug. Over tightening may cause damage to electronics housing.

Anderson Detector Shafts
550 Murdock Ave
Fort Erie, ON, L2A 1S4
Canada
1-800-967-1909
www.andersondetectorshafts.com