

**MODEL 600040
COVERED CADAVER CARRIER w/ ROLLERS**




The unit allows for the concealed removal and transport of deceased from the hospital room to the morgue. A roller top frame allows easy transfer of body tray from carrier to lift or carrier to refrigerator. The unit features adjustable elevation and easy steering control. The unit comes with a versatile locking mechanism, allowing single locking caster to assist in steering, and all casters locking to ensure stability while working.

STANDARD DESIGN FEATURES

Base Width:..... 30 in./76 cm.
Top Frame Width:26.5 in./67 cm.
Length:81.8 in./208 cm.
Height:21.9 in./56 cm. (Lowest)
Height:34.9 in./89 cm. (Highest)
Design Load:.....500 lbs./227 kg.

- Heavy gauge stainless steel roller frame
- Base with height adjustments via hydraulic foot pedal or manual crank
- 8 in./20 cm. swivel wheels lock instantly with a single foot pedal
- Sturdy, lightweight aluminum top frame to conceal cadaver and is easily removable
- Fabricated cover made of launderable cloth
- Replacement cover available

All measurements are inches/centimeters

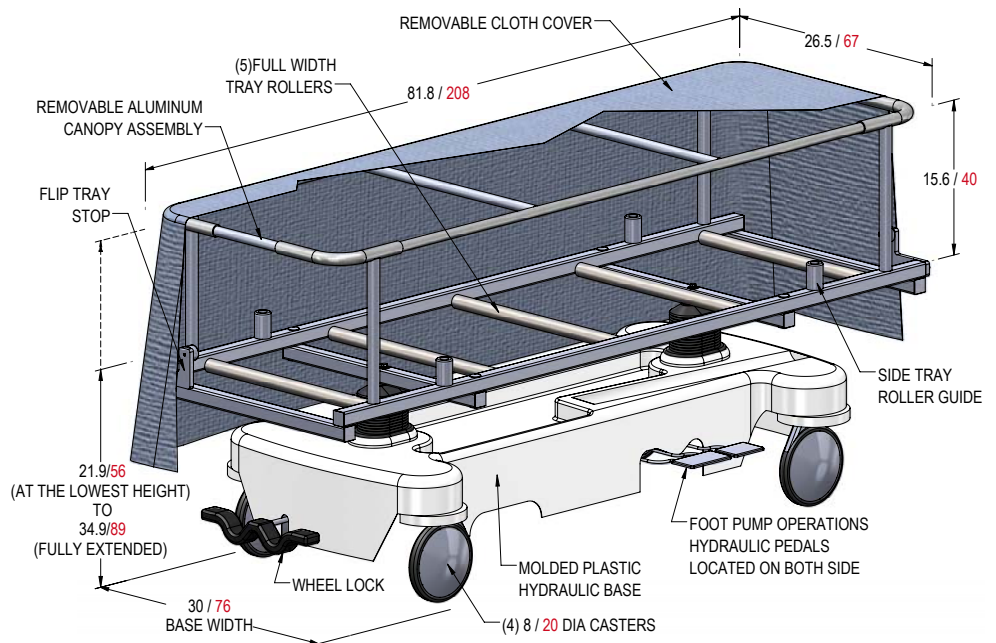

BODY TRANSPORTER & REMOVAL COTS

Model M678 Hydraulic Cadaver Lift fitted with our Model M601-H Roller Pallet Assembly aligning with a mortuary refrigerator

TRANSFER FROM LIFT TO REFRIGERATOR

Once the body tray has been transferred to the lifting device, it can then be used to place the body in your storage system or mortuary refrigerator.

Please provide your space available and storage requirements, and we will design a Total Roll System to meet your application

We offer a wide range of mortuary refrigerators and storage systems which incorporate the same roller system and allow all equipment to be completely compatible.

If all equipment is compatible, one person can make all body transfers without any manual lifting.



Model 60040-H shown with Model M678 Hydraulic Cadaver Lift fitted with our Model M601-H Roller Pallet Assembly

TRANSFER FROM CARRIER TO LIFT

After removal has been completed from the patient's room, remove top canopy cover and aluminum frame.

Align the lift with the height of the carrier and simply roll the body tray from the carrier onto the lift roller assembly.

The lift can be used to transfer the body tray to either a storage rack system or a mortuary refrigerator unit.



MODEL 60040 HYDRAULIC COVERED CADAVER TRANSFER SYSTEM