


アイライトLM-016/LM-017 クイックスタートガイド

電池交換方法

1. ライト本体をマウントから取り外す。
2. シリコンカバーを外し、USB ケーブル (micro USB Type-B) を装着し、充電する。
※本体の構造上、ケーブルの種類によっては奥まで差し込めない場合がございます。
3. 充電中はライトが赤く点滅します。
4. 充電が完了するとライトが赤点滅から赤点灯に切り替わります。

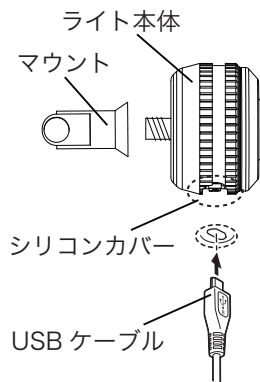

ライトの取付方法


ノーマルタイプの場合

1. ライトを取り付けたい箇所に付属のボルト、ワッシャー、ナットでマウントを固定します。
2. マウントの向きを調整しつつ、ライト本体を取り付ける。
アイデア次第で様々な箇所に取付可能です。

例) フォークのダボ穴 (右図参照)


ブレーキシュー横

ブレーキ上 (別売のブレーキ用ステーが必要)

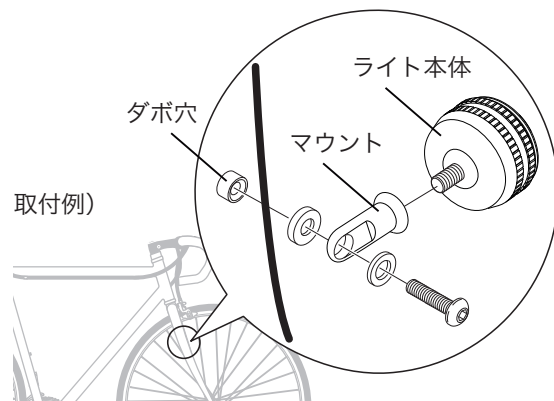

QR タイプの場合

1. 自転車のホイールレバーを緩め、ナットを外す。
2. OUTSIDE という面が外側になるように付属のマウントを装着する。
この時、ホイールレバーにもともと使われていたスプリントも通す。
3. マウントの向きを調整しつつ、ホイールレバーを締める。
4. ライト本体をマウントに取り付ける。

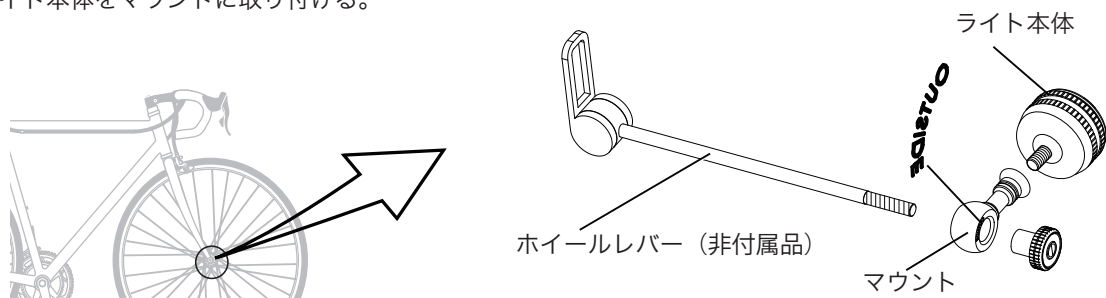

LM-016製品スペック

カラー	シルバー、ブラック
マウント	ノーマル、QR
機能	強→中→弱→点滅→OFF
最大ルーメン (lm)	300
本体サイズ (mm)	約 30 x 約 35
バッテリー方式	USB 充電 (micro Type-B)
最大使用時間	点灯連続 3 時間
	点滅連続 4 時間
充電時間	約 2 時間

LM-017 製品スペック

カラー	シルバー、ブラック
マウント	ノーマル、QR
機能	強→点滅→OFF
最大ルーメン (lm)	20
本体サイズ (mm)	約 30 x 約 30
バッテリー方式	USB 充電 (micro Type-B)
最大使用時間	点灯連続 8 時間
	点滅連続 20 時間
充電時間	約 2 時間

※使用時間、充電時間は使用する環境、使用頻度によって変動します。

取扱上の注意

- ・ライト本体にはリチウムイオン電池が含まれています。
- ・シリコンカバーは必ず締めてください。ケーブル差込口が開いたままだと、本体内部に雨水が侵入する恐れがあります。
- ・なるべく KILEY というロゴが上向きになるようにマウントの位置を調整してください。


困ったときは

- ・オフィシャルショップ内お問合せフォームよりご連絡可能です。
- ・こちらに直接ご連絡することも可能です。MAIL: info@kiley-japan.com
もしくはご購入されたKILEY 販売店へお問合せください。

Compact LED light “EYE LIGHT” LM-016 & LM-017 Quick start guide

Charging the light

1. Remove the light body from the mount.
2. Remove the silicone cover, plug the USB cable (micro USB Type-B), and charge the battery.
- * Please note that it may not be possible to insert the cable all the way if the USB cable is too thick due to the structure of the light.
3. The light will blink red while charging.
4. When charging is complete, the light will stop blinking.

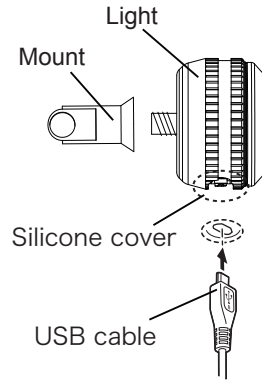

Setting up the light


For normal type

1. Fasten the mount with the supplied bolts, washers, and nuts to the location where you want to install the light.
 2. Adjust the direction of the mount and attach the light body.
- Depending on your ideas, you can attach the light in a variety of places.

Ex) Front fork dowel hole



Around the brake pads

Above the brake (requires optional stay for fork)

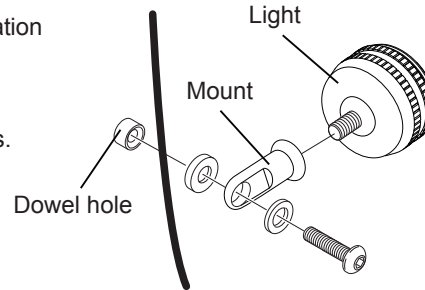

For QR type

1. Loosen the wheel lever and remove the nut.
2. Install the supplied mount so that the side called "OUTSIDE" is on the outside instead of the nut. At this time, pass the splint that was originally used on the wheel lever.
3. Tighten the wheel lever while adjusting the direction of the mount.
4. Attach the light body to its mount.

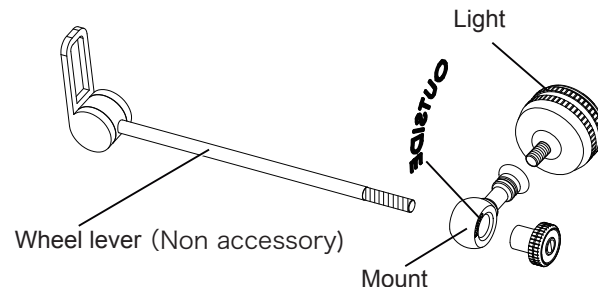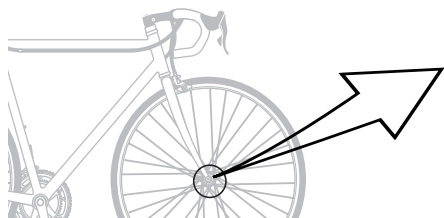

LM-016 Specifications

Color	Silver, Black
Mount	Normal, QR
Function	Strong → Medium → Weak → Flashing → OFF
Maximum lumen (lm)	300
Body size (mm)	30 x 35
Battery system	USB charging (micro Type-B)
Maximum use time	4 hours continuous lighting
	8 hours continuous flashing
Charging time	2 hours

LM-017 Specifications

Color	Silver, Black
Mount	Normal, QR
Function	Strong → Flashing → OFF
Maximum lumen (lm)	20
Body size (mm)	30 x 30
Battery system	USB charging (micro Type-B)
Maximum use time	8 hours continuous lighting
	20 hours of continuous flashing
Charging time	2 hours

* The usage time will vary depending on the operating conditions.

Cautions

- Lithium-ion battery is included.
- Please make sure to tighten the silicone cover on the cable socket when using.
- Please adjust the position of the mount so that the KILEY logo is facing upwards.

Customer Support

You can contact us.

- HP <https://kiley-japan.com/>
- MAIL: info@kiley-japan.com
- The KILEY dealer where you purchased the product.