

# M E T A L FLOOR MOUNTED INSTALLATION MANUAL



### **General Notes**


The following installation instructions are based on the most common unit arrangement. Other arrangements will be encountered, i.e. units contained between two walls or between two freestanding panels.

For dimensional information, refer to your plan layout and dimensional details. Note in particular the relationship of the panels to the pilasters (panels do not necessarily fall on the centerline of the pilaster).

Varying site conditions can affect the installation process. To effect a rigid and level installation, it is important for installers to be aware of and compensate for uneven floor and wall conditions.

It is the distributor's responsibility to supply end-users with maintenance and warranty information.



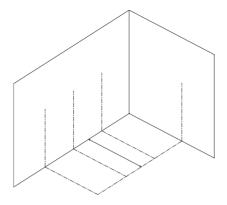


### 1

### **Establish Floor Stud Locations**

Establish front centerline by taking the overall compartment dimension and deducting 16 mm (5/8").

Use final layout drawings to determine locations.

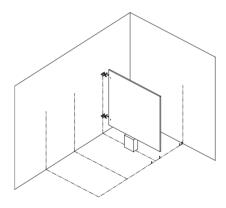


# 3

# **Erect Panel**

Using your centerline locations, fasten 2 panel brackets to wall. Bracket centers should be 457mm (18") and 1626mm (64") from floor.


Rest panel on 318mm (12.5") block and position in brackets, leaving 13mm (1/2") clearance between wall and panel. Drill one hole through top bracket and fasten.

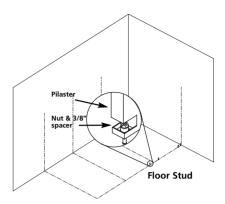

# 2

### **Fasten Floor Studs**

Drill holes for floor studs 25mm (1") in from edge of pilaster locations as indicated on layout drawing.

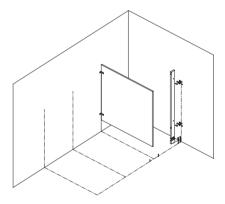


### 1

# **Erect Wall Pilaster**

Fasten 2 "F" brackets to wall at centerline. Bracket centers should be 457mm (18") and 1626mm (64") from floor.

Slide shoe onto pilaster\*. Position pilaster in wall brackets and over floor studs. Install floor stud hardware, plumb pilaster, and tighten. Attach pilaster to wall brackets.


\* See step 7 regarding shoe fit.

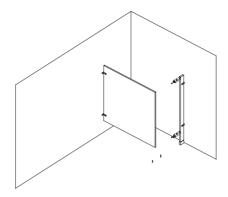

# 5

# **Prepare Pilaster For Door**

Fasten upper and lower hinges to wall pilaster.

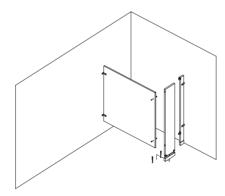


# 7

# **Erect Pilaster**

For a better pilaster shoe fit, ensure that the front and back edges of the shoe are parallel to each other. If they are not, then apply hand pressure to the back seam of the shoe until the front and back edges are parallel.

Slide shoe onto pilaster and position pilaster on floor studs with "U" brackets engaging panel.

Drill one hole through top bracket and fasten.

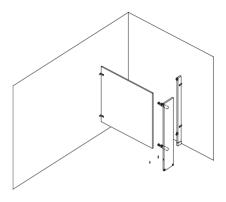


# 6

# Fasten "U" Brackets To Pilaster

Place next pilaster on floor studs and mark center line of panel on the back. Mark bracket centers at 457mm (18") and 1626mm (64") from floor. Using the brackets as templates, mark drill holes.


Remove pilaster from floor studs and fasten "U" brackets.

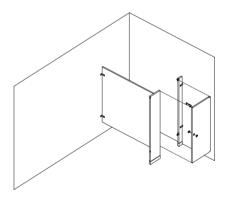

# 8

# **Prepare Door For Hanging**

Install female cam in the door.
Install latch, and coat hook/bumper.

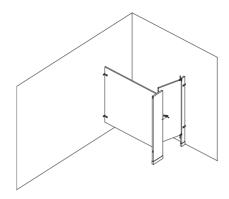


### 9

# **Hang Door**

Insert male cam into bottom hinge and lower door onto it. Install threaded upper hinge pin. To set doors at the required angle, loosen the nut of the male cam assembly, set door at required angle, and tighten nut.

Fasten Stop & Keeper on pilaster, ensuring it lines up with latch.

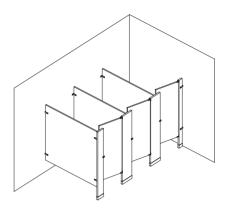

# 10

# **Erect Remaining Compartments**

Ensure all pilasters are fastened to floor studs, add all remaining fasteners and repeat steps 3-10 (as necessary) for all remaining compartments.

Note: Hadrian recommends installing one compartment (including door) at a time.

# **Optional Items**

### **Continuous Hinge**

Replaces conventional hinge and hinge filler.


# **Continuous Stop**

Replaces doorstop/keeper and offers increased privacy.

# **Hinge Side Gap Filler**

Fits between standard hinges and offers increased privacy.

Hadrian recommends pre-drilling pilasters with 4mm (5/32") holes when installing continuous stops and hinge side gap fillers.



# **Contact Hadrian:**

IN CANADA & AREAS OTHER THAN USA:

Hadrian Manufacturing Inc., 965 Syscon Road, Burlington, ON L7L 5S3 tel: 905-333-0300 fax: 905-333-1841

CAN toll free fax: 1-888-817-7701

IN THE USA:

Hadrian Inc., 7420 Clover Ave., Mentor, OH 44060 tel: 440-942-9118 fax: 440-942-9618

USA toll free fax: 1-800-536-1469