

USER MANUAL

SAFETY FIRST

CAUTION

The oven gets very hot when in use. Take great care when removing tobacco/plant material from the oven. Turn the function dial to OFF and allow to cool for 5 minutes before opening the oven door.

SAFETY INSTRUCTIONS


Read and follow these instructions carefully. Failure to follow these instructions could result in injury or damage.

- Keep out of the reach of children.
- Do not attempt to dismantle, readjust or repair. The Alfa is not user serviceable apart from the removable mouthpiece and screen.
- Do not puncture, incinerate, drop or microwave your Alfa vaporizer.
- The Alfa is not a medical device.
- The manufacturer is not responsible for damage or personal injury caused by inappropriate, incorrect or irresponsible use.
- Do not use a non-Goboof charger.
- Do not use a damaged charger.
- Dispose of in accordance with local regulations for lithium-ion batteries.

WARRANTY

The Alfa vaporizer comes with a 2 year limited warranty from date of purchase. Goboof Products Ltd warrants against defects in workmanship and materials, which occur during normal working of the Alfa vaporizer. The limited warranty does not apply to normal degradation of the batteries or if safety and cleaning instructions are not adhered to.

ALFA FEATURES

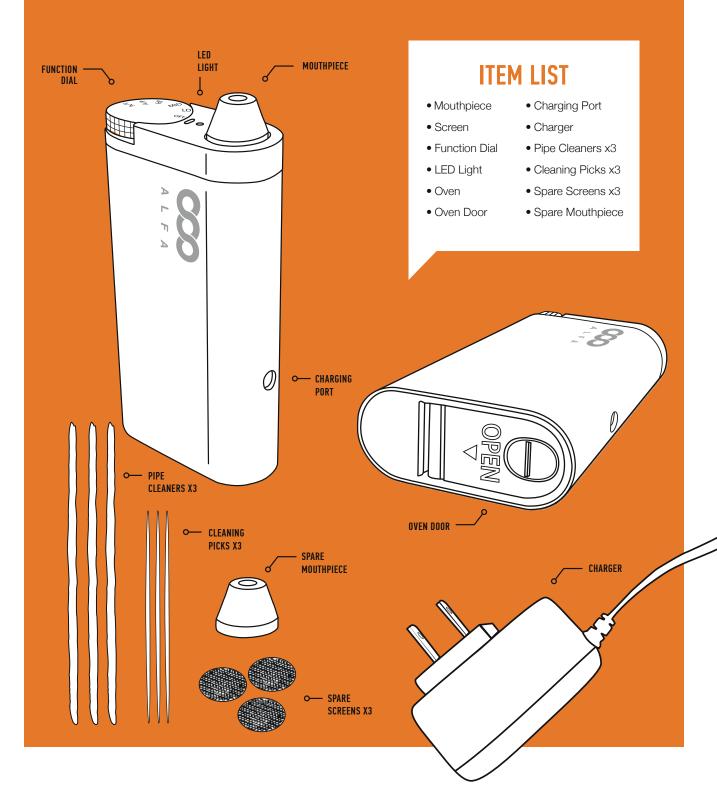


USING YOUR ALFA

CHARGE BATTERY #1 The Alfa uses a lithium-ion battery, which comes partially charged. To charge, plug the provided power adapter into a wall outlet and connect the DC jack to the vaporizer. No damage will occur to the vaporizer or battery if used prior to a full charge. **#2 LOAD OVEN** Open oven door, insert your ground Ő, tobacco and then close the oven door. CAUTION: The oven gets very hot when in use. POWER ON #3 LO 0 Rotate the function dial to your preferred vaporizing setting to turn on the Alfa. **#4 ENJOY** After turning on, the Alfa takes approx. 30 seconds

to heat up. While heating the light will blink green. When ready the light will be a solid green.

USING YOUR ALFA

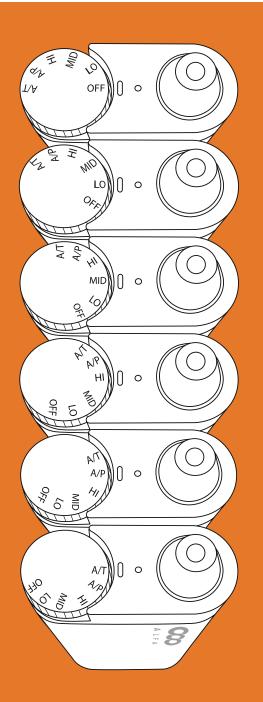

ALFA FUNCTIONS

OFF	Powered off
LO	Constant 190°C / 374°F
MID	Constant 210°C / 410°F
н	Constant 225°C / 437°F
A/P	Automatic Heat-By-Puff
A/T	Automatic Heat-By-Time

- LO In this mode the vaporizer will produce vapor at a constant 190°C / 374°F
- MID In this mode the vaporizer will produce vapor at a constant 210°C / 410°F
- HI In this mode the vaporizer will produce vapor at a constant 220°C / 428°F
- A/P In this mode the vaporizer will heat up to 190°C at which point it is ready to use. After that the vaporizer will incrementally increase in temperature after every puff until it reaches a maximum temperature of 220°C.
- A/T In this mode the vaporizer will heat up to 190°C at which point it is ready to use.
 After that the vaporizer will incrementally increase in temperature every 3 minutes until it reaches a maximum temperature of 220°C.

USING YOUR ALFA

OPERATION: LED LIGHT STATUS MODES

CHARGING

When the vaporizer is plugged into the wall via the provided charger: **Solid Red** The vaporizer is charging its battery. **Solid Green** The vaporizer battery is fully charged.

NOTE: The vaporizer will charge on any setting however charge status light is only available at function dial position OFF.

POWERED ON

#4

30 SFC

BATTERY LIFE

WORKS

SAVE

ENERGY

AUTO SHUT-OFF

WHEN PLUGGED IN

ΗΓΔΤ ΠΡ

When any function is selected other than the off position.

- **Blinking Green** The vaporizer is heating up and battery is charged.
- **#2** Solid Green The vaporizer is up to temperature at the selected function and battery is charged.
- **Blinking Amber** The vaporizer is heating up and battery is low on charge.
 - **Solid Amber** The vaporizer is up to temperature at the selected function and battery is low on charge.
- **#5** No Light The automatic shut off feature has powered down the vaporizer or the battery has no charge.

OPERATION: BATTERY CHARGE

The Alfa vaporizer will run for approximately 2 hours on LO setting. From complete discharge the battery takes approximately 4.5 hours to fully charge. The vaporizer will run for approximately 5 hours continuously while plugged in and in use. The vaporizer can be used after 40 minutes of charge from complete discharge. This will give you approximately 20 minutes of continuous use without being plugged into a power source. If plugged into a power source the vaporizer will run for approximately 3 hours after 20 minutes of charge.

OPERATION: AUTOMATIC SHUT OFF


The vaporizer will shut down if no puff is detected within any given 10 minute period regardless of program function selected.

CLEANING YOUR ALFA

CLEANING

Goboof recommends that you clean the Alfa regularly to preserve flavor and to keep it in good condition.

CAUTION: The oven gets very hot when in use.

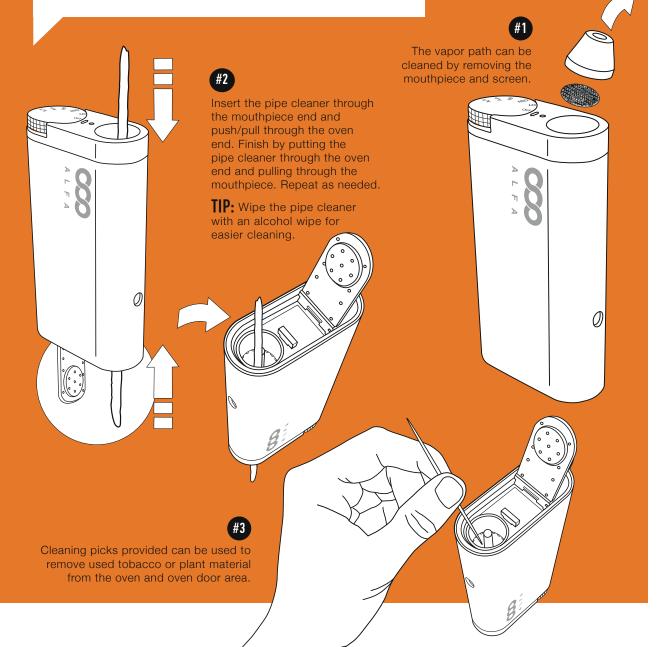



© 2014 Goboof Products Ltd. All rights reserved. Goboof® and the Carve logo / device are registered trademarks of Goboof Products Ltd.