

Goodman Handle

800-0418-A

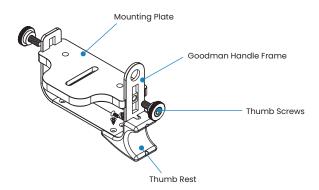



Step 1. Mounting Plate Placement:


- a. Position the mounting plate between the Goodman Handle frame with the recess slot for bolt heads facing downwards.
- For left hand: position the thumb rest on the right side and insert the mounting plate with the extended slot facing back - toward your arm.

Step 2. Thumb Screw Installation:

 Secure the plate position by tightening both thumb screws.

Step 3. Bungee Cord Attachment:

- a. Feed the open end of the bungee cord through the hole in the bottom of the thumb rest and tie an overhand knot, pulling the knot into the hole.
- Once the fit is confirmed, cut the tail of the cord with scissors. Make sure to hold the end under a flame to seal it from unraveling.

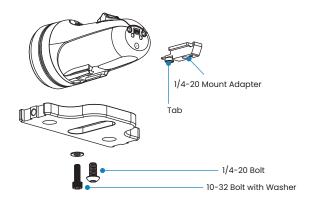



Step 4. Sola 2L Mounting:

- Remove mounting accessories from your Sola.
- Attach the ½-20 mount adapter to the Goodman handle plate using the ½-20 bolt. Make sure the tab with the hole is facing forward.
- c. Slide your Sola light onto the mount adapter from the back to the front until the adapter tab hole lines up with the threaded insert on the Sola body.
- d. Screw in the 10-32 with washer through the Goodman handle plate into the threaded insert in the Sola. Do not over-tighten.

Note: Refer to the exploded view for part identification.