



Quick Start Guide for Development Kits

1) Download and install GasLab Windows desktop software from the website at <https://GasLab.com/pages/software-downloads>

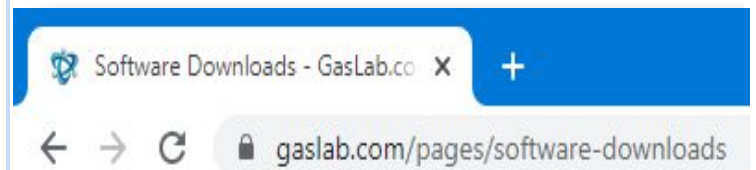

2) Once installation is complete, connect the sensor or meter to the computer with the included USB cable.

(If the sensor does not wake up your USB bus may not have enough power. Use a powered USB hub.)

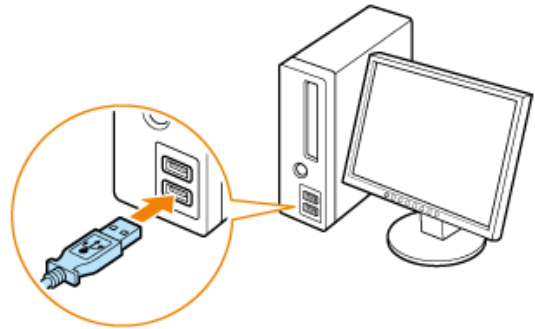

3) Start the GasLab software. In the bottom left corner select the port, then select the product and model number.

(If you are not sure which port is correct, unplug the sensor and see which option disappears. plug the sensor back in and select that port.)



4) Click Connect.



5) Select the readings you want to display in real-time. Set the interval to start auto-logging to a data file.

(If logging aborts, your computer's USB bus I/O may be too slow. Set "every" to a longer interval.)

