
Smartglasses



Solos Smartglasses User Manual




Solos AirGo 2 Smartglasses

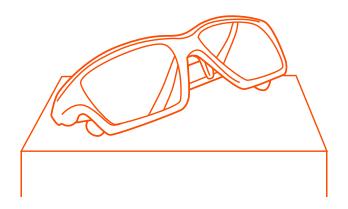

Warranty Registration

- 1. Open Solos AirGo App
- 2. Go to Setting > Profile > Warranty Registration
- 3. Tap Register Now
- 4. Enter warranty information

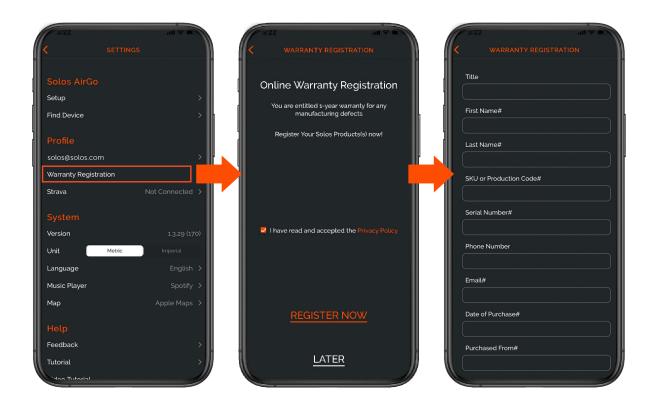




(Power On / Off


- Before power on, please confirm that the left and right temples are attached to the AirGo 2 glasses frame.
- To power on a AirGo 2, long press multi-function button for 2 seconds until Power Status voice prompt is heard, and it's LED flashes in blue color *. AirGo 2 will reconnect to last paired phone automatically.



• To power off AirGo 2, long press Multi-function button for 3 seconds until "Power Off" voice prompt is heard, and its LED * will turn off.




• AirGo 2 will power off a automatically if it is upside down for 3 minutes.

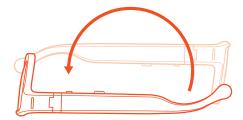




***** Bluetooth Pairing

- Long press multi-function button for 5 seconds to power on AirGo 2 until its LED flashes in red/blue color * and "Pairing" voice prompt is heard.
- Turn on Bluetooth connectivity of your phone and put AirGo 2 right next to your Phone.
- Open Bluetooth settings on your phone and select "Solos AirGo 2 xxxx". ("xxxx" is the unique device number)
- AirGo 2's LED will flash in blue color * only after it is paired to your phone. It is ready for call and music now.

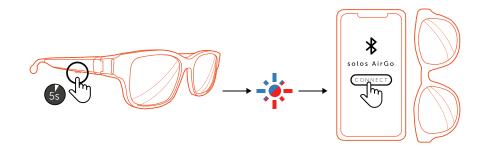


ê Operation Summary

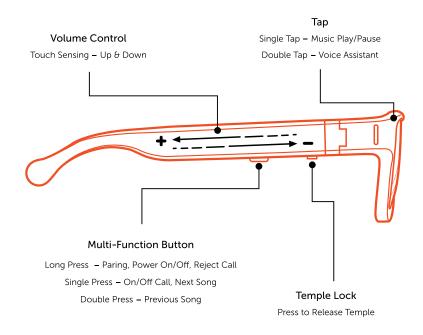




J Music Control

- To play music, ▶ single tap on the frame.
- To pause music, II single tap on the frame.
- When playing music, short press on multi-function button to play next track. ▶
- When playing music, short press on multi-function button TWICE consecutively to play previous track. ▶



Phone Call

- To reject a phone call, ♥ long press Multi-function button for 1 second or slide forwards on right temple.
- To end a phone call, short press Multi-function button.





Phone Call (Call Waiting)

- To accept **\cup** the 2nd incoming phone call, short press Multi-function button. Current call will be ended.
- To reject **\circ** the 2nd incoming phone call, long press Multi-function button for 1 second




Volume Control

- To increase volume level, slide backward 5 on right temple during phone call or listen to music.
- Each slide backward or slide forward will adjust one step of the volume level.



Voice Assistant


- Double tap on the frame to enable voice assistant **9** of your phone (iOS or Android). After your double tap, you will hear the Voice assistant beep tone. You can start the voice command.
- Double tap on the frame again to end voice assistant. #





Charging

- Connect pogo pin connector of the charging cable to AirGo 2 charging port.
- Plug USB connector # of the charging cable to USB charger # or laptop.
- AirGo 2's LED shows in red color * during charging and blue color * after fully charged.
- AirGo 2 will be automatically power off when its under charging.
- When disconnect pogo pin connector from AirGo 2, AirGo 2 will power on and reconnect to last paired phone automatically.

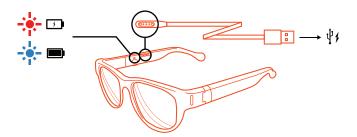

Mobile App

- AirGo mobile app uses AirGo 2 smartglasses to provide Al Care, Al Coach and many other features.
- Al Care takes care of your health with providing wellbeing features such as posture monitoring, posture/stretching exercise, personal reminders (drink water), etc.
- Al Coach calculates and coaches your jogging activities.
- AirGo mobile app is available for both iOS and Android



Solos AirGo













Tap Sensitivity

- Sensitivity of single-tap (start / stop music) and double-tap (activate Siri / OK Google) of AirGo 2 smartglasses can be adjusted through AirGo mobile app
- Follow below steps to adjust tap sensitivity

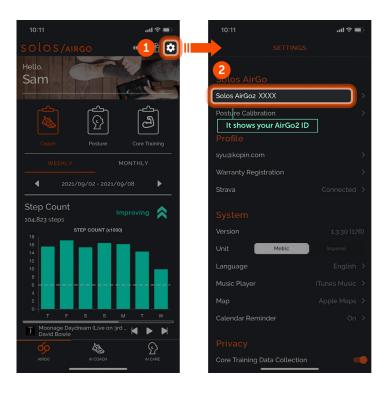


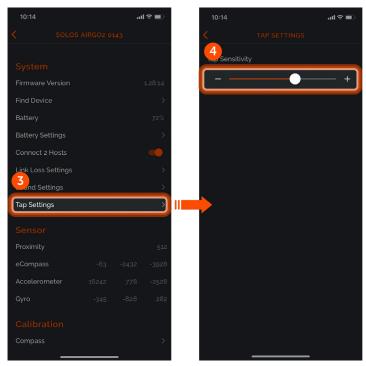




Music Equalizer

- Use 5-band Music Equalizer inside AirGo app to adjust the gain of individual frequency to personalize the music taste according to user's preference
- Follow below steps to use the Music Equalizer

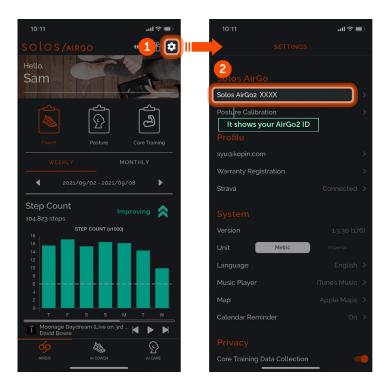

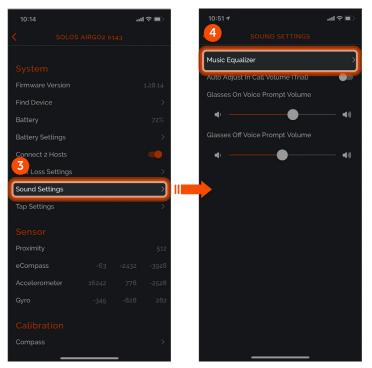






Dual Host


- AirGo 2 smartglasses supports Dual Host feature to connect to 2 host devices simultaneously,
 - e.g. iPhone and Android Phone
 - iPhone and Mac
 - Android Phone and PC
 - iPhone and iPad
 - etc.
- After AirGo2 smartglasses connects to 2 host devices, user can listen to music streaming, or receive the phone call, from either one of the connected host devices.
- Dual Host is turned OFF by default. It requires AirGo mobile app to turn it ON.
- Follow below steps to enable the Dual Host and connect to 2 host devices

Step 1 - Turn on Dual Host

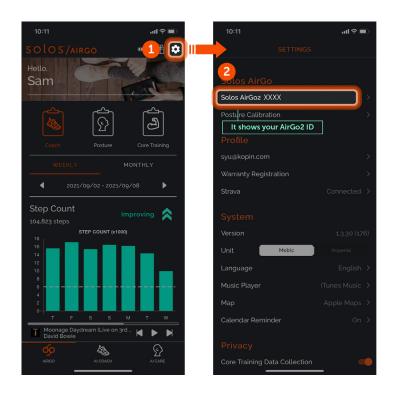







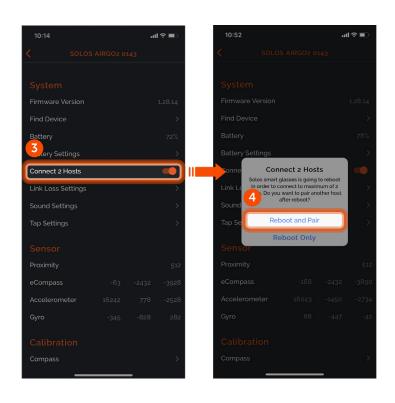

Step 2 - Pair and Connect 2nd Host Device

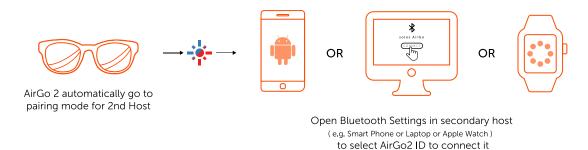

Step 3 – Manual Power Off / On AirGo2

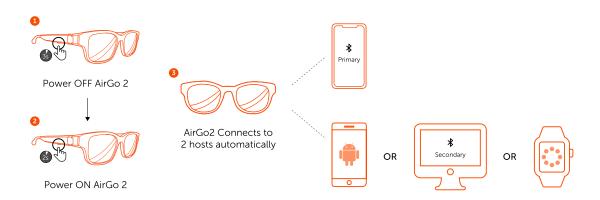



	OFF	Power off / AirGo is put on
2s	Blue color flashing in every 2 s	Waiting for Bluetooth connection to a phone
1s	Blue color flashing in every 1 s	Bluetooth connected to a phone
	Red/Blue color flashing	Pairing
FAST	Red/Blue color flashing fast	Receive incoming phone call
	Red color	Charging
	Blue color	Fully Charged