

EZ Depth DRO Installation Guide

Please read this guide before installation

Item# 35-600-4 Patent Pending

iGAGING EZ Depth DRO can be mounted to a variety of drill presses in 4 different methods:

Method 1 & 2:


For drill press with plastic collar depth road or without depth rod, please remove the plastic collar (Fig.1 & 2).

Mount the supplied collar clamp and quill bracket to the drill press collar (Fig.3)

Mount the DRO unit (Fig.4)

Method 3 & 4 (for heavy duty drill press):

For drill press with Stop Bracket, (Fig. 5 & 6) and for drill press with Offset Bracket (Fig. 7 & 8) directly mount to the Depth Stop Rod. (Fig.9) shows the rear view of DRO unit mounting.

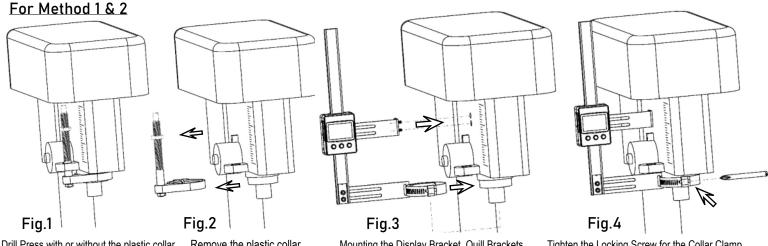


Drill Press with or without the plastic collar


Remove the plastic collar

Mounting the Display Bracket ,Quill Brackets with Collar Clamp.

Tighten the Locking Screw for the Collar Clamp

For Method 3 & 4

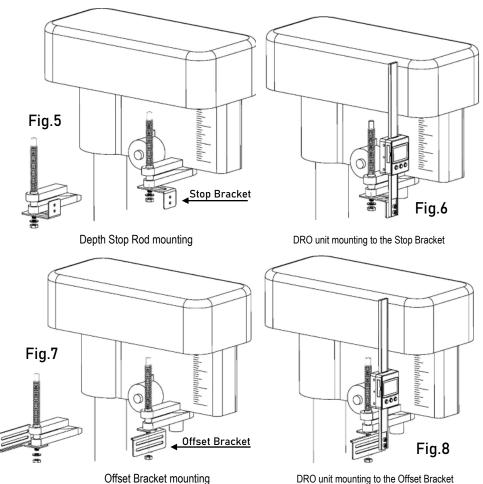

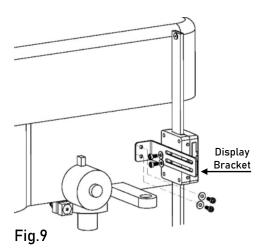

Rear view of DRO unit mounting

www.iGAGING.com San Clemente, California, USA © iGAGING 2021