



INSTRUCTION MANUAL

Model:HLC-3476L-1W

support@hoperacer.com

1(833)-969-2075

ASSEMBLY GUIDE

Congratulations, you are now the owner of the new chair!

Before enjoying the comfortable chair, you have to assemble it . This assembly guide will take you through the basic assembly process. To make sure your assembly progress goes smoothly, please follow the assembly instructions **especially the important safety information.**

It is possible to assemble the chair by your own, while having **a second person to help you will make it easier.**

Please check if there are any missing parts in the package before start. If there are any issues, please don't hesitate to drop us an email and we'll help you ASAP.

If you run into any difficulty during the assembly, remember to check out the assembly Video to see if you've missed something. If you're still unable to resolve your problems , drop us an email and our support team will assist you.

View Installation Guide:
















<https://www.youtube.com/watch?v=VD6Wf5t-h6U>




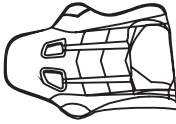


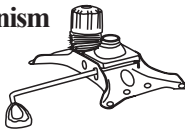WARNING

To ensure proper assembly, please follow all steps and use all parts. Failure to follow this warning can result in serious injury to yourself or others.

Package List

- Without further ado, we kindly suggest you to list all parts needed for the chair first.

<p>(1)*1 Back Cushion</p> 	<p>(2)*1 Seat Cushion</p> 	<p>(3)*2 Armrest</p> 
<p>(4)*1 Mechanism</p> 	<p>(5)*1 Gas Lift</p> 	<p>(6)*1 Base</p> 
<p>(7)*5 Casters</p> 	<p>(8)*4 Bolts</p> 	<p>(9)*8 Bolts</p> 
<p>(10)*6 Bolts</p> 	<p>(11)*6 Bolts</p> 	<p>(12)*1 Main Angle Adjuster</p> 
<p>(13)*1 Secondary Angle Adjuster</p> 	<p>(14)*1 Angle Adjuster Cover</p> 	<p>(15)*1 Angle Adjuster Cover</p> 


<p>(16)*1 Angle Adjuster Cover</p> 	<p>(17)*1 Angle Adjuster Cover</p> 	<p>(18)*1 Headrest</p> 
<p>(19)*4 Plastic Sealing</p> 	<p>(20)*1 Telescope Cover</p> 	<p>(21)*1 Wrench</p> 

Assembly Instruction

• Step 1:

Turn the Base**(6)** upside down, press the Casters **(7)** into the holes at the end of each Leg.

Insert the Gas Lift **(5)** into the center hole of the Base, the Telescope Cover **(20)** should be placed over the Gas Lift.

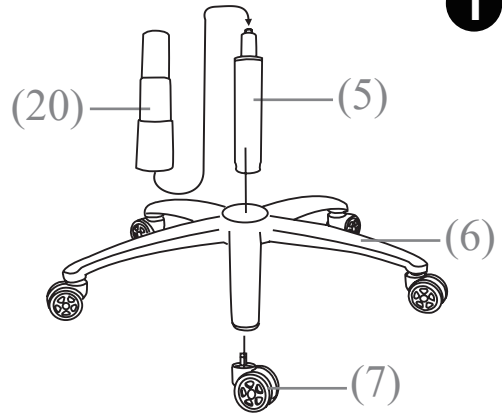


• Step 2:

Turn the Seat Cushion **(2)** upside down, push the Foot Rest out, align the hole position of the Armrest **(3)** with the pre-drilled hole position under the Seat Cushion. Attach the Armrest **(3)** to the Seat Cushion **(2)** with Three Bolts **(10)**, using the Wrench **(21)**. The installation of the other side Armrest **(3)** is the same.

Note 1: There is "Front" mark on the Seat Cushion.


Note 2: Armrests are labeled with an "L" (left) or "R" (right) to show which side they should be placed on.

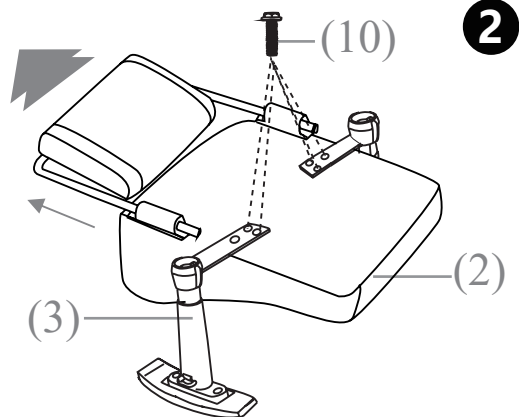

• Step 3:


Align the Mechanism (4) over the pre-drilled holes underneath the Seat Cushion (2).

Attach the Mechanism to the Seat Cushion using Four Bolts (8), tighten all the bolts with the Wrench (21).

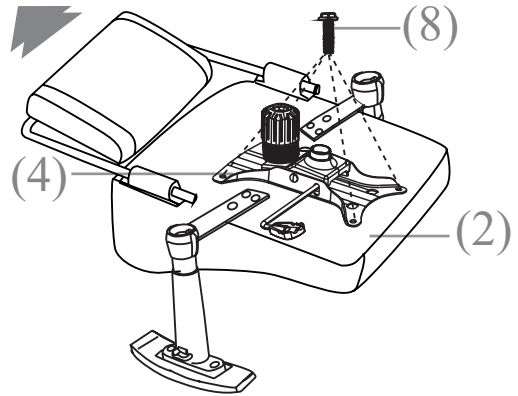

3

4

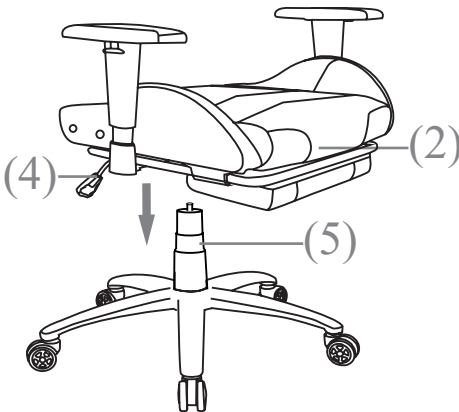


• Step 4:

Turn the Seat Cushion (2) upright and align the center hole of the Mechanism (4) over the Gas Lift (5), then push the seat cushion down onto the lift firmly until the connection is secure.

• Step 5:

Place Plastic Sealing (19) on the bottom of Main Angle Adjuster (12). Align Plastic Sealing (19) and Main Angle Adjuster (12) over the pre-drilled holes on the side of Seat Cushion (2), attach these 2 parts with two Bolts (9), using the Wrench (21).


Place Plastic Sealing (19) on the bottom of Secondary Angle Adjuster (13). Align Plastic Sealing (19) and Secondary Angle Adjuster (13) over the pre-drilled holes on the side of Seat Cushion (2), attach these 2 parts with two Bolts (9), using the Wrench (21).

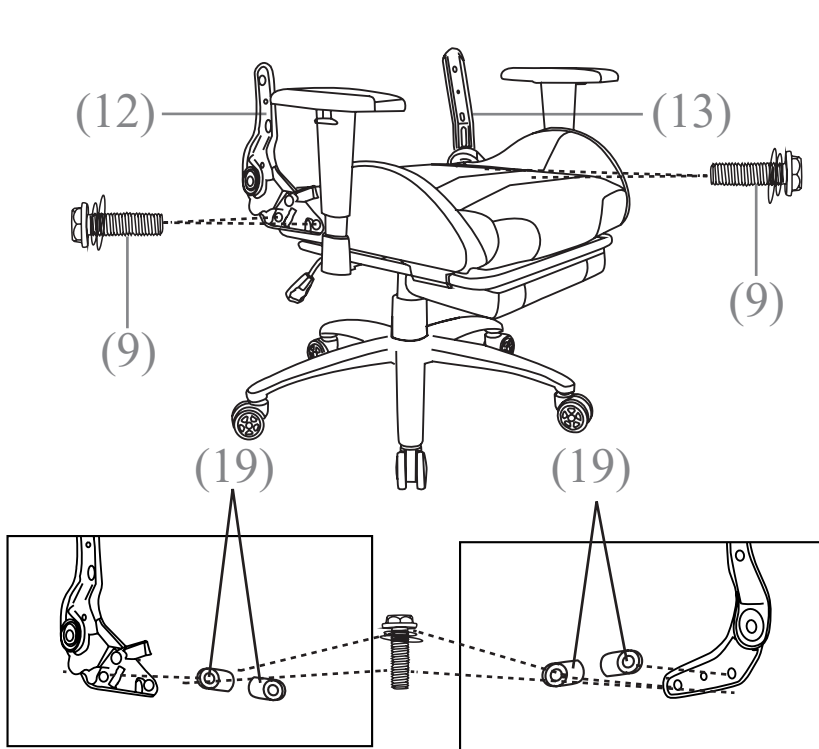

• **Step 6:**

Set the back cushion stand up. Align the bolts (9) over the pre-drilled holes, tighten all the bolts with the Wrench.


6

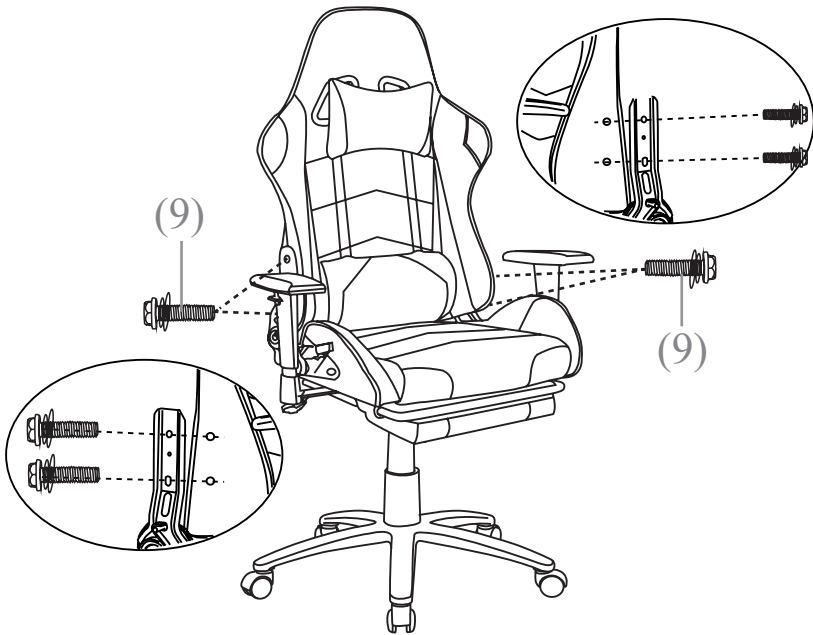

• **Step 7:**

Attach Angle Adjuster Cover (14)(16) to Main Angle Adjuster (12) with four Bolts (11), using the Wrench (21).


Attach Angle Adjuster Cover (15)(17) to Secondary Angle Adjuster (13) with two Bolts (11), using the Wrench (21).

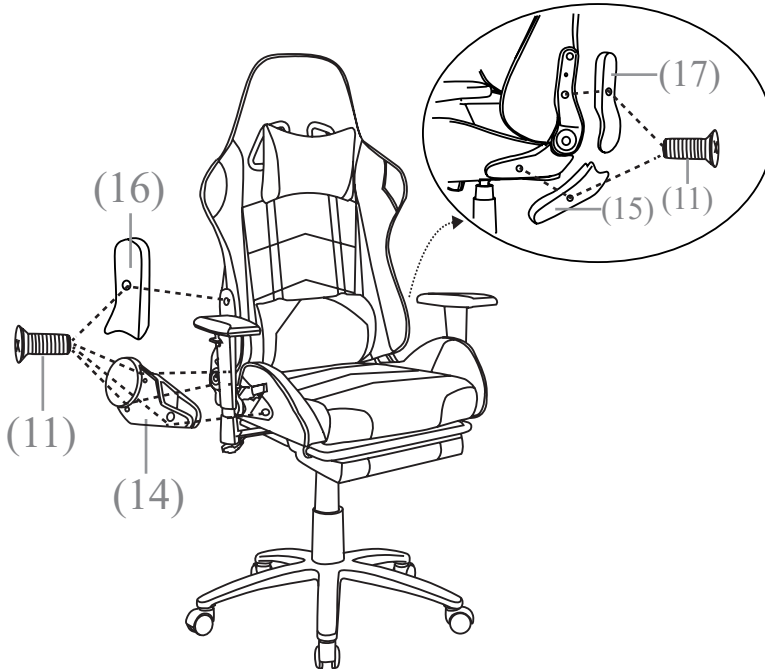

• **Step 8:**

Install the headrest **(18)** over the Back Cushion **(1)**.

8

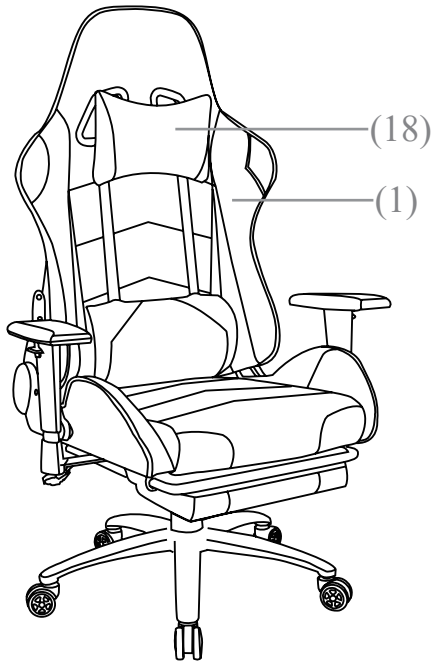


CAUTION:

Make sure all bolts and screws are fully tightened before using chair. Lubricate all moving parts and tighten all bolts/screws every 6 month or whenever needed.

Instructions For Use

1. Seat Height: Paddle-shaped lever on the right side

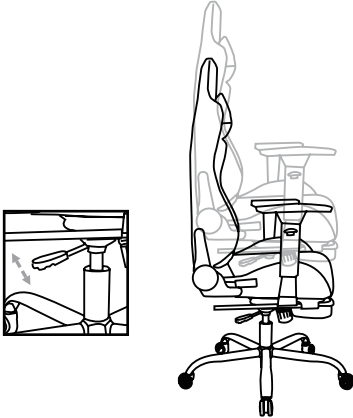

To raise:

While taking your weight off chair, lift lever up.




To lower:

While seated, lift lever up.

* At the proper height, your feet should rest flat on the floor.

2. Recline Function

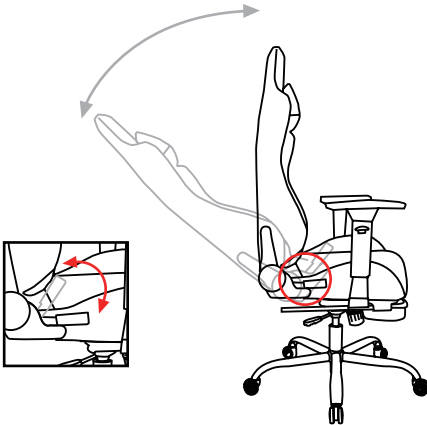

To recline:



While seated, pull lever up. Max reclining angle is 150°

To stop reclining:

While seated, pull lever down.

* Set the tilt tension to control the resistance you feel when leaning back.



3. Lifiable Armrest & Retractable Footrest

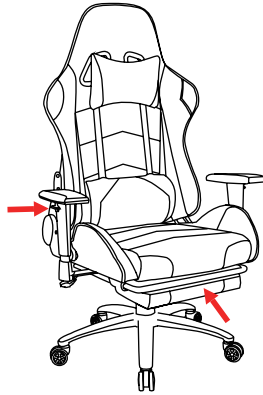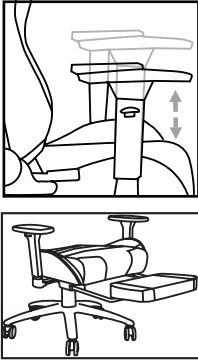

Press the button on the armrests, can lock any height you need.

Pull the Foot Rest out, then you can have a good rest.

4. Operating the tilt lockout

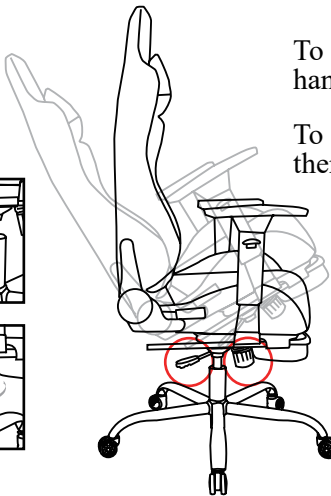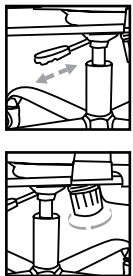

To let your chair tilt back, pull the control handle out.

To stop your chair from tilting, sit forward, then push the control handle in.



To increase tension:

Turn knob Counter Clockwise



To decrease tension:

Turn knob Clockwise

* Set the tilt tension to control the resistance you feel when leaning back.

Safety And Maintenance

- Do not stand on the chair, Do Not use the chair as stepladder.
- Use this product for seating one person at a time.
- Do not use the chair unless all bolts and screws are firmly secured.
- Avoid contact with sharp objects to prevent puncturing the fabric.
- Every 6 months, check all bolts and screws to ensure they are tight.
- To clean, spot clean only using a damp towel and mild cleaner, first test on a small, unseen area of fabric.
- Chair weight limit not to exceed 250 lbs.

Safety Information



Sit in the center of the chair, with your back to the backrest



Do not sit at the front edge of the chair



Do not stand on the chair



Do not use the chair with more than one person



Do not push the chair around when a person is sitting in it



Do not push down on the backrest when a person is reclined



Do not place all your weight on only the backrest

Limited Warranty

The producer promises to repair or replace any chair that is found to be defective in material or workmanship within one(1) and year from the date of original purchase so long as you, the original purchaser, still owns it. This is your sole and exclusive remedy. This warranty is subject to the provisions below.

EXCLUSIONS:

- This warranty does not apply and no other warranty applies to:
 - Normal wear and tear, which are to be expected over the course of ownership.
 - Misuse, abuse or excessive use of the product.
 - Modifications or attachments to the product that are not approved by the manufacturer.
 - Products that were not installed, used, or maintained in accordance with product instructions and warnings.
 - Products used for rental or commercial purposes.
 - Damage caused by the carrier in-transit is handled under separate terms.

SEATING USAGE:

Normal use for seating is identified as the equivalent of a single shift, forty- (40) hour workweek. To the extent that a seating product is used in a manner exceeding this, the applicable warranty period will be reduced in a pro-rata manner.

Some retailers might have custom models imported direct from the factory and therefore are not supported by our local service team because we don't have the correct parts, please contact your retailer directly for support. If you have any questions about that we will be happy to assist and identify those items.

RETURN POLICY:

We adopt a 30 days return policy which means that all products purchased on this website may be returned to us within the timeframe. You need to contact us within 30 days after the product(s) came into your possession and the product(s) must be returned to us without any undue delays.

Returned products must be returned in the same condition as they were sent and they must be sent in its original packaging.

If the product is not faulty, (i.e. if you changed your mind or if you are unhappy with the product for some other reason), the cost of shipping will all on you. And it is your responsibility that the package arrives safely to us so we recommend that you use a courier service where it is possible to track the shipment.

If the product is faulty when you receive it please contact us and we will help you out (see more information under Manufacturer Warranty).

We reserve the right to give a partial refund in cases when the product(s) is not in an unused condition, is damaged or have missing parts not due to our error.

HOW RETURNS WORK:

Contact us through the contact form on our website and attach the invoice to the message as a proof of purchase. And please also write the reason for return.

We will then get back to you as soon as possible with information on where to send the product(s).

As soon as we have received the product(s) and made an inspection we will inform you of our decision.

If a refund is approved we will automatically credit the purchase to your credit card or original method of payment.

If the product(s) is damaged, not in its original condition or missing parts we will inform you if you are eligible for a partial refund. This is decided from case to case depending on the severity of the damages or what parts are missing.



support@hoperacer.com

1(833)-969-2075