


TOILET SEAT FIXING KIT

EASY INSTALLATION

1. Keep the locking piece up near the large white tabs at the top of the handles. Do not push the locking piece down onto the handle teeth at this stage.
2. Tilt the metal toggle so that it is lying flat against the white handles, then push the metal toggle through the hole in the pan.
3. With the metal toggle now underneath the pan, realign the handles so that the metal toggle is sitting flat underneath the pan hole.
4. Pull the handles upwards, whilst pushing the locking piece down into the pan hole.
5. Press handles away from each other, breaking the handle flush with the locking piece. Trim excess if required. The metal toggle should now sit firmly against the bottom of the pan, providing a secure nut for the bolt to be screwed into.

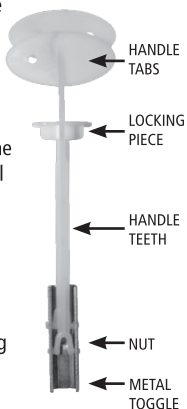

A family
owned
Australian
business

Quality Assured Products
FIX-A-TAP has been providing
Australians with quality plumbing
products since 1972.

Ausnew Home Care Service

Suite 1/88 Rooty Hill Rd North, Rooty Hill NSW 2766 Australia

ABN : 31 620 493 941

Phone: 291596183

Email support@ausnewhomecare.com