




TASER StrikeLight User Manual



Model 38000

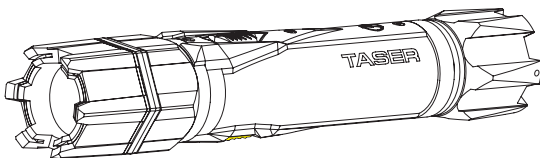

IMPORTANT SAFETY INSTRUCTIONS

Read all warnings and instructions. Save these Instructions.


The most up-to-date warnings and warranty information are available at www.axon.com

The most up-to-date instructions are available at <https://buy.taser.com/apps/help-center>

MMU0048 Rev: C

Important TASER Product Safety and Health Information

These safety warnings are for your protection as well as the safety of others. Disregarding this information could result in death or serious injury.

 WARNING	
	Read and Obey Significant differences exist between different TASER products. Do not use or attempt to use any TASER product unless you have read, understood, and are following all current instructions, warnings, and relevant TASER training materials before using the product. Failure to do so could increase the risk of death or serious injury to the user or others.
	Obey Applicable Laws Use of stun devices must be legally justified and comply with applicable federal, state, and local laws and regulations.
	Store In A Secure Location Store the StrikeLight stun flashlight in secure locations inaccessible to children and other unauthorized persons to prevent inappropriate access or use. The StrikeLight stun flashlight is a weapon and not a toy.
	<div data-bbox="502 664 930 802"> WARNING<ul style="list-style-type: none">• Can cause death, serious injury or pain.• Obey all warnings, instructions and all laws.• See www.axon.com.</div>

For a complete list of product warnings, go to www.axon.com.

What is the TASER StrikeLight Stun Flashlight?

The TASER StrikeLight is a flashlight that also can produce an electrical arc and be used as a stun weapon.

Ownership

Taking a TASER brand flashlight with a stun capacity out of the United States (U.S.) without the proper export license is prohibited by U.S. law (similar prohibitions may exist in other countries).

Do not point the device at any law enforcement officer or do anything that would cause law enforcement officers to feel threatened by your use of the device.

The StrikeLight stun flashlight is a defensive weapon and should be treated accordingly. When used as directed, stun devices are weapons designed to provide a force option that may temporarily repel a person while reducing the likelihood of death or serious injury. The stun function of the StrikeLight stun flashlight is not designed to cause incapacitation like some other TASER products. Any use of force, including the use of a stun device, can cause physical pain or exertion and involves risks that a person may get hurt or die. For a full list of warnings, see the product warnings.

The flashlight's arcing feature is to be used only for lawful purposes, including lawful self-defense or in the defense of others. Check your state and local laws for applicable regulations. Depending on local and state laws, the device may be kept in the house for home protection, or carried in a car, a purse, or a backpack for personal protection when you are away from home. Be sure to research each state's applicable laws prior to possessing or transporting the device, including laws concerning transporting the device across state lines and into other states

where laws may vary. For a list of known laws related to stun devices and conducted energy weapons, go to buy.taser.com.


Basic Self-Defense Flashlight Electrical Theory

- The front of the flashlight must be in contact with the attacker for electricity from the stun function to be delivered.
- Electricity will generally not pass to others in contact with the attacker.

Congratulations on Purchasing your StrikeLight Stun Flashlight. Read this Section to Start Using your StrikeLight Stun Flashlight Quickly.

Your StrikeLight package includes the following components:


StrikeLight Stun
Flashlight
(With Battery Installed)

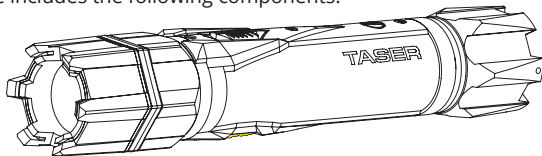

Wrist Strap

Quick Reference

Get to Know the StrikeLight Stun Flashlight

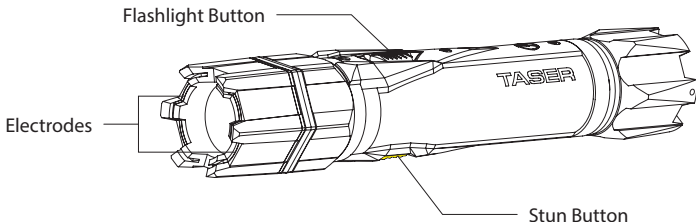

Flashlight Button


Move the flashlight button to the forward (ON) position to turn on the flashlight. Turning the flashlight on also places the electrodes in standby status. Move the flashlight button to the rearward (OFF) position to turn off the light and turn off the electrodes.

Stun Button

After turning on the flashlight, press and hold the stun button to make electricity arc at the electrodes on the front of the device. Press and hold the stun button when applying a contact stun (drive-stun) to an attacker. The device will arc continually until you release the stun button or the battery depletes, whichever comes first.

Electrodes

When you press the stun button, electricity arcs (sparks) from the electrodes.

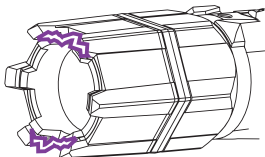

Battery

The flashlight has a type 18650, 2600 mAh lithium polymer battery. The battery can be removed for recharging or replacement. See *Replacing the Battery* and *Recharging the Battery* for more information.

Contact Stun (Drive-Stun) for Self-Defense

When practicable, avoid intentionally targeting the stun device on sensitive areas of the body such as the face, eyes, head, throat, chest area (area of the heart), breast, groin, genitals, or known pre-existing injury areas.

A TASER StrikeLight stun flashlight is not a substitute for other preventive self-protection actions such as ensuring doors are locked, and parking in well-lighted areas.

To contact stun an attacker, perform these actions:

- 1 Move the flashlight button to the forward (ON) position.
- 2 Press the stun button.

- 3 Drive the electrodes into the attacker.
 - When using a contact stun, push (drive) the front of the flashlight firmly against the body of the attacker. The subject is likely to recoil from the painful shock and try to get away from the stun electrodes. It is necessary to aggressively drive the front of the flashlight into the attacker for maximum effect.
 - If the contact stun is not effective, evaluate the location of the contact stun and consider an additional cycle to a different pressure point, consider alternative force options, or consider fleeing from the attacker.

Function Test

A function test should be done every 30 days. The function test is done to verify that the device is working properly.

To perform a function test:

- 1 Point the flashlight in a safe direction.
- 2 Move the flashlight button to the forward (ON) position.
- 3 Confirm that the light is strong.
- 4 Press the stun button.

View the electrical arc from the top or side of the flashlight. Do not point the flashlight at your face or have it near your face.


- 5 Release the stun button.
- 6 Move the light switch to the rearward (OFF) position.

Flashlight Maintenance and Care

The **TASER StrikeLight** stun flashlight is a sensitive electronic piece of equipment, and should be handled with care. Avoid dropping and do not use a device that has visible damage.

Replacing the Battery

- 1 Ensure the flashlight button is in the rearward (OFF) position.
- 2 Point the flashlight in a safe direction.
- 3 Remove the battery cap by unscrewing it from the end of the flashlight.
- 4 Remove the battery.

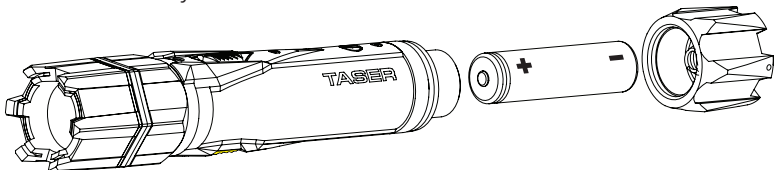

- 5 Install the new battery.

Recharging the Battery

WARNING

This procedure should be performed only with batteries designed to be recharged.

- 1 Perform steps 1–4 in *Replacing the Battery*.


- 2 Use a battery charger to recharge the battery.

Dropped or Wet Device

Do not immerse the device in water. Avoid exposing the device to rain. Do not let water splash on the device. The device is not waterproof or water-resistant.

If your device is dropped or gets wet, do not try to use it until you have performed these instructions successfully:

- 1 Point the flashlight in a safe direction and away from your body.
- 2 Remove the battery cap by unscrewing it from the end of the flashlight.
- 3 Remove the battery.

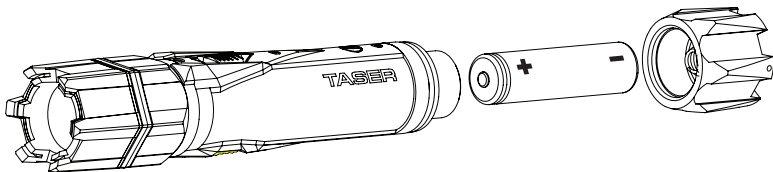

Dry the device and battery thoroughly (at least 24 hours). Do not use an external heat source such as a microwave oven or hair dryer.

- 4 Safely reinstall the battery.
- 5 Point the flashlight in a safe direction and away from your body.
- 6 Perform a function test. Go to *Function Test* for instructions. If the device does not work properly, do not use it.

Product Support

If you need product support or have any other questions, please contact customer service at:

team@taser.com

U.S.: 1.800.978.2737 or 1.480.905.2000

International: +1.800.978.2737 or +1.480.905.2000

To return a TASER product for service, first follow the procedures at buy.taser.com.

If the TASER device has been exposed to bodily fluids or other biohazards, contact Axon's service department at +1.800.978.2737 or +1.480.905.2000 for specific instructions BEFORE returning the weapon.

Product Returns

To return a TASER product for service, go to buy.taser.com.

Legality

Because state and local laws may change, it is your responsibility to research your applicable state and local laws prior to selling, transferring, possessing, transporting, or using a TASER CEW.


Warranty

Please see the product warranty which came with your flashlight. Axon's product warranties are also available on www.axon.com.

Warnings

Please see the product warnings which came with your flashlight. Product warnings are also available on www.axon.com.



Axon, StrikeLight, TASER, and  are trademarks of Axon Enterprise, Inc., some of which are registered in the US and other countries. For more information, visit www.axon.com/legal. All rights reserved. © 2019 Axon Enterprise, Inc.

MMU0049 Rev: C