


# Sticklers™ Cassette CleanClicker™ and Cassette CleanClicker™ MT Ferrule End-Face Cleaners


## Product Features

- Micro-woven cleaning ribbon provides high absorbency while trapping dust particles
- Lint-free cleaning ribbon
- Manual advance cleaning wheel enables operator to get more cleaning than traditional shutter and trigger-style cassette cleaners
- Disposable cassette cleaner with main body made from anti-static materials
- Compact size for easy handling


## Cleaning Applications

- Carrier Networks
- Enterprise Networks
- Cable Assembly Production
- R&D and Test Labs
- Network Installation Kits

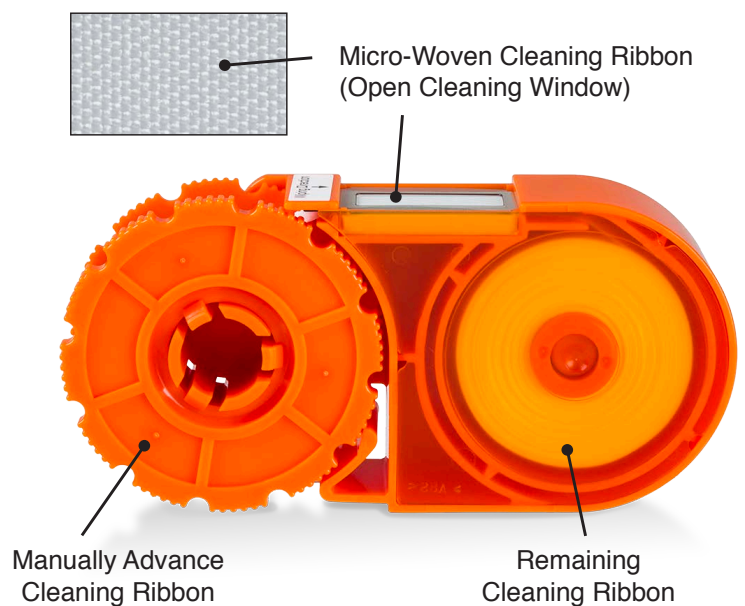

PACKAGING	
Part Number	Cassette CleanClicker™ MCC-CCWRC
Part Number	Cassette CleanClicker™ MT MCC-CCWMT
Package Dimensions	115mm L x 25mm W x 55mm H
Case Dimensions	190mm L x 127mm W x 127mm H
Case Quantity	10 Cassettes / Case
GHS/HCS Pictogram	Not Classified
Recycle Symbol*	

\*Per: 94/62/EC and 97/129/EC

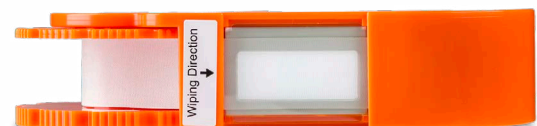

### Cassette CleanClicker™ (MCC-CCWRC)

Cleans SC and LC duplex, ST, FC, E2000 and female (no guide pins) MPO cable assemblies



### Cassette CleanClicker™ MT (MCC-CCWMT)

Cleans male (with guide pins) MT ferrules

## Sticklers™ Cassette CleanClicker™ conform to the following Fibre Optic Industry Standards:

INDUSTRY STANDARDS	SECTION	DESCRIPTION
ANSI/TIA 455-240 2009		Fibre Optic Connector End-Face Cleaning Evaluation
ANSI/TIA 568.3D-2016	E.3.5	Connector End-Face Cleaning
ARINC 805-4		Fibre Optic Test Procedures
ARINC 806-5		Fibre Optic Installation & Maintenance
AT&T ATT-TP-76461		Inspecting & Cleaning End-Faces
Cisco Systems Doc: 51837		Inspecting & Cleaning Procedures for Fibre Connectors
IBM SY27-2597-15		Cleaning End-Faces for Maintaining Fibre Links
IEC 61300-3-35	5.3	End-Face Cleaning
IEC 61627-1	9.3	Procedure Cleaning w/ Reel Type Cleaners
IEC 62627-1	7.2	Acceptable Reel Type Cleaners
IPC 8497-1	7.3.2	Dry Wipes and Cassette End-Face Cleaning
IPC 8497-1	10	Minimizing Electrostatic Charge Effect
NASA-STD 8739.5A	8	Cleaning Workmanship Standards
SAE AIR6031		End-Face Cleaning
SAE ARP 6283	8.4	Approved Cleaning Equipment
SAE ARP 6283	9.1.1	Wet-Dry Cassette Cleaning
Telcordia GR2923 CORE Issue 2		End-Face Cleaning
Verizon VZ.TRP.9461	5.0	End-Face Cleaning

### When You Need Perfectly Clean Splices & Connectors™



[SticklersCleaners.com](https://www.sticklerscleaners.com)



Follow Us!

#### MicroCare, LLC

595 John Downey Drive  
New Britain, CT 06051 USA  
Tel: +1 860 827 0626  
Toll Free: 1 800 638 0125  
Email: TechSupport@MicroCare.com

#### MicroCare U.K. Ltd

Unit 4, Whitehall Court  
Leeds  
LS12 5SN UK  
Tel: +44 (0) 113 3609019  
Email: MCCCEurope@MicroCare.com

#### MicroCare Asia Pte Ltd

102E, Pasir Panjang Road  
Citilink, #05-06  
Singapore 118529  
Tel: +65 6271 0182  
Email: TechSupport@MicroCare.sg



For more information  
and to download SDS  
visit our website:  
[SticklersCleaners.com](https://www.sticklerscleaners.com)