
NIGHT LIGHT ALARM CLOCK

LEGACR





USER MANUAL

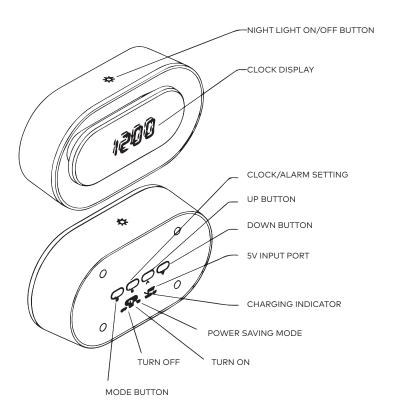

Features

- · Light sensor automatically adjusts the brightness of the display
- Date and time switching display
- Stepless dimming night light, capacitive touch ON/OFF
- · Sleep mode, night light gradually dims and turns off
- Alarm function
- · Snooze mode
- 12 / 24 Hours display

Specifications

- Rated working voltage: DC5V
- · Rated working current: 700mA
- Product rated power: 3.5W
- Power supply mode: built-in rechargeable lithium battery or using power DC 5V
- LED colour temperature: 4000K

Product charging and user guide

- To charge the product, use the supplied USB cable plugged into a
 power source and the indicator light will turn red. The indicator
 light will turn off when fully charged. Lo" will flash on the display
 when the product is low in power and needs to be charged, to
 prevent the clock from being reset due to low battery.
- 2. Button functions:
 - Toggle switch: When the switch is turned to "OFF", the night light is off and the clock enters into standby mode. When the switch is turned to "ON", the display screen is on, and all functions are operable. When the switch is turned to "PS", the display screen is off and enters into power saving mode.
 - **Button: Touch turn ON/OFF night light, touch and hold for stepless dimming. In Power Saving mode a touch wakes the display and automatically turns off after 30 seconds, touch twice to illuminate the night light, touch once more to turn off the night light.
 - \mathbf{Mode} $\mathbf{Button}:$ Press to cycle the "year-month day-time" display.
 - Setting button: Press to enter alarm setting; press and hold for 2 seconds to enter date / time setting.
 - A Up: Press and hold for 2 seconds to switch 12/24 hours. Once selection is made, press and hold for 2 seconds to confirm selection.

When setting the time, date and alarm, press this button to add value step by step, press and hold this button to add value quickly.

 V Down: Press to decrease the value step by step, press and hold to minus the value quickly.

3. Function setting:

- Date / Time setting: press and hold the "S" button for 2 seconds and you will hear a "tick" sound. "Year" flashes. Adjust the number through the "A" and "V" buttons. After adjustment, press the "S" button to enter the "month" repeat steps for "day—hour—minute" adjustment. After setting the minute, press the "S" button to exit the setting mode. If there is no operation for 10 seconds during the setting, the system will exit the process.
- Alarm setting: press the "S" button once to display oFR1 (continue pressing to select oFR2, oFR3), R1, R2, R3 are the 3 alarms, and oF indicates that the alarm clock is off, press the "A" button to turn on the alarm and "onR1" will now be displayed. Press and hold the "S" button for 2 seconds to hear the "tick" sound to enter the alarm clock setting. First, set the "Hour" setting, adjust the number with the "A" and "V" buttons, press the "S" button again to switch to the "minute" setting, and press the "S" button to exit after the time is set.

When the alarm rings, touch any button to turn off. If there is no operation the alarm lasts for 1 minute and will automatically enter into snooze mode for 9 minutes. Press any button to turn off snooze. After 9 minutes the alarm will sound again. After 3 times, the alarm will turn off automatically.

- Night light setting: Press *button to turn ON/OFF night light.
 Once the light is on, press and hold the *button to adjust the brightness. The clock will keep the last setting when turned on.
- Hours system setting: The default is a 24h hours system. In the time display state, press and hold "A" button to enter the hours system setting, and press "V" button to switch between the 12h / 24h hours system.
- Press and hold the "M" button to enter the sleep mode. The light flashes twice. In sleep mode, the night light will slowly dim until it is off, this takes about 30 minutes.

Cautions

- 1. This product is for indoor use only.
- 2. Please switch the power switch to OFF position if it is not used for a long time.

Packing Includes

- 1. USB cable x 1
- 2. Instruction manual x 1



Liquid Ears™

PO Box 5658 Brendale QLD Australia 4500 Customer Support 1800 812 261

www.liquidears.com

DESIGNED IN AUSTRALIA



