


Am.MOS®

IIIV



BEFORE
USING PRODUCT

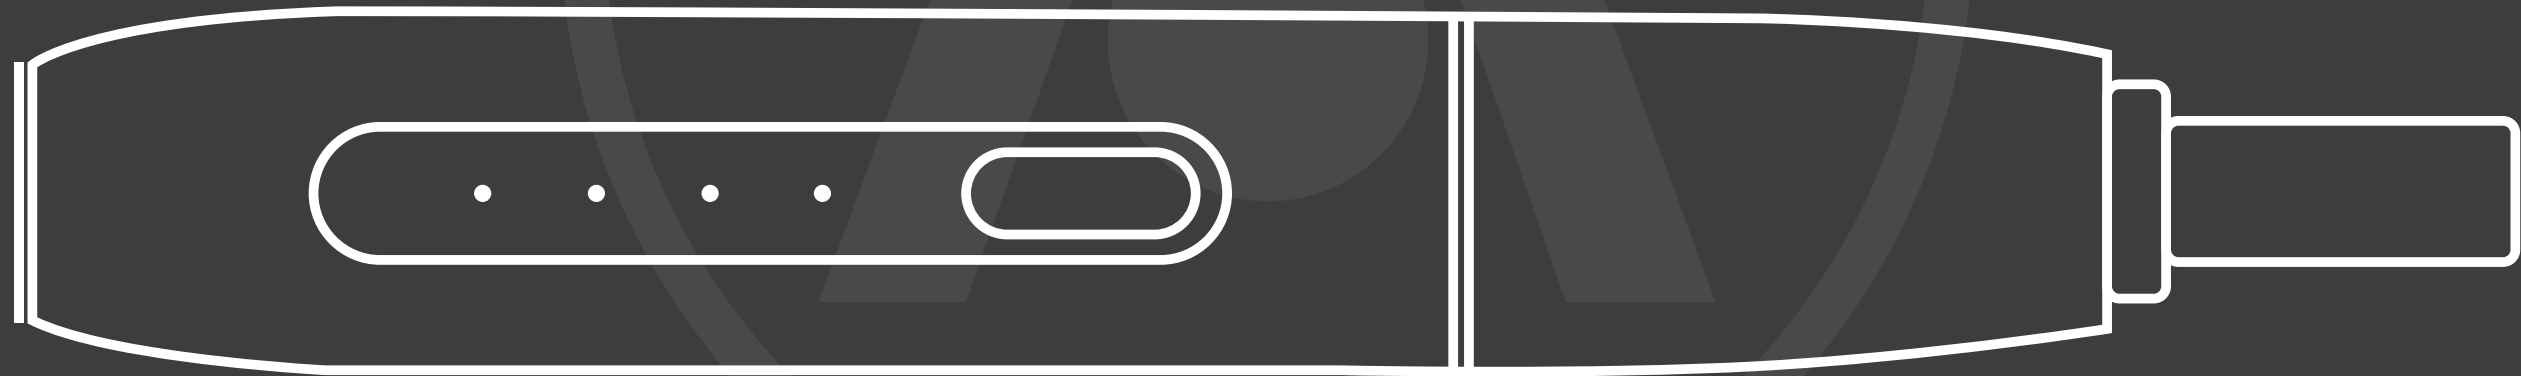

PRODUCT MANUAL

CAUTION

ATMOS NATION, LLC., STRONGLY RECOMMENDS THE USE OF ORIGINAL ATMOS CHARGERS DESIGNED FOR THIS PRODUCT. INCOMPATIBLE CHARGERS MAY BE A FIRE HAZARD. USE OF ANY CHARGER WITH INCOMPATIBLE VOLTAGE SHALL VOID ALL WARRANTIES. TO PREVENT OVERHEATING, ATMOS PRODUCTS SHOULD BE CHARGED FOR A MAXIMUM OF FOUR (4) HOURS OR UNTIL THE APPROPRIATE INDICATOR ON THE CHARGER SHOWS A FULLY CHARGED BATTERY, WHICHEVER OCCURS FIRST. ATMOS PRODUCTS SHOULD NEVER BE LEFT UNATTENDED OVERNIGHT, OR ON ANY FLAMMABLE MATERIAL SUCH AS A RUG, BED, ETC., WHILE ON A CHARGER.

TABLE OF CONTENTS

Limited Warranty, Terms and Conditions	page 03
Introduction	page 05
In The Box	page 06
LIV Specifications	page 07
Charging the LIV	page 08
Preparing the LIV	page 09
Using the LIV	page 10
Cleaning and Maintenance	page 11
Warnings	page 12
More Information	page 13
International Shipping	page 14
Battery	page 15

LIMITED WARRANTY TERMS AND CONDITIONS:

ALL SALES ARE FINAL

For registration, warranty policy and all other information, please visit our website at www.atmosrx.com or call toll free 1-855-442-8667.

ATMOS NATION, LLC. WILL NOT BE HELD RESPONSIBLE FOR ANY SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES BY THE USE OR MISUSE OF OUR PRODUCTS (INCLUDING, BUT NOT LIMITED TO, THE REPLACEMENT OF ANY CARPET OR PERSONAL PROPERTY) AND IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY INAPPROPRIATE, INCORRECT, OR IRRESPONSIBLE USE OF OUR PRODUCTS. THE USER AGREES TO ACCEPT FULL RESPONSIBILITY FOR ALL SUCH RISKS AND TO NOT HOLD ATMOS NATION, LLC., ITS DISTRIBUTORS OR RETAILERS (INCLUDING BUT NOT LIMITED TO OWNERS AND EMPLOYEES) RESPONSIBLE FOR ANY INCIDENT, INJURY TO PERSONS, OR DAMAGE TO PROPERTY CAUSED BY MISUSE OF THE PRODUCT.

USE ONLY AS DIRECTED

Vaporizers are not medical devices and are not intended to diagnose, cure, treat or prevent any diseases or other conditions. If you have any health problems, please consult your doctor before using any AtmosRx products. AtmosRx vaporizers are not intended to administer medicinal or illegal products of any kind. An individual must be eighteen years of age or older to purchase vaporizers or vaporizer accessories. Do not allow children, women who are pregnant or breast feeding, or those with life threatening illnesses to use our devices.

INTRODUCTION


The Atmos LIV Vaporizer brings a new level of quality to wax and oil vapers everywhere. This innovative vape device is compatible with a variety of products for greater convenience. With four variable voltage settings to suit your vaping style, the versatile LIV Vaporizer offers the optimal vape experience for whatever you enjoy, complete with a pre-heat mode and haptic vibration functionality to let you know when the device is ready to use. With its intuitive one-button operation, the LIV Vaporizer makes it easier than ever to enjoy your favorite vape products. Enjoy the superior standard set by Atmos with the LIV Vaporizer.

To ensure peak performance and the safety of your LIV Vaporizer, please read this entire manual before using your device.

IN THE BOX



1 – LIV Vaporizer

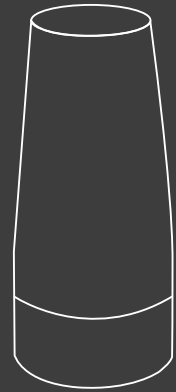


1 – Housing Attachment




1 – Waxy Chamber



1 – 1mL Oil Chamber

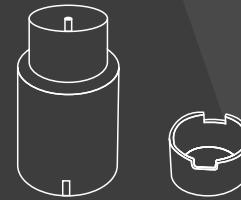

2 – Magnetic 510 Adapters

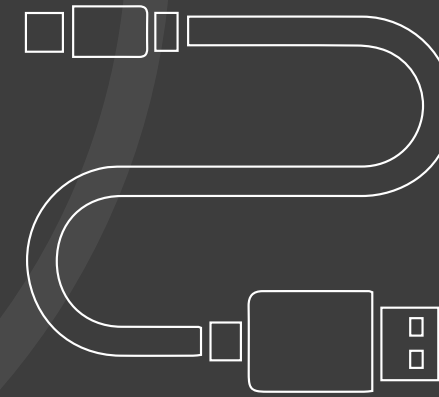

1 – USB Charging Cable



1 – Packing Tool

LIV SPECIFICATIONS

SIZE	4.4in*0.8in*2.4in (Length/Width/Circumference)
CAPACITY	450mAh
VOLTAGE	3A output, 3.4V/3.6V/3.8V/4.0V
LOCK/UNLOCK	Press Power Button (5) Times Consecutively
CHANGE VOLTAGE SETTINGS	Press Power Button (3) Times Consecutively
PRE-HEAT FUNCTIONS	Press Power Button (2) Times Consecutively or Press and Hold
BATTERY LOW	Lights Blink (10) Times.
TURN ON/OFF VIBRATION	Press (4) times consecutively. This only applies to manual use, not the pre-heat function

CHARGING THE LIV

- When the LIV's battery is running low, the light will blink (10) times consecutively.
- The LIV can be charged through the micro-USB connection located on the bottom of the device.
- When attached to the charger the LED will glow red. Once fully charged, the light will stop shining.
- For its initial charge, charge the LIV for (2) hours. This conditions the battery for future life-span.

PREPARING THE LIV

- To use your Oil or Wax chamber with the LIV Vaporizer, begin by unscrewing the housing attachment.
- For the Waxy chamber, use the included packing tool apply your wax product to the heating chamber. Do not over-pack the heating chamber as this can block the airflow of the device and cause a decrease in performance.
- The Oil chamber can be filled according to your preferred method. Please fill the Oil chamber to no more than approximately 80% the chamber capacity for optimal performance. Do not fill the center channel of the Oil chamber as this is intended for the chamber's airflow.
- Next, you'll attach your Waxy or Oil Chamber to the included magnetic adapter. For more information on our Chamber attachments, turn to page 13. Magnetic adapters come in 2 sizes, small and large.
- With the magnetic adapter on your Chamber, attach the Chamber to the LIV Battery device. Slide the Housing Attachment over the Chamber, and screw it into place. Your LIV device is now ready for use.
- To adjust your Chamber to a desired height, simply swap out the magnetic adapter.

USING THE LIV

- Once your chamber is attached to the LIV Vaporizer Battery, press the power button (5) times in rapid succession. The device will vibrate briefly to let you know it is on. To turn the device off, repeat this process, and the device will vibrate briefly again before turning off.
- The LIV Vaporizer is a variable voltage device. Press the power button (3) times in rapid succession to switch between voltage settings. The current setting is shown by the (4) indicator lights on the face of the battery, under the power button. Choose your desired voltage based on your product type, amount in the chamber, and ideal session experience.
- When operating the device, press and hold the power button and smoothly draw from the chamber.
- To maintain peak performance, the device has a (10) second maximum puff duration. The power button will blink (10) times when the maximum puff duration has been met.
- For wax products it is recommended to pre-heat your LIV Vaporizer device. To use the pre-heat function, press the power button (2) times, and it will remain on with a continuous vibration. The battery's lights will shine continuously to show it is active. The device will return to an idle state automatically after (10) seconds.

CLEANING AND MAINTAINING

To ensure peak performance, the LIV should be cleaned regularly after extended use.

- **Ensure that the LIV is off and that the device has completely cooled before cleaning.**
- **The LIV Vaporizer housing and connections can be cleaned gently with a wipe, cotton swab, or non-abrasive rag with rubbing alcohol.**
- **Be sure to regularly clean the connections on both the battery and chamber for your vape products, as well as on the magnetic adapters to ensure a consistent, secure connection.**

WARNINGS

Caution: While using the LIV, portions of the device may reach high temperatures. Wait until the device has completely COOLED before handling the mouthpiece and heating chamber.

Do Not clean or disassemble the LIV Vaporizer until all portions of the device have cooled completely.

Do Not immerse the LIV Vaporizer in liquid of any kind. This can damage the heating element or otherwise potentially harm the device.

Do Not over-pack the heating chamber as this can block the airflow of the device and can damage the device.

Do Not modify the LIV Vaporizer in any way. Doing so will void the warranty.

Do Not leave the LIV Vaporizer unattended while charging.

Do Not charge or store the LIV Vaporizer near a fire source or an extremely hot environment.

Do Not pierce or damage the LIV's housing in any way.

MORE INFORMATION

Oil Chamber – 1mL: Our 1ml Oil Chamber is equipped with a unique ceramic heating element and mouthpiece to give users unrivaled purity in flavor with their oil products. This design is complemented by its smart airflow system and anti-leak composition, and is easy to fill.

Waxy Chamber: Our LIV Vaporizer Kit includes a durable metal Waxy Chamber. This Chamber includes a powerful quartz heating chamber for balanced wax vaporization, and uses a magnetic adapter for easily attaching to your LIV Vaporizer Battery. Apply your wax product with an Atmos packing tool.

INTERNATIONAL SHIPPING

All International shipment fees, including but not limited to warranty items are the sole responsibility of the purchaser. All international shipments are subject to duties and fees when crossing borders. Generally, brokerage fees will be required and customs may impose duties and taxes based on the value of the goods. The payment of duties and taxes are the responsibility of the purchaser/importer. Please be advised that these fees are normal and are often times applied to shipments that ship internationally. We currently do not offer shipping to APO/FPO/DPO Boxes.

BATTERY

Your device is powered by a rechargeable lithium ion battery. Use only Atmos Nation approved batteries and recharge your battery only with Atmos Nation approved chargers designed for this device. Unplug the charger from the electrical outlet and the device when not in use. **DO NOT** leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. Avoid extreme temperatures. Always try to keep the battery between 15° and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

BATTERY (cont.)

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Atmos Nation takes recycling seriously. Please contact Atmos Nation in order to properly recycle used batteries. Do not dismantle, cut, open, crush, bend, or puncture batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help. Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, please send it to Atmos Nation for inspection prior to continuing use. Never use any charger or battery that is damaged.