




# USER MANUAL

## SpaceView Pro Baby Monitor

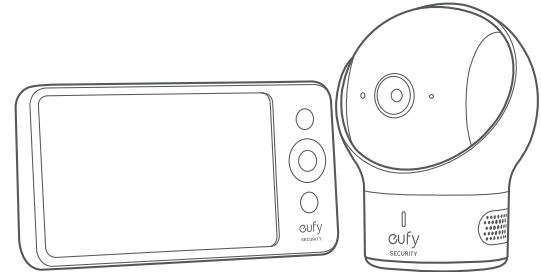

Anker Innovations Limited. All rights reserved. eufy Security and eufy Security Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

English

01


Español

14

# TABLE OF CONTENTS

- 01** What's in the Box
- 02** Feature Introduction
- 04** Setting Up the Camera and Monitor
- 05** Adding a New Baby Camera
- 06** Using the Baby Monitor
- 07** Placing the Camera (Wall & Corner Mount)
- 08** Monitor Menu Settings
- 11** Notice

# 1 / WHAT'S IN THE BOX



eufy Security SpaceView  
Model: T8301-C  
FCC ID: 2AOKB-T8300C



Video Baby Monitor 720P  
Model: T8321-M  
FCC ID: 2AOKB-T8321M  
IC: 23451-T8321M



Wall Mount




Monitor Micro-USB  
Power Cable (1 m)



Camera Micro-  
USB Power Cable  
(3 m)



Camera Adapter  
(5V 1A)




Monitor Adapter  
(5V 2A)



Mounting Screws



User Manual




Welcome Card

**Note:** Power adapter varies by region.


# 2 / FEATURE INTRODUCTION

## Monitor Features

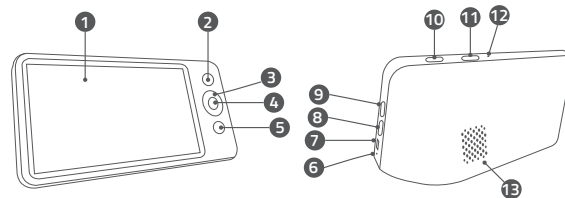


- 1 Screen
- 2 Menu button
- 3 Navigation button
- 4 OK button
  - Press to confirm the selection
  - Press to switch camera display if you have added more than 1 camera
- 5 Return to previous level of menu / Talk button
  - Press and hold to speak to the camera
  - When menu is opened, press to return to the previous level of menu
- 6 LED indicator
  - Red: charging
  - White: Fully charged
- 7 Micro USB charging port
- 8 Volume down
- 9 Volume up
- 10 Power button
- 11 Zoom button
- 12 Reset
- 13 Speaker

## Camera Features

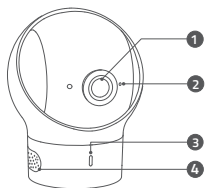

- ❶ Standard camera lens
- ❷ Microphone
- ❸ Power Status LED indicator
- ❹ Speaker

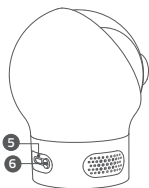


- ❺ Micro USB port
- ❻ Pairing button

# 3 / SETTING UP THE CAMERA AND MONITOR

## Charge the Monitor


Fully charge the monitor before use. To charge:

1. Connect one end of the micro USB cable to the baby monitor, and the other end to the power adapter (5V/2A).
2. Plug the adapter into a power outlet.
3. Press and hold the power button for 2 seconds to turn the baby monitor on.

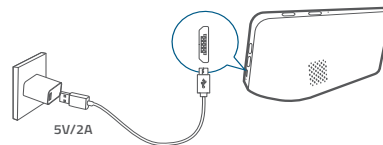

## Charge the Camera

1. Connect one end of the micro USB cable to the baby camera, and the other end to the power adapter (5V 1A).
2. Plug the power adapter into a power outlet.

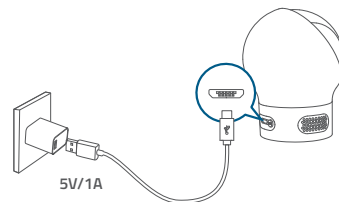


The new baby monitor and camera will set up automatically. You are all set to use the products after the monitor and camera are fully charged.


# 4 / ADDING A NEW BABY CAMERA

The baby camera and baby monitor are paired and ready to use right out of the box. Refer to the following steps when adding extra baby cameras or after resetting a baby camera.

1. Enter menu settings, go to **Camera -> Add Camera**, then follow the onscreen instructions to start the pairing.

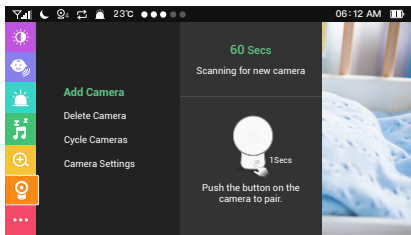

2. Press and hold the pairing button on the rear of the camera for 1 second until a notification prompt is heard.
3. Check the firmware version of the monitor (see image below) to make sure your baby monitor and camera are running the same, latest firmware version.

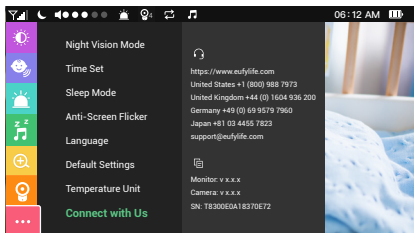

To check whether it is the latest version:

- ① Visit the website below: <https://www.eufylife.com/support/5505/spaceview-baby-monitor>

- ② Go to “Firmware Updates” section and check whether your firmware version is the latest version. If not, download the “T8300 SpaceView xxx “Firmware under the “Firmware Updates” category. Make sure you download the version in corresponding language.
- ③ Follow the steps in the “**eufy Security Software Upgrade Guide**” video or Firmware Upgrade Manual to complete firmware upgrade.

## Note:

- The baby camera can be added to the monitor. Before adding the camera, make sure the baby camera is running the same, latest version with the monitor's.
- Chrome OS is not supported for firmware upgrade.
- Before you upgrade firmware, use the provided micro USB cable (1m) to connect the device needed to your computer.

# 5 / USING THE BABY MONITOR


When two or more cameras are added to the monitor, you can manually switch among cameras by pressing the monitor's OK button. Once the camera switch is completed, the icon of the selected camera will appear on the corner of the baby monitor.

You can also select the “**Cycle Camera**” option. The screen cycles through the list of connected baby cameras according to the preset intervals.


**Note:** The monitor will emit a loud noise if placed too close to the camera. This is normal and is resolved once the camera is moved away from the monitor.

# 6 / PLACING THE CAMERA (WALL & CORNER MOUNT)

1. Use the monitor to test the viewing angle from your desired mounting spot.
2. Mark the screw holes with a pencil.
3. Drill 1/5" holes into the wall and then insert the anchors into the holes.
4. Insert the screws through the mounting holes of the wall mount and screw into the anchors.




90° vertical installation



180° horizontal wall installation

5. Place the camera on the wall mount.

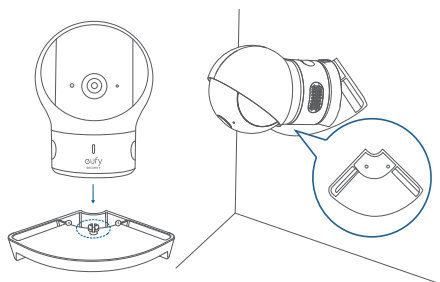

You can select the way you like to install the camera.

# 7 / MONITOR MENU SETTINGS


Press and hold the power button to power on the monitor. Press the menu button to open Menu Settings.

## Menu Settings

Menu Options	Description
<b>Brightness</b>	Set the brightness of the screen.
<b>Sleep Mode</b>	Enable to automatically turn off the screen after 1 min, 3 min, 5 min or Off.
<b>Sound Alert</b>	You can set the baby monitor to alert you when a specific noise level is detected. <b>Note:</b> Surrounding noise might set off false alarm.
<b>Lullaby</b>	Select your desired lullaby song. You can adjust the volume by selecting the volume button. <b>Note:</b> Sound Alert is automatically disabled when Lullaby function is enabled. <b>Warning:</b> Your baby's cry might be obscured by the sound of a lullaby.
<b>Zoom</b>	Zoom in / out
<b>Alarm</b>	<ul style="list-style-type: none"> <li>▪ Set alarm on / off</li> <li>▪ Specify the duration when the alarm will sound.</li> <li>▪ Set the volume</li> <li>▪ Set the temperature alert when it exceeds the specified temperature</li> <li>▪ Set an alarm clock</li> </ul>
<b>Camera</b>	Add Camera <b>Note:</b> You can add up to 4 cameras per baby monitor. Delete Camera Cycle Cameras Cycles through the list of connected baby cameras according to the preset intervals.
<b>Time Set</b>	Set the time on the monitor.

Menu Options	Description
<b>Night Vision Mode</b>	When <b>Auto</b> is enabled, the camera will change the screen color according to the light conditions in the room. When disabled, the camera will stick to daylight screen color and will not change when the surrounding environment is getting dark. Note: We recommend setting this function to On for most of the situations.
<b>Anti-Screen Flicker</b>	Changes the refresh rate of the screen to prevent flickering.
<b>Language</b>	Sets the on-screen display menu language.
<b>Default Settings</b>	Resets all options to their default setting.
<b>Temperature Unit</b>	Select your desired temperature measure unit.
<b>Connect with Us</b>	Contact details

Note: The interval duration between each sound alert is 30 seconds. It will not sound alerts during this interval, even if the conditions are met to trigger an alert.

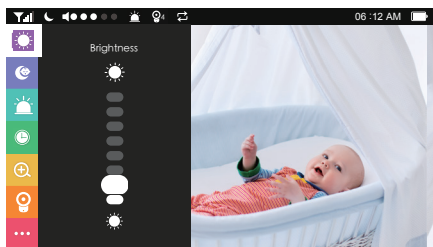


## On-screen Menu Icons

Icon	Icon Description
	Wireless signal strength
	Night Vision Mode is enabled
	Shows the camera that is currently presenting on the baby monitor screen <b>Note:</b> This icon will not appear on the screen when there is only one camera connected to the monitor.
	Cycle Cameras enabled
	Sound Alert enabled
	Sound level of the room the camera is in
<b>08:30 AM</b>	Current time
	Current battery level of the baby monitor
<b>72 °F</b>	Current operating temperature

# 8 / NOTICE

## Warning

Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 1m (3ft) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

 This product complies with the radio interference requirements of the European Community.

## Declaration of Conformity

Hereby, Anker Innovations Limited declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. For the declaration of conformity, visit the Web site: [www.eufylife.com](http://www.eufylife.com)

This product can be used across EU member states.

Due to the used enclosure material, the product shall only be connected to a USB Interface of version 2.0 or higher. The connection to so called power USB is prohibited.

The adapter shall be installed near the equipment and shall be easily accessible.

Do not use the Device in the environment at too high or too low temperature, never expose the Device under strong sunshine or too wet environment.

The suitable temperature for T8321-M and accessories is 0°C-40°C

The suitable temperature for T8301-C and accessories is 0°C-40°C

When charging, please place the device in an environment that has a normal room temperature and good ventilation.

It is recommended to charge the device in an environment with a temperature that ranges from 5°C-25°C.

Please ensure to use only the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the device and the guarantee article.

The charger output voltage / current is 5Vdc / 1A(for T8301-C) and 5Vdc / 2A (for T8321-M).The plug considered as disconnect device of adapter.

If you use a third-party charger, the recommended output voltage / current of the adapter is 5Vdc / 1A (for T8301-C) and 5Vdc / 2A (for T8321-M),and the adapter shall be CE approval type.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of d=20 cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body.

Operating Frequency Range: 2410-2477MHz

The T8301-C Max Output Power: 18.04 dBm(EIRP), The T8321-M Max Output Power: 19.56 dBm(EIRP)

This T8321-M was tested for typical body-worn operations with the back of the handset kept 0 mm from the body. The SAR limit of Europe is 4.0 W/kg. Device types T8321-M has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the limb is 0.310 W/kg . This device was tested for typical hand held operations with the back of the device kept 0mm from the Limb.

The T8301-C device has been evaluated to meet general RF exposure requirements and can be used in fixed exposure condition. RF exposure information: The Maximum Permissible Exposure (MPE) level has been calculated based on a distance of d=20 cm between the device and the human body. To maintain compliance with RF exposure requirement, use product that maintain a 20cm distance between the device and human body. )

Anker Innovations Deutschland GmbH | Georg-Muche-Strasse 3-5, 80807 Munich, Germany

Anker Technology (UK) Ltd | Suite B, Fairgate House, 205 Kings Road, Tyseley, Birmingham, B11 2AA, United Kingdom



This product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for



compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

### **FCC Radio Frequency Exposure Statement**

The T8301-C device has been evaluated to meet general RF exposure requirements. The T8301-C can be used in fixed exposure condition. The min separation distance is 20cm.

This T8321-M was tested for typical body-worn operations with the back of the handset kept 0 mm from the body.

RF Exposure Information (SAR)

The Extremity SAR limit of FCC for Hand held is 4.0W/kg.

Device is recommended to use in hand held only and SAR when hand held is 1.796 W/kg

Worn on body will have unexpected RF exposure RISK.

FCC ID(for T8301-C):2AOKB-T8300C

FCC ID (for T8321-M): 2AOKB-T8321M

The following importer is the responsible party.

Company Name: POWER MOBILE LIFE, LLC

Address: 400 108th Ave NE Ste 400, Bellevue, WA 98004-5541

Telephone: 1-800-988-7973

# **TABLA DE CONTENIDOS**

- 15** Contenido de la caja
- 16** Característica Introducción
- 18** Configuración de la cámara y el monitor
- 19** Adición de una nueva cámara para bebés
- 20** Uso del monitor para bebés
- 21** Instalación de la cámara  
(soporte de montaje en pared y esquinero)
- 23** Configuración del menú del monitor

# 1 / CONTENIDO DE LA CAJA



Cámara para bebés  
Modelo: T8301-C  
Id. de FCC: 2AOKB-T8300C



Monitor de vídeo para bebés 720p  
Modelo: T8321-M  
Id. de FCC: 2AOKB-T8321M  
IC: 23451-T8321M




Soporte de montaje en pared




Cable de alimentación micro-USB del monitor (1 m)



Cable de alimentación micro-USB de la cámara (3 m)



Adaptador de la cámara (5 V, 1A)



Adaptador del monitor (5 V, 2 A)



Tornillos de montaje



MANUAL DEL USUARIO


Welcome Card

Tarjeta de bienvenida

Nota: El adaptador de alimentación varía según la región.


# 2 / CARACTERÍSTICA INTRODUCCIÓN

## Características del monitor

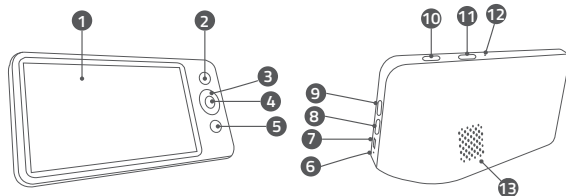

- 1 Pantalla
- 2 Botón de menú
- 3 Botón de navegación
- 4 Botón Aceptar
  - Pulsar para confirmar la selección
  - Pulsar para alternar la visualización de la cámara si ha añadido más de 1 cámara
- 5 Botón para hablar/volver al nivel anterior del menú
  - Mantener pulsado para hablar a la cámara
  - Cuando el menú está abierto, pulsar una vez para volver al nivel anterior del menú
- 6 LED indicador
  - Rojo: carga en curso
  - Blanco: carga completa
- 7 Puerto de carga micro-USB
- 8 Bajar volumen
- 9 Subir volumen
- 10 Botón de encendido
- 11 Botón Zoom
- 12 Restablecer
- 13 Altavoz

## Características de la cámara

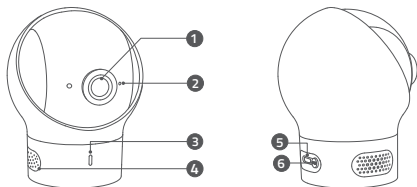


- ❶ Lente estándar de la cámara
- ❷ Micrófono
- ❸ Indicador LED de estado de alimentación
- ❹ Altavoz
- ❺ Puerto micro-USB
- ❻ Botón de emparejamiento

# 3 / CONFIGURACIÓN DE LA CÁMARA Y EL MONITOR

## Carga del monitor


Cargue por completo el monitor antes de utilizarlo. Para cargarlo:

1. Conecte un extremo del cable micro-USB al monitor para bebés y el otro al adaptador de alimentación (5 V/2 A).
2. Enchufe el adaptador a una toma de corriente.
3. Mantenga pulsado el botón de encendido durante 2 segundos para encender el monitor para bebés.

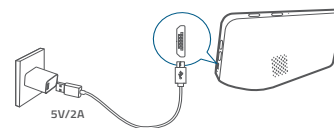

## Carga de la cámara

1. Conecte un extremo del cable micro-USB a la cámara para bebés y el otro al adaptador de alimentación (5 V/1 A).
2. Enchufe el adaptador a una toma de corriente.

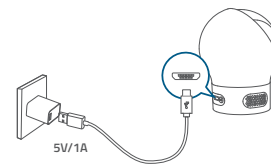


El nuevo monitor para bebés y la cámara se configurarán automáticamente. Una vez que el monitor y la cámara se hayan cargado completamente, estarán listos para su uso.


# 4 / ADICIÓN DE UNA NUEVA CÁMARA PARA BEBÉS

La cámara y el monitor para bebés vienen emparejados de fábrica y están listos para su uso. Consulte los siguientes pasos para añadir cámaras para bebés adicionales o si ha restablecido una cámara para bebés.

1. Enter menu settings, go to **Camera** -> **Add Camera**, then follow the onscreen instructions to start the pairing.

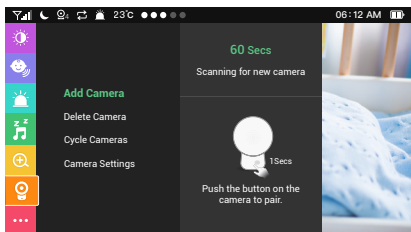

2. Mantenga pulsado el botón de emparejamiento de la parte posterior de la cámara durante 1 segundo hasta que escuche un sonido de notificación.
3. Compruebe la versión de firmware del monitor (consulte la imagen a continuación) para garantizar que el monitor para bebés y la cámara ejecuten la misma versión de firmware (la más reciente).

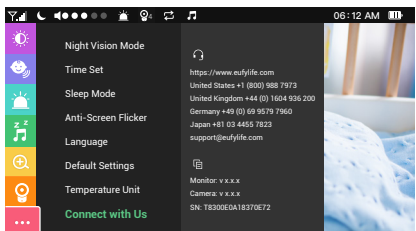

Para comprobar si la versión es la más reciente:

- ① Visite el siguiente sitio web: <https://www.eufylife.com/support/5505/spaceview-baby-monitor>
- ② Vaya a la sección "Actualizaciones de firmware" y compruebe si la versión del firmware es la más reciente. Si no lo es, descargue "Firmware de T8300 SpaceView xxx" desde la categoría "Actualizaciones de firmware". Asegúrese de descargar la versión en el idioma correspondiente.
- ③ Siga los pasos indicados en el vídeo "Guía de actualización de software de eufy Security" o en el Manual de actualización de firmware para completar la actualización.

Nota:

- La cámara para bebés se puede añadir al monitor. Antes de añadir la cámara, asegúrese de que la cámara para bebés ejecute el mismo firmware que el monitor (la versión más reciente).
- El SO Chrome no es compatible para la actualización de firmware.
- Antes de actualizar el firmware, utilice el cable micro-USB (1 m) incluido para conectar el dispositivo necesario al ordenador.

# 5 / USO DEL MONITOR DE VÍDEO PARA BEBÉS

Cuando se añaden dos o más cámaras al monitor, puede alternar manualmente entre ellas pulsando el botón Aceptar del monitor. Una vez que haya cambiado de cámara, el icono de la cámara seleccionada se mostrará en la esquina del monitor para bebés.


También puede seleccionar la opción "Ciclo de cámaras".La pantalla muestra la imagen de las distintas cámaras para bebés conectadas según los intervalos predefinidos.

Nota: El monitor emitirá un sonido fuerte si se coloca demasiado cerca de la cámara. Esto es normal y puede solucionarlo colocando la cámara lejos del monitor.

# 6 / INSTALACIÓN DE LA CÁMARA

## (SOPORTE DE MONTAJE EN PARED Y ESQUINERO)

1. Utilice el monitor para comprobar el ángulo de visión desde la ubicación de montaje que desee.
2. Marque los orificios para los tornillos con un lápiz.
3. Taladre orificios de 0,5 cm (1/5 pulg.) en la pared e introduzca las fijaciones en los orificios.
4. Introduzca los tornillos a través de los orificios del soporte de montaje en pared y atorníllelos a los tacos.




Instalación vertical de 90°



Instalación horizontal de 180°

5. Coloque la cámara en el soporte de montaje en pared.

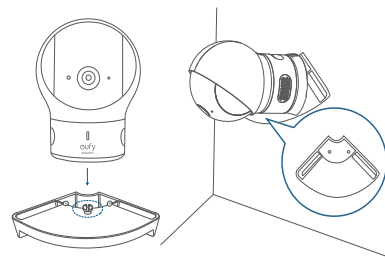

Puede seleccionar cómo desea instalar la cámara

# 7 / CONFIGURACIÓN DEL MENÚ DEL MONITOR


Mantenga pulsado el botón de encendido para encender el monitor. Pulse el botón de menú para abrir el menú Configuración.

## Ajustes del menú

Opciones del menú	Descripción
<b>Brillo</b>	Permite definir el brillo de la pantalla.
<b>Modo de suspensión</b>	Permite apagar la pantalla automáticamente a los 1, 3 o 5 minutos, o desactivar esta opción.
<b>Alerta de sonido</b>	Permite configurar el monitor para bebés para que emita una notificación cuando se detecte un nivel de ruido determinado. Nota: El ruido circundante puede crear una falsa alarma.
<b>Nanas</b>	Seleccione la nana que desee. Puede ajustar el volumen mediante los botones del volumen. Nota: La alerta de sonido se desactiva automáticamente cuando se activa la función Nanas. Advertencia: El sonido de una nana puede impedir la detección del lloro de un bebé.
<b>Zoom</b>	Permite ampliar o alejar la imagen.
<b>Alarma</b>	<ul style="list-style-type: none"> <li>Active o desactive la alarma.</li> <li>Especifique la duración de sonido de la alarma.</li> <li>Establezca el volumen.</li> <li>Establezca la alerta de temperatura cuando se supere la temperatura especificada.</li> <li>Establezca un despertador.</li> </ul>
<b>Cámara</b>	Añadir cámara Nota: Puede añadir hasta 4 cámaras a cada monitor para bebés.
	Eliminar cámara
	Ciclo de cámaras Muestra la imagen de las distintas cámaras para bebés conectadas a intervalos predefinidos.
<b>Hora establecida</b>	Permite establecer la hora del monitor.

Opciones del menú	Descripción
<b>Modo de visión nocturna</b>	Cuando se activa el modo <b>Automático</b> , la cámara cambiará el color de la pantalla en función de las condiciones de iluminación de la habitación. Al desactivarlo, la cámara utilizará el color diurno de la pantalla y no lo cambiará, aunque el entorno se oscurezca. Nota: Se recomienda establecer esta función como Activada en la mayoría de las situaciones.
<b>Antipar</b>	Permite cambiar la frecuencia de actualización de la pantalla para evitar el parpadeo.
<b>Idioma</b>	Permite definir el idioma del menú en pantalla.
<b>Configuración predeterminada</b>	Restablece todas las opciones a sus valores predeterminados.
<b>Unidad de temperatura</b>	Seleccione la unidad de medición de temperatura que desee.
<b>Conecte con nosotros</b>	Muestra la información de contacto.

Nota: La duración del intervalo entre cada alerta de sonido es de 30 segundos. Durante este intervalo, no se emitirán alertas de sonido, incluso si se dan las condiciones para ello.

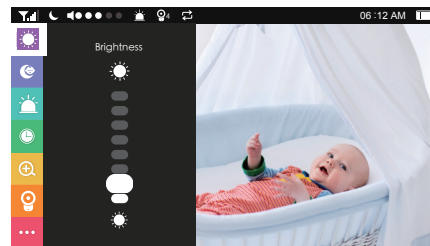

## Iconos del menú en la pantalla

Icono	Descripción del icono
	Intensidad de la señal inalámbrica
	Modo de visión nocturna activado
	Indica qué cámara se está mostrando actualmente en la pantalla del monitor para bebés Nota: Este icono no aparecerá en la pantalla si solo hay una cámara conectada al monitor.
	Ciclo de cámaras activado
	Alerta de sonido activada
	Nivel de sonido en la habitación de la cámara
<b>8:30 a. m.</b>	Hora actual
	Nivel actual de la batería del monitor para bebés
<b>22 °C</b>	Temperatura de funcionamiento actual

## CUSTOMER SERVICE

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

- **Warranty**  
12-month limited warranty
- **Call Us**  
United States +1 (800) 988 7973 Mon-Fri 9AM-5PM (PT)  
United Kingdom +44 (0) 1604 936 200 Mon-Fri 6AM-11AM (GMT)  
Germany +49 (0) 69 9579 7960 Mon-Fri 6:00-11:00
- **Email Us**  
Customer Support: [support@eufylife.com](mailto:support@eufylife.com)



@EufyOfficial



@EufyOfficial



eufyofficial

