

Dräger Mobile Printer BT Accessories

The Dräger Mobile Printer BT facilitates wireless printing from any compatible Dräger testing device within a 15-metre radius. You secure the small, lightweight mobile printer to your belt with a retaining clip. It is easy to operate, using only two buttons. Illuminated symbols provide you with information about the status of the device.



Benefits

Convenient Bluetooth® communication

The Dräger Mobile Printer BT is a Bluetooth[®] printer. This type of connection enables you to print from any compatible Dräger testing device within a radius of up to 15 metres. Simply position the printer within range of the Dräger testing device as the situation requires: whether up-close or further away.

Easy pairing

The Dräger Mobile Printer BT uses near field communication (NFC) technology. To pair it with another NFCcompatible device, simply hold the two Bluetooth[®] devices up to each other.

Light weight

The printer weighs only 250 grams (including battery and paper), so it can easily be carried on a utility belt. Now, you can make printouts any time without having to interrupt your workflow.

Easy to operate

The device is extremely easy to operate, using only two buttons: the OK button switches the printer on and off. The other button controls the paper feeder. Push both buttons simultaneously to perform a self-test on the printer. The three illuminated LED symbols indicate the current status of the device: error messages, battery charge level and Bluetooth[®] connectability.

Accessories



Printer paper

The high-quality thermal printing paper with a 40 mm roll diameter is suitable for the Dräger Mobile Printer BT. In a packaging unit of 5 paper rolls it is available in two different versions:

- 10 years long term stability with marking
- 25 years long term stability with marking

Services



Product Service

Our product service provides support with different service packages – in our workshops or directly on your premises. Care, maintenance and servicing are crucial for safety and reliability – but careful maintenance and care are a must, even when it comes to commercial considerations. Preventive checks, ongoing care and use of original replacement parts improve the longevity of your investment.




Training

The Dräger Academy has shared its solid, practical knowledge for over 40 years. We hold more than 2,400 training courses each year, on a range of over 600 topics, with more than 110 authorised trainers. We equip your staff with practical knowledge and ensure that what they learn can be applied effectively, both day-to-day and, more importantly, whenever critical situations occur. We will be pleased to develop a customised training programme for you.

D-2329-2016

Services

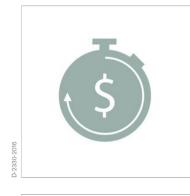

Rental Service

From bridging a temporary shortage of equipment to procuring special equipment for applications involving specific requirements: If you only need to cover a temporary higher demand, then DrägerRental Service with over 65,000 pieces of rental equipment is an economical alternative to purchasing. Fast, straightforward and with a wide range of additional services available upon request.

Shutdown Safety Service

In need of a comprehensive safety solution? Is there a long list of legal requirements you have to meet, and are you pressed for time? Balancing maximum efficiency with optimal security can pose major challenges. We can help you achieve that balance. Our Shutdown Safety Service is a solution that takes into account all the necessities of downtime and especially your individual requirements.



On-site Safety Service

Whether through a rental shop, personnel services or comprehensive safety management, our On-Site Safety Services provide support in all projects where there are particular safety risks – not to mention normal day-to-day business.

Related Products



Dräger Alcotest[®] 6000

The Dräger Alcotest[®] 6000 allows the professional user to perform a breath alcohol test with speed and precision. The measuring technology of this small and user-friendly portable measuring device has already been proven worldwide and has been sold over 1,000,000 times.

Technical Data

Dräger BT Mobile Printer	
Printing method	Thermal printing
Printing speed	100 mm/sec. (Receipt paper)
	80 mm/sec. (Film-free paper)
Resolution	203 DPI
Cutter type	Tear bar
Language	Same as the connected Dräger testing device
Paper	Receipt:
	Thermal paper roll; max. diameter 40 mm (1.57 inch);
	width 57.5 ± 0.5 mm (2.26 inch ± 0.2 inch);
	thickness 0.07 ± 0.003 mm
	Film-free paper:
	Thermal paper roll; max. diameter 39 mm (1.54 inch);
	width 57.5 \pm 0.5 mm (2.26 inch \pm 0.2 inch);
	thickness 0.08 ± 0.008 mm
Interfaces	USB-C, Bluetooth [®] v. 4.1 (Classic/LE), NFC auto-pairing
Battery charger	Input: Voltage 100 – 250 VAC Current: 0.5 A (max. at 110 VA)
	Output: Voltage 8.4 VDC Current: 0.8 A
Battery	Type: Lithium-ion
	Output: Voltage 7.4 VDC (available in 8.4-6.8 VDC)
	Capacity: 1200 mAh
	Charge time: 2.5 hours (charging current and time may vary by
	charger)
Temperature range	Recharging: 0 to +40 °C
	Operating: -15°C to +50 °C
	Storage: -20 to +60 °C (30 days)
	Long-term storage: -20 to +40 °C (90 days)
Humidity	Printer: 10 – 80 % rel. humidity (non-condensing)
	Battery: 20 – 70 % rel. humidity (non-condensing)
Dimensions	79.6 mm × 114.2 mm × 44.3 mm (3.13 in. × 4.5 in. × 1.74 in.)
Weight	Printer: 160 g
	Printer + battery: 215 g
	Printer + battery + paper: 250 g

Ordering Information

Dräger Mobile Printer BT	37 00 421
Printer paper (Thermal paper; 25 years)	37 00 405
5 rolls 40 mm with special marking	
Printer paper (Thermal paper; 10 years)	37 00 406
5 rolls 40 mm with special marking	
Printer paper (Thermal paper; 10 years)	37 00 407
5 rolls 40 mm self-adhesive without backing paper	
Printer paper (Thermal paper; 10 years)	37 05 617
1 roll 40 mm self-adhesive tamper proof	
USB-C cable	37 00 418
Power Supply 3.2A 5V USB-A	37 01 090
Transport- / Storage-Bag M (L230xW195xH75mm) for Alcotest	37 14 802
device, printer, mouthpieces, paper rolls, etc.	
Sparepart Li-Battery for Mobile Printer BT	37 01 106

Notes

Notes

Not all products, features, or services are for sale in all countries. Mentioned Trademarks are only registered in certain countries and not necessarily in the country in which this material is released. Go to www.draeger.com/trademarks to find the current status.

CORPORATE HEADQUARTERS

Drägerwerk AG & Co. KGaA Moislinger Allee 53–55 23558 Lübeck, Germany www.draeger.com REGION EUROPE Dräger Safety AG & Co. KGaA Revalstraße 1 23560 Lübeck, Germany Tel +49 451 882 0 Fax +49 451 882 2080 info@draeger.com

REGION MIDDLE EAST, AFRICA

Dräger Safety AG & Co. KGaA Branch Office P.O. Box 505108 Dubai, United Arab Emirates Tel +971 4 4294 600 Fax +971 4 4294 699 contactuae@draeger.com

REGION ASIA PACIFIC

Draeger Singapore Pte. Ltd. 61 Science Park Road The Galen #04-01 Singapore 117525 Tel: +65 6872 9288 Fax: +65 6259 0398 asia.pacific@draeger.com

REGION CENTRAL

AND SOUTH AMERICA Dräger Indústria e Comércio Ltda. Al. Pucurui - 51 - Tamboré 06406-100 - Barueri - SP Tel. +55 (11) 4689-4900 relacionamento@draeger.com

