


### STEP 7:

Position the stop ring to limit the arm's range of motion. The marked angle will be in the center of the range of motion.



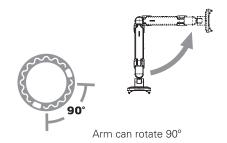

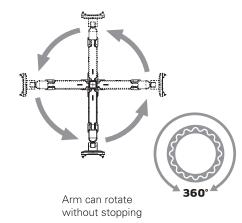

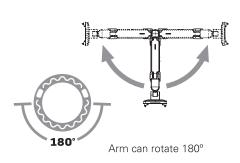

## STEP 8:


Insert monitor arm into the mount until release button locks in place.

To remove arm press release button and pull the arm up near the joint.

Note: If using a 3 link configuration, one of the links must be a 4" link.




## Humanscale

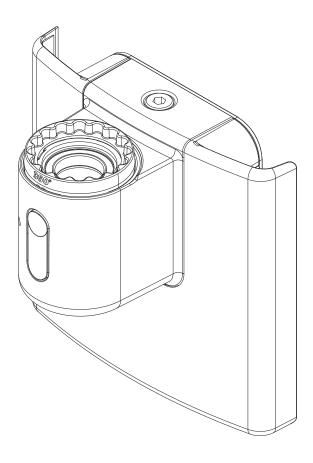

## M8.1/M10


Direct Wall Mount Installation Instructions

# STEP 1: Remove the plastic front cover.

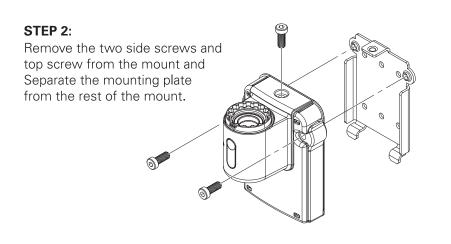


## STEP 3:

Attach the mounting plate to a wall stud or other structural support using the screws provided. Mounting to drywall alone is not recommended. Use level to ensure that mounting plate is perfectly level.

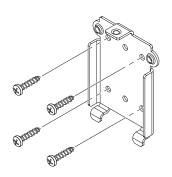

## STEP 4:

Align the mount with the mounting plate on the wall.

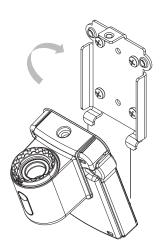

## STEP 5:

Reinstall the two side screws and top screw into the mount and tighten.



Reinstall the plastic cover.

