ABARTH 500/595/695 TMC INTERIOR ARMREST

INSTRUCTION MANUAL

The following steps are for Abarth Series 4 Vehicles:

• Preparation:

Remove the rubber mats from the cupholders (if present) using a flat screwdriver.

• Positioning:

Place the armrest over the cupholders at the end of the central tunnel.

• Securing the Armrest:


Insert the supplied screws into the holes of the storage floor.

Attention: Use the short screw in the front hole and the long screw in the rear hole.

Secure the screws using a hand screwdriver.

• Final Steps:

Insert the supplied rubber panel or felt on the storage floor.

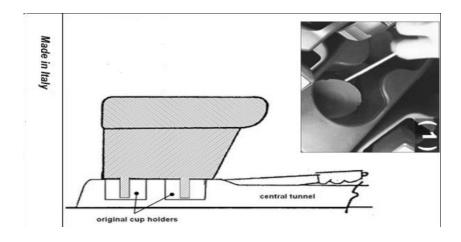


The following steps are for Abarth Series 3 Vehicles:

• Preparation:

Remove the rubber mats from the cupholders (if present) using a flat screwdriver.

• Positioning:

Place the armrest over the cupholders at the end of the central tunnel.




Insert the supplied screws into the holes of the storage floor.


Attention: Use the long screw in the front hole and the short screw in the rear hole.

Secure the screws using a hand screwdriver.

• Final Steps:

Insert the supplied rubber panel or felt on the storage floor.

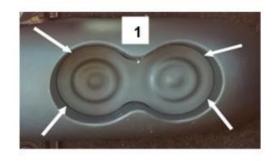

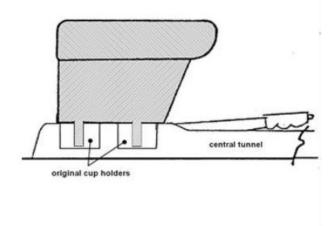

Made in Italy

For further assistance, please contact our customer service.