# Visit baby monitor

**BF1491** 



## Bellman & Symfon®



#### Reliable transmission

Up to 80 m operating range

#### **Flexible**

Adjustable sensitivity and delay

#### **Customizable notification**

Use a unique signal for each child

#### **Optional contact mat**

Know if your child leaves the bed

#### Easy to use

No complicated menus

### Be there for your baby.

Caring for your baby's health and safety is one of the most important things you do as a parent. Bellman & Symfon offers a fully secure baby monitoring solution for parents with hearing loss, so you are always close to your baby. The Visit baby monitor will notify you as soon as your baby needs you, even if you are asleep or a couple of rooms away.

#### How it works

When the baby monitor is activated, it signals your Visit receiver that notifies you with sound, flashes or vibrations (depending on the receiver).

#### Secure and reliable

Visit uses a secure radio link that covers your entire home, so you always know that you are connected.


#### Adjustable sensitivity and delay

You can adjust the sensitivity and delay of the baby monitor so it's not activated when your child moves in her sleep.

#### **Customizable notification**

If you have more than one child you can choose different signals so you know who needs your attention.



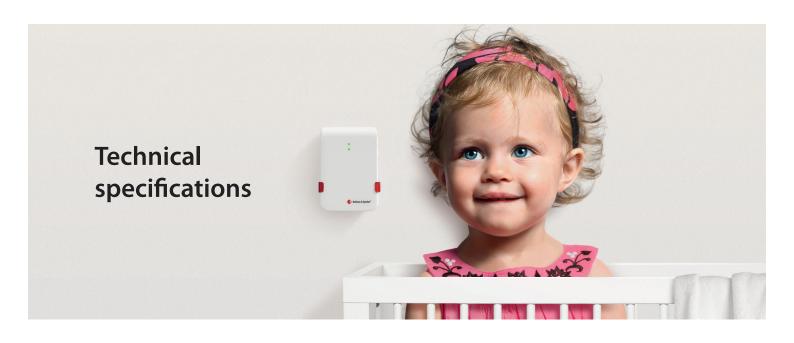

#### Size and weight

Height: 100 mm, 4.0" Width: 65 mm, 2.6" Depth: 27 mm, 1.1"

Weight: **118** g, **4.2** oz (incl. batteries)



#### Inputs/outputs

3.5 mm external trigger input

#### **Activation**

- The test buttons and the internal microphone
- The contact mat accessory


#### Settings

- Sensitivity: High, Medium, Low
- Delay: 30 sec, 10 sec, 1 sec

#### Frequency and coverage

- Radio frequency: 433.92 MHz
- Coverage: 30 80 m (98 260 ft), depending on the building's characteristics and the combination of transmitters and receivers.

#### **Buttons and connectors**

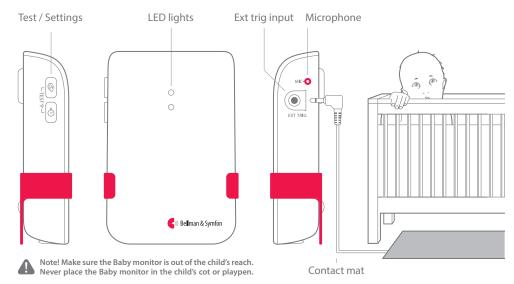

#### **Power and battery**

- Power supply Battery power 2 x 1.5 V AA lithium or alkaline
- Power consumption Active < 70 mA, idle position < 400 μA
- Alkaline ~ 6 months, lithium ~ 1 year

#### Number of radio keys

#### • 64 as standard. Up to 256 with optional software.

#### Maintenance and cleaning

- Maintenance free. Clean with a dry cloth.
- Do not use household cleaners, aerosol sprays, solvents, alcohol, ammonia, or abrasives.
- Not reusable.

#### **Environmental requirements**

- For indoor use only.
- Temperature: 0° to 35° C, 32° to 95° F
- Relative humidity: 15% 90% (non condensing)

#### In the box

- BE1491 Visit baby monitor
- Table stand
- 2 x 1.5V AA alkaline batteries
- Screw and plug
- User manual



#### **Accessories**

The following accessories are available:

■ BE9026 Contact mat

#### © 2021 Bellman & Symfon AB. All rights reserved.

Bellman, Bellman & Symfon and the Bellman & Symfon logo are registered trademarks of Bellman & Symfon AB. This leaflet is subject to change without prior notice.

BE1491\_001DAS003 (US)

bellman.com