


1. Separate the bidet part




1 Unplug the power cord



② Close the water valve.

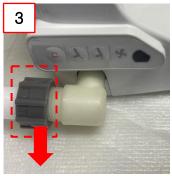

③ Turn the hose to the right and separate it

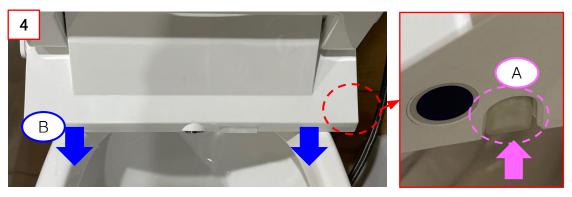

4 Press A on the right side of the bidet and pull the bidet apart in the B direction.

Scan here for video guide






2. Open the cover base




1) Remove two screws at the back of the bidet

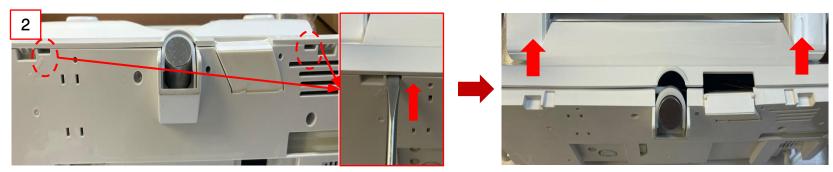


2 Put the flat driver in the circle areas and lift it up to remove the cover base.




3. Disconnect SIDE IR

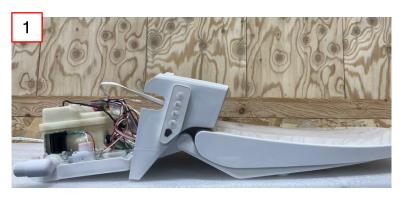

① Place the bidet like above

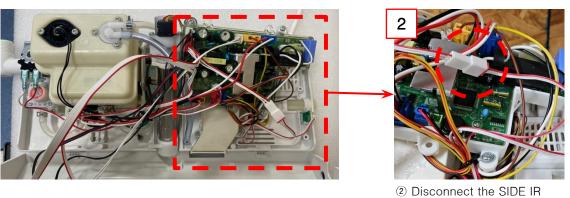


connector

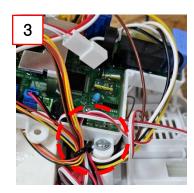

③ Tie the SIDE IR Harness




4. Close the cover base커버베이스 클로즈

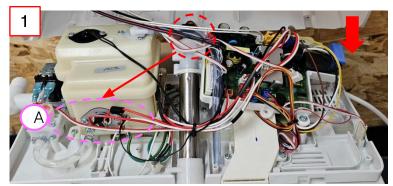


① Close the cover base while moving the circled harnesses to the A space



2 Press the circle areas to close it

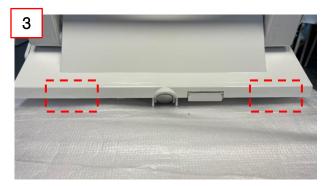

3 Make sure its closed

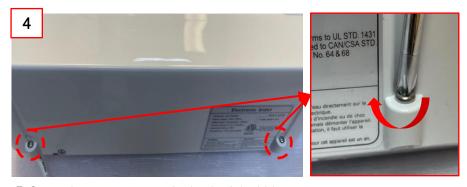


4 Screw the two screws at the back of the bidet




5. If cover base is not closed



1) Flip the bidet

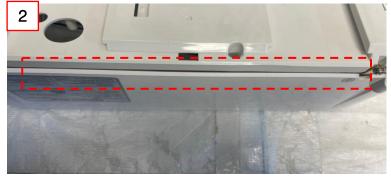

2 Check the back of the bidet part is closed or not

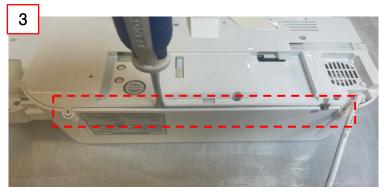


③ Insert the flat driver between the squares to create a space.



4 Press the circle areas to close it




6. Install the bidet

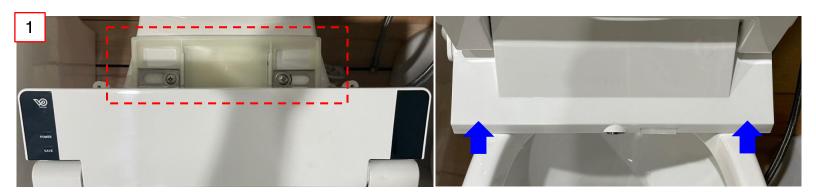

① Slide the bidet on the catchplate



② Turn the hose to the left

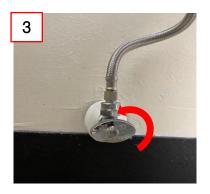

③ Open the water valve



4 Plug the power cord