

Please follow these installation instructions or watch the video found with the QR code here (QR code also on Bridge).



Optional Accessories



Step 1


Scan QR code in middle of Bridge to bring up witness mark. Move phone left or right to align with jaw's witness mark.



Step 3

Attach the Z-Finder's magnetic lock to the Bridge. Using supplied hex key, loosen 4 screws. Move Z-Finder up or down to align with phone screen, then press Z-Finder flush to phone screen and tighten 4 screws.



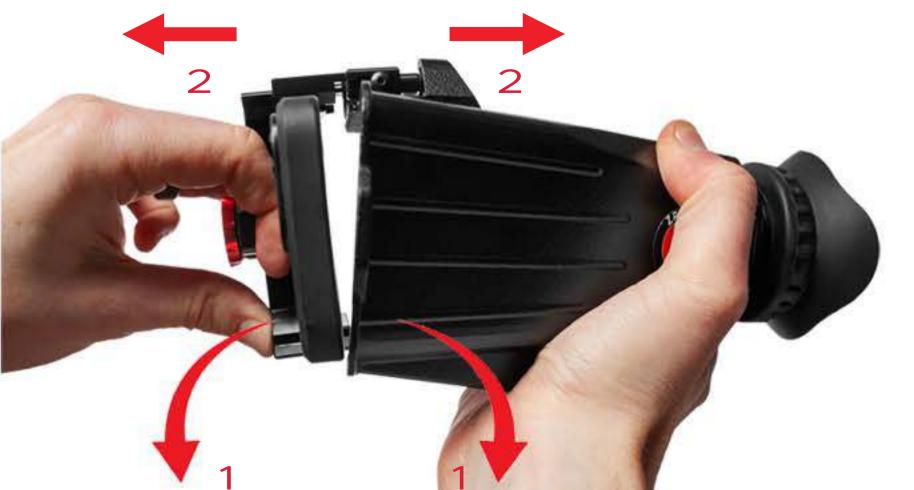


Separation

Place 2 fingers around knob and thumb in recessed area.
Angle Z-Finder down and pull to break magnetic lock.

Step 2

Install correct Masks by snapping their pegs into the Z-Finder. Then orient the internal Light Baffle to match your screen size.

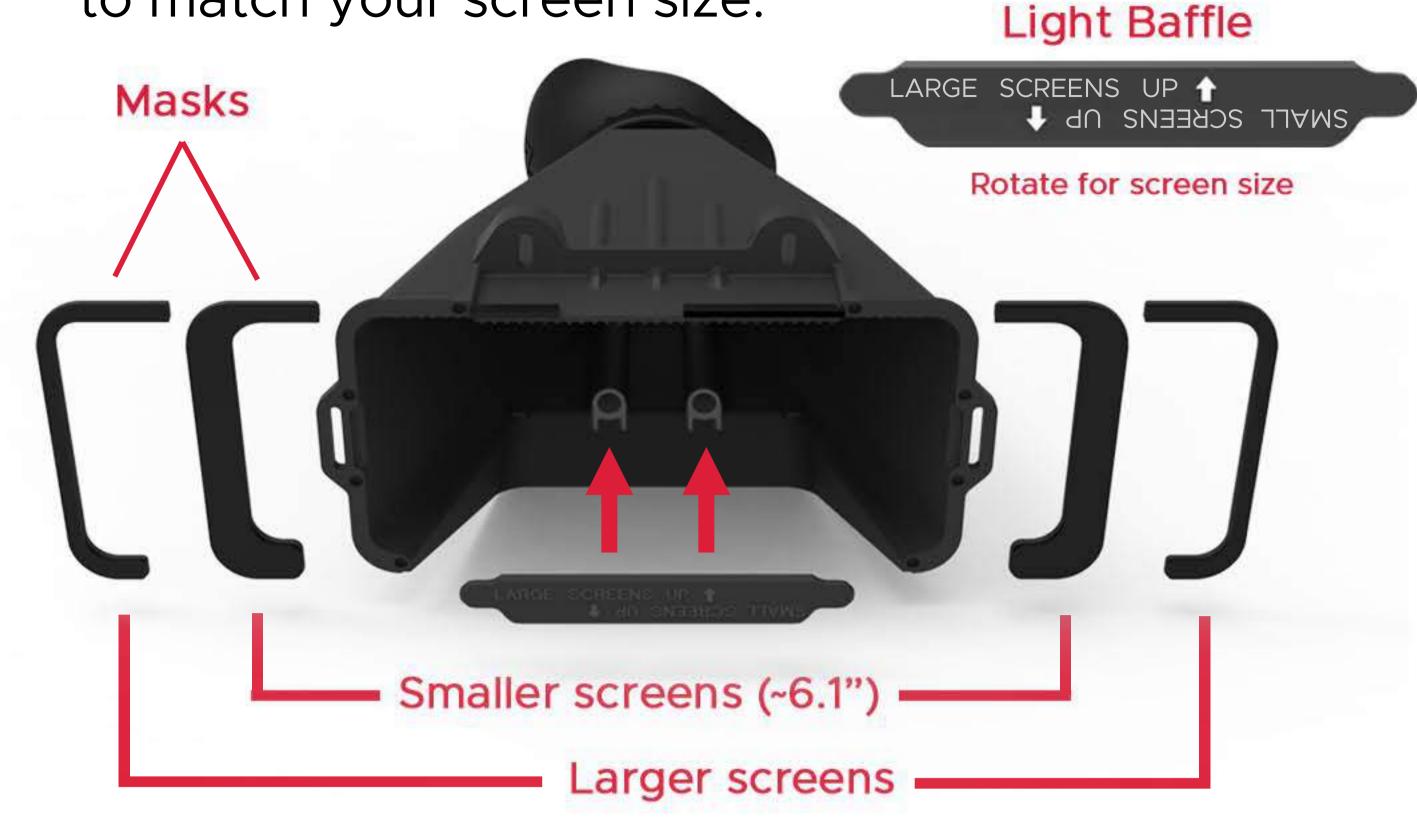



Push down on top jaw and twist red knob clockwise to lock.

Diopter

If necessary, change diopter to achieve focus.

Remove eyecup and unscrew lens ring with fingers. Insert new diopter in orientation shown and secure lens ring. Reattach eyecup to Z-Finder.

