



# MAYAKOBA

## USER MANUAL

### MAYAKOBA PEDICURE SPA CHAIRS



MAYAKOBA is an AYC's registered trademark for beautiful and functional pedicure spas, spa chairs, spa tubs, and other nail salon furnishings. We strive to continue to bring you outstanding pedicure spas along with modern and classic salon furnishings.

## I. IMPORTANT SAFETY INSTRUCTIONS

When using pedicure units, make sure to follow basic safety measures, and please read the following carefully:

**WARNING!** To reduce the risk of burns, fire, electrical shock, or other bodily harm:

A pedicure unit should only be used indoors and plugged into a circuit protected by a ground fault circuit interrupter (GFCI). The plug should be completely inserted into the GFCI and accessible after installation.

The plug of these items can only be connected to a suitably grounded socket (Please refer to pg. 5 to review the grounding instructions.) and unplugged when not in use. Be sure to test the GFCI periodically per manufacturer's instructions.

### Procedures for Avoiding and Handling Damage or Injury

If the supplied cord is damaged, it must be replaced by the manufacturer or an authorized service representative to avoid damage or injury.

If the chair becomes damaged, splashed with or dropped into water, or fails to operate for any other reason, please contact the dealer and send it to an authorized service center for repairs.

Please keep this unit safely away from heat sources, humidity, sharp objects, corrosive chemicals, and flammable objects.

To avoid risk of electric shock or bodily harm, please do not open or disassemble any part of this item.

DO NOT stand on the inside of the basin or on the spa. See warranty section on pg. 8-9 for more information on why.

**ATTENTION!** Consult a doctor before use if you have one or more of the following conditions:

We recommend pregnant women, people of poor health, and those who experience pain in their neck, back, waist, or hips to consult with their doctors before use. People with pacemakers or other personal medical devices should consult the manufacturer of the device and doctors before use.

Disabled people or those who cannot express themselves must be strictly and continuously supervised while using this chair.

Do not use if you are diabetic, have poor circulation, or if any area of your feet or legs are inflamed or have open wounds. Consult a physician before using if you have any kind of fungal infection, swelling, fracture, or persistent pain.

Please do not allow small children to use or play around the chair.

## II. RECEIPT & SHIPMENT INSPECTION

Thoroughly inspect each shipment immediately upon arrival.


**ATTENTION! Notation Requirements for Damage:** Notify the delivery driver of any damage and insist on a notation directly on the face of the freight bill.

Failure to note damage on the face of the freight bill may impede and/or prevent any claims that you may have against the carrier.


If concealed loss or damage is found, you must notify the carrier at once and request an inspection. DO NOT DISCARD THE SHIPPING CARTON.

If you give the carrier a clear receipt for goods that have been damaged in transit, you do so at your own risk and expense.

**- Floor Drain -**

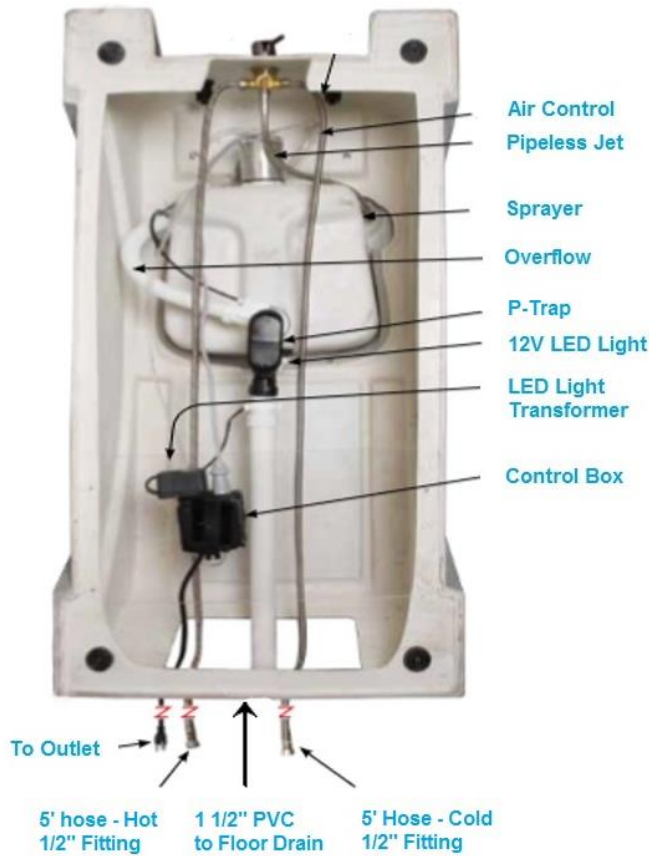

**- Wall Drain -**

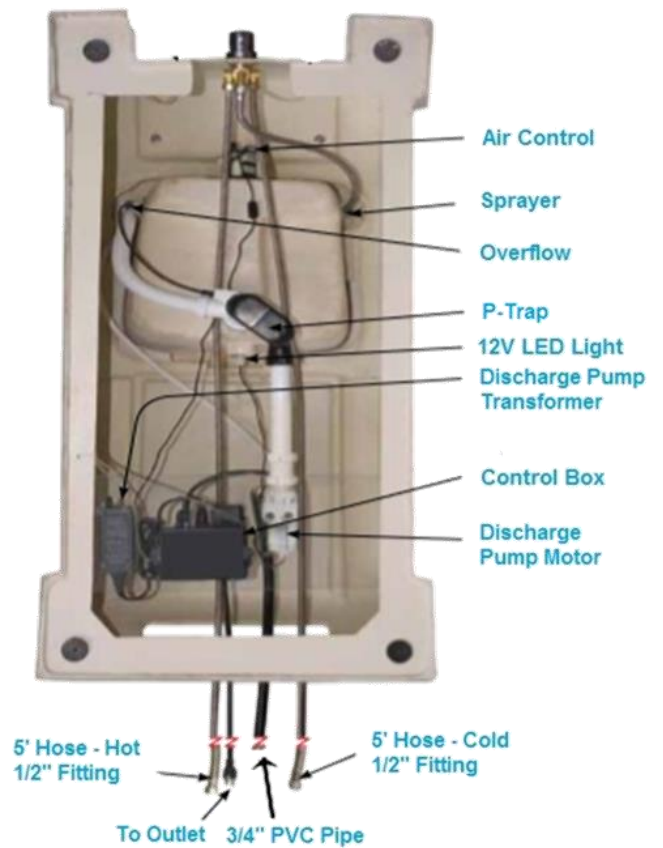

### III. Grounding Instruction

 **DANGER WARNING!**

To reduce the risk of electric shock, proper grounding is required for the chair. These items are equipped with a grounded plug. When assembling the pedicure chair, insert the grounded plug into a grounded socket with proper installation and suitable local voltage. Incorrect grounding may cause electrical shock.

If you have any questions about this item, please consult a licensed electrician. If the plug sent along with the chair does not match your socket, please do not modify the socket. Please do not use a plug adapter.

Ask technicians to install a suitable socket. Modification from the original manufactured specifications will void all warranties expressed or implied.

### IV. Changing the Fuse

In cases of an electrical shortage, the fuse may burn out. The user can open the fuse cap with a screwdriver and replace it with an appropriate fuse. After the replacement, put the fuse cap back on.

If there are any questions, please consult a licensed electrician.

### V. Important Precautions

Please contact a local, qualified plumber to install your new Mayakoba pedicure spa chair. It cannot operate properly or safely unless it is provided with adequate electrical power, enough water pressure, proper water temperature and the required drain facilities. Information on these important subjects are contained in this manual. We urge you to read it carefully to make sure these requirements are met.

**SAFETY NOTICE!**

1. Excessive water temperature is dangerous and should be checked before use. Maximum operating water temperature should not exceed 100 °F (38 °C) and the maximum supply water temperature should not exceed 125 °F (65 °C).
2. Always enter and exit the pedicure spa slowly and carefully.
3. Never bring and/or operate any electrical devices into or near the spa.
4. Do not stand in the whirlpool tub!

### VI. Installation Summary

The installation must comply with all plumbing and electrical codes. A licensed plumber should complete the plumbing of the spa.

**WARNING! GOVERNING NOTE:** Failure to comply with federal, state or local codes and ordinances will result in the warranty being considered null and void.

**How to comply with terms:**

Select a level location where the floor can support the weight of an occupied spa. For the seat back to fully recline, the spa base must be placed a minimum of 16-20 inches from the wall.

Connect the water supply lines with cold and hot inputs.

Connection: Cold 1/2 NPT  
Hot 1/2 NPT

Connect the floor drain connection to the P-Trap (if you are using a wall drain you will need to install a discharge pump).

Connection: P-Trap 1 1/2 - inch drainpipe

Place the drain plug into the drain from the top (the drain plug may need to be adjusted so that it forms a tight seal around the drain).

Install the faucet handle by inserting it into the faucet in front with the red and blue indicator facing up. Then, tighten the lock screw with a small flathead screwdriver.

Attach the sprayer to the sprayer hose (be sure to cut the zip tie around the sprayer hose).

Plug the power cord into a GFCI outlet.

## VII. Common Specifications

Shipping Dimension & Weight	Pedicure Spa & Massage Chair	Dimensions will vary	206 - 250lbs.
Net Dimension & Weight	Pedicure Spa & Massage Chair	Dimensions will vary	150 - 194 lbs.
Capacity of Tub			4.5 Gallons (approximate)
Switch			On/Off Air Activated Switch
Power Source	Dedicated 15Amp Wall Outlet Required		
	Pipeless Jet motor		120V, 0.4 A, 60Hz
	Discharge Pump (Optional)		115V, 3.2 A, 60Hz
	Massage System		120V, 60Hz
Plumbing Source	Hot Water		1/2" (fitting provided)
	Cold Water		1/2" (fitting provided)
	Drain		
Warranty	1 Year (See Warranty for covered parts)		

## VIII. Operating the Pedicure Spa

After the spa has been installed and the plumbing and electrical connections have been completed, clean the tub and wipe dry with a clean towel. Follow these instructions to test the pedicure spa:

1. Turn the “drain handle” (2) to open/close the drain.  
**\*NOTE:** If drain will not open, check the water stopper and tighten/loosen the adjustment screw as needed.
2. Fill the tub until the pipeless jet is completely submerged in water by lifting the faucet handle (1). Water will release from the spout (6).  
**NOTE:** For no plumbing pedicure units, please fill until max fill line.
3. Press the left button (3) to turn on/off the pipeless or no plumbing jet.
4. Press the right button (4) to turn on/off the discharge pump (if unit is equipped with one).
5. Use sprayer (5) to rinse tub.

**NOTE:** For no plumbing, please physically empty and clean the basin. Floor drain plumbing will allow Pipeless Pedicure Chairs to drain out water automatically – no discharge pump needed.



\*Example tub in picture: SIENA Pedicure Tub

## IX. Cleaning and Disinfecting the Pedicure Spa

Please follow these instructions to clean and disinfect the pedicure unit:

### **Between Each Customer**

---

1. Drain all water, remove debris, and/or remove foot liner from the spa.
2. Clean the spa with soap or detergent and water.
3. Spray the surfaces and walls of the spa using the attached sprayer. For no plumbing pedicure chairs, rinse under sink.
4. Wipe the spa dry with a clean towel. If you have purchased a no plumbing unit you will also replace the foot liner at this time.

### **Daily Flushing of the Pipeless Jet System**

---

The spa must be thoroughly cleaned after the last pedicure of the day in the following manner:

1. Remove the jet cover by turning counter-clockwise.
2. Remove all debris trapped behind the cover and/or impeller.
3. Clean all parts with a mild soap, vinegar solution, or detergent and water.
4. Do not run the pipeless jet without the jet cover/magnetic head and impeller in place.
5. Fill the tub basin with about 5 gallons of water.
6. Turn the pipeless jet on.
7. Add 3 teaspoons of low-foaming dishwasher detergent and 2 ounces of bleach to the tub basin.
8. Run pipeless jet for 10-15 minutes and drain the tub basin.
9. Clean the exterior of the pedicure spa with a soft cloth and mild detergent.

### **Biweekly Cleaning of the Pipeless Jet System**

---

In addition to the daily cleaning, the follow cleaning procedures must be performed every other week:

1. Fill the basin with 5 gallons of water.
2. Turn the pipeless jet on.
3. Add 3 teaspoons of low-foaming dishwasher detergent and 2 ounces of bleach to the tub basin.



4. Run pipeless jet for 10-15 minutes. Let the water sit overnight in the tub (6-10 hours).
5. Run the pipeless jet for 5 minutes and drain the tub basin.
6. Follow the instructions in "Daily Flushing of the Pipeless Jet System."

### **Cleaning and Disinfecting Records**

---

**HEALTH CODE NOTICE:** A record must be made of the date and time of each cleaning and disinfecting as required by the above procedures, indicating whether the cleaning was "daily" or "bi-weekly". This record should be made available when requested by customer or inspector.

## **X. Environment for Chair Operation**

1. Please do not operate the units in damp areas (such as a bathroom) to prevent electrical shock or other accidents.
2. Please place the units only on a flat surface.
3. Please make sure to leave a minimum of 16-20" of space behind the chair, so that there is sufficient room to recline the backrest.
4. Do not operate this item in direct sunlight or in a place with high temperatures. Exposure could fade or harden the material.
5. Items may cause abrasion to the floor. We recommend that a floor mat or carpet be placed under the chairs in order to minimize abrasions and to reduce noise from the pedicure chairs.

## **XI. Warranty**

Shop Salon City provides pedicure spas with the highest standards for quality materials and workmanship. Accordingly, we warrants its products as follows:

To the original owner of the Mayakoba pedicure spa chairs, we may repair or replace, at its discretion, any pedicure spa chair deemed to be defective in material or workmanship upon inspection by an authorized representative of Shop Salon City. This warranty covers only the listed components for a period of one year, dating from the date of delivery and does not include labor.

- There are no other warranties, express or implied.

Owner is responsible for all labor and shipping charges necessary to replace or repair the pedicure spas. Shop Salon City will not be liable for any consequential, incidental, or contingent damages. If a pedicure spa needs to be exchanged, it will be limited to supplying a replacement pedicure spa of comparable style and size.

Shop Salon City may at its own discretion use refurbished parts or pedicure spas for repair and replacement purposes. This warranty is null and void if the pedicure spa is removed from its place of initial installation or is not installed in accordance with federal, state, or local codes and ordinances. Furthermore, this warranty does not apply if the pedicure spa has been subject to misapplication, misuse, improper installation or maintenance, negligence, improper cleaning, or other circumstances beyond Shop Salon City's control.

The following are examples of what is **not** covered by the warranty:

1. Natural wear and tear including but not limited to staining, fading, or discoloration of the vinyl seat, armrests, or footrest.
2. Damage resulting from standing in the basin.
3. Damage to pump parts and/or motor parts due to obstruction in plumbing lines, drains, etc.
4. Staining, fading, or discoloration of plastic surfaces due to exposure and/or the use of harmful cleaning agents or chemicals.
5. Staining, fading, or discoloration caused by improper or poor water additives not related to maintenance of proper water.
6. Malfunctions or damage caused by improper installation, including not meeting local and state plumbing, electrical, and building codes.
7. Freight damage, misuse, neglect, abuse, and natural disaster.
8. Unauthorized repairs.
9. Natural wear and tear of remote control including broken buttons, cracked screens, or water damage.

## XII. Warranty (Continued)

By using the pedicure spa chairs, Owner agrees that the obligation of Shop Salon City shall not extend to indirect or consequential damage or injury which may result from pedicure spa use. Owner agrees that the obligations of Shop Salon City are limited to those set herein and that there are no other obligations except those expressly agreed to in writing by Shop Salon City. No dealer or other person has any authority to bind Shop Salon City to changes or additions to this warranty or its products; accordingly, Shop Salon City is not responsible for any such warranties or representations.

Should service be required for defect or malfunction during the warranty period, please contact us at 469-975-4322 or [sales@shopsaloncity.com](mailto:sales@shopsaloncity.com)