

# MicroVantage™ WGAS Series

Water Grade Polyethersulfone Membrane Filter Cartridges

# MicroVantage Ultra Premium Filter Series



- Absolute retention ratings from 0.3 to 1.0 microns
- 6.0 square feet (0.56 m<sup>2</sup>) of media surface area per ten inch length for optimal performance
- Cost effective absolute filtration for less critical applications - not integrity tested
- 100% polypropylene construction offers wide range of chemical compatibility
- Rigid, molded cage protects pleated media and strengthens structural stability
- Manufactured in state-of-the-art white room environment for high purity
- Complies with Food & Drug Administration's CFR criteria for food & beverage contact
- Meets USP Class VI Biological Test for plastics.
- Available in common end cap configurations to fit most filter housings
- Produced in standard lengths up to 40 inches

## Applications

RO Pre/Post Filtration	Food & Beverage
DI Water	Bottled Water
Plating Solutions	Microelectronics
Specialty Chemicals	Process Water
Water & Wastewater	Cosmetics

## Specifications & Operating Parameters

**Pore Sizes** 0.03, 0.1, 0.2, 0.45, 0.65, 1.0 microns absolute retention

**Nominal Lengths** 9.75" (24.7 cm), 10" (25.4 cm), 20" (50.8 cm), 30" (76.2 cm), 40" (101.6 cm)

**Outside Diameter** 2.67" (6.78 cm)

**Inside Diameter** 1.0" (2.54 cm)

**Media Surface Area** 6.0 sq.ft. (0.56 m<sup>2</sup>) per 10 inches filter length

### Gaskets/O-rings

Silicone, Buna N, EPR, Viton, Teflon Encapsulated Viton (O-rings only)

### Materials of Construction

Filter Media:	Asymmetric Polyethersulfone
Outer Cage	Polypropylene
Inner Core:	Polypropylene
End caps:	Polypropylene

**Maximum Operating Temperature** 176°F ( 80°C)

**Recommended Change-out Differential Pressure** 35 psid (2.4 bar)

### Maximum Differential (Collapse) Pressure

75 psid @ 70°F (5.2 bar @ 21°C), 40 psid @176°F (2.8 bar @ 80°C)

### Sanitization and Sterilization

Hot water at 175°F (80°C) at 5 psid for 30 minutes


In-line steam at 257°F (125°C) @ 1 psid (0.7 bar) for 30 minutes

Autoclavable at 257°F (125°C) for 30 minutes

### FDA and USP Compliance

All materials comply with the requirements of Food and Drug Administration Title 21 of The Code of Federal Regulations 174.5, 177.1520 and 177.1630. All components meet current USP Class VI biological tests for plastics

## Flow vs. Pressure Drop

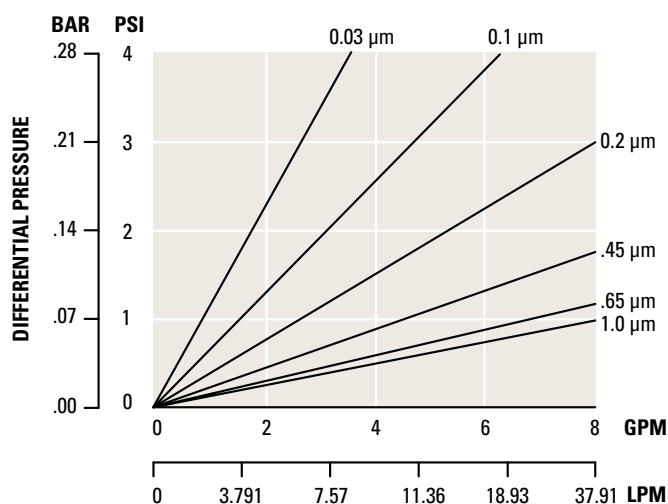

### GALLONS PER MINUTE

This chart represents typical water flow per 10" cartridge length. The test fluid is water at ambient temperature. Extrapolation for multiple elements tends to be linear, but as flows increase the  $\Delta P$  of the housing becomes more apparent.

### Ordering Guide (Example: WGAS0.2-10S4S)

WGAS	0.2	–	10	S4	S
PRODUCT CODE	MICRON		LENGTH	END CAP CONFIGURATION	GASKET / O-RING
WGAS	0.03 0.1 0.2 0.45 0.65 1.0		9.75" 10" 19.75" 20" 29.25" 30" 40"	S1 = DOE S3 = 222 w/ Fin End S4 = 222 w/ Flat End S5 = 226 w/ Fin End S6 = 226 w/ Flat End S7 = Internal O-ring with Recessed Plug S9 = Internal O-ring on both ends	B = Buna N E = EPR S = Silicone V = Viton T = Teflon encapsulated Viton (O-ring only)

### Filter Housings

Shelco manufactures a full line of filter housings. From our rugged single cartridge housings to our heavy duty multi-cartridge housings. Shelco is the perfect choice for your filtration solutions.



### Shelco Filters

100 Bradley Street  
Middletown, CT 06457 USA

Tel: 800-543-5843 / Fax: 860-854-6120 / E-mail: [info@shelco.com](mailto:info@shelco.com)

MicroSentry™, MicroVantage™, Shelco Filters® and the Shelco logo are registered trademarks of the Tinny Corporation. Shelco Filters is a division of the Tinny Corporation.