
PRODIGY

Installation Manual

P700 / P770




Please read this manual carefully for proper installation.

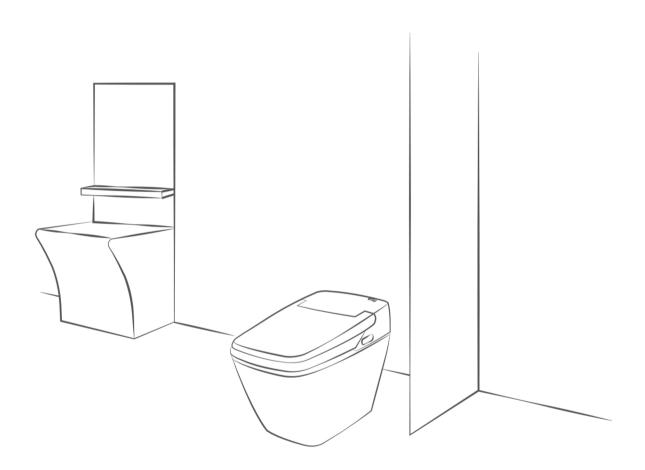



Before Installing

 Confirm the compatibility of your bathroom using the dimensions below:

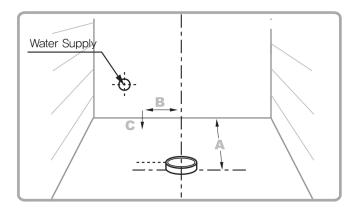

A - Rough-In


B - Shutoff Valve Distance

C - Shutoff Valve Length

You may reference the included template if your previous toilet is already uninstalled.




Parts List

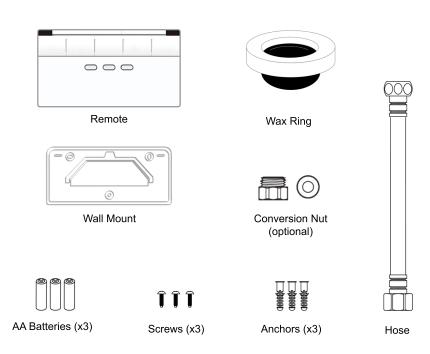



Remove Existing Toilet

• Close the water shutoff valve and flush the toilet.

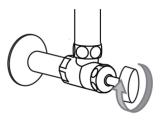

 Disconnect the existing water hose and unscrew the flange bolts.



 Remove the toilet and wax ring, leaving the exposed trap (pictured below).




*If you are not immediately installing the Prodigy, cover the exposed trap to eliminate any fumes.




Install Prodigy Base

Attach the provided water hose to your water shutoff valve.

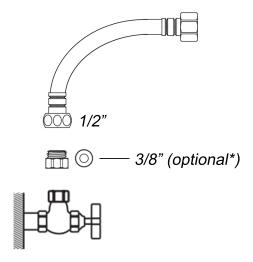


^{*}You may need to use the included conversion nut to fit your water shutoff valve. Simply screw the conversion nut into the 1/2" side of the hose before connecting it to your water shutoff valve.


Apply the new wax ring to the exposed trap.

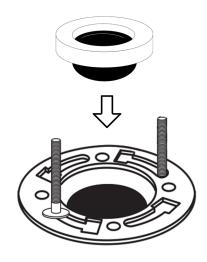

• Line up the toilet base over the flange screws. Place the toilet base and re-secure the flange bolts.

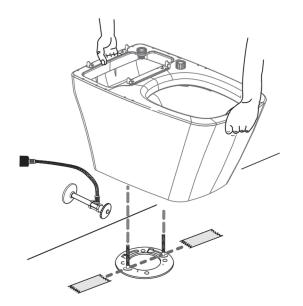


*Two people are reccomended for properly placing the toilet base.

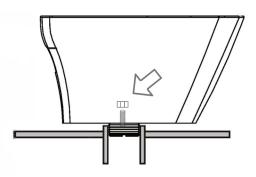


3 Attach Bidet Seat

• Feed the water hose through the back of the toilet base and attach it to the underside of the bidet seat.

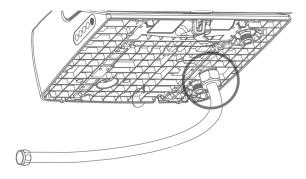


 Attach the bidet seat to the toilet base by lining up the mounting hooks and pressing down until you hear a "click".

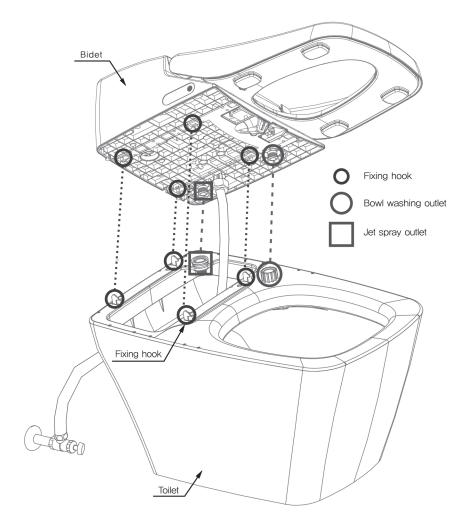


*Do not use excessive force when attaching the bidet seat to the toilet base.

REMOVING THE BIDET SEAT

The bidet seat can be removed by pulling the tabs beneath the unit forward and lifting up.

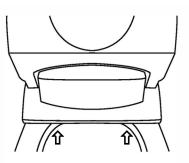


- Open the water shutoff valve.
 Plug in the power cord.

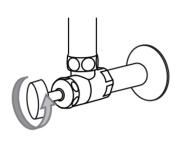



*The Prodigy must be plugged into a properly installed and grounded outlet.

 Insert the included batteries into the remote control and flush the toilet.

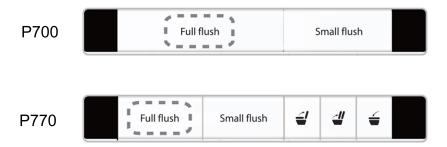

ENJOY YOUR NEW PRODIGY

Please contact Bio Bidet Support if you have any questions. Trained support agents are available Mon - Fri, 9:00 AM - 5:00 PM CST.

> Email: support@biobidet.com Phone: 847-458-2334 Chat: www.biobidet.com