


INSTRUCTION MANUAL

For video tuition please visit:

www.carrymaster.com.au

INDEX

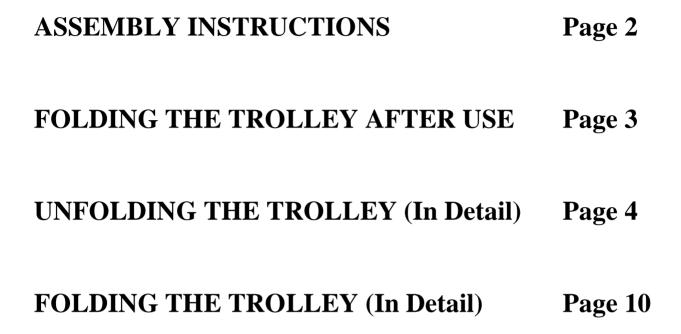

Carry Master Assembly Instructions

Enclosed Equipment

1. **Trolley Frame (x l)** 5. Bags (x4) 9. Tools (x 2)**Bag Holder** (x l) Handle bar (x l) 10. Wheels(x 2) 2. 6. 3. **Bolts** (x 5) 7. Washers (x 2) 4. Nuts (x 5) 8. **Carry Handle** (x l)

Minor Assembly Required

- 1. Place wheel on axle with cog (black) facing against trolley side.
- 2. Insert two (2) bolts and lock nut onto axle and tighten with supplied tools.
- 3. Repeat process with second rear wheel.
- 4. Pull tube lock pin upwards to release while pulling out top slide section (Handle section) until locking pin drops into the positioning hole (a click will be heard as lock pin goes into position).
- 5. Slide bag holder with lift up pin over curved arm to second hole ensuring pin is closest to the handle end of the trolley until it clicks into position in the lower hole.
- 6. Bolt the handle bar section onto the top section of frame using bolt and washers supplied with locknut then tighten the locknut.



To Fold Trolley After Use

- 1 Remove Bags from Trolley.
- 2 Slide Top Bag Holder upwards by Lifting Pin and sliding saddle with the pin upwards towards Handlebar.
- **3** Lift Middle Pin (on the tube lock mechanism) out of its lock position, and then push handle bar down until the tube lock clicks into position.
- 4 <u>**IMPORTANT</u> now fold rear pegs flush against the rear swing arm frame to avoid jamming.
- 5 Pull Locking Pin (Black Knob) and turn approximately one quarter turn to unlock, while holding the locking pin by one hand and the front handle with the other hand pull upwards on the pin so that the trolley sections close together.
- 6 Finally turn the locking pin knob until it clicks into the "Folded" lock position, this may require pressing the rear and front frames together.
- 7 Lift the folded trolley up and carry away for storage.



* Note pegs folded Flush against Frame at all times when folding and unfolding


UNFOLDING THE TROLLEY FOR USE

1 Lay Trolley on ground Ensure that the carrying "Pegs" are flush against the frame before proceeding to unfold.



2 With one hand on the main carry handle pull the locking pin out and disengage by slightly twisting pin



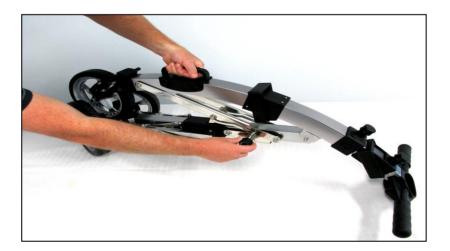

3 Then lift and pull trolley upwards



4 Continue upwards pull, until trolley unfolds



4A Note that if frame does not slide open easily you can use two hands to unfold the forward and rear sections of the frame (See Illustration below).



5 Stand the unfolded frame on its wheels, and then twist the side locking pin into the "lock" position You will feel the pin lock into position when twisted



THE NEXT STEP IS TO DRAW OUT THE HANDLE TO ITS FULLEST EXTENDED POSITION.




6 To Pull the Handle out - lift the lower tube lock out of its locking position


7 Then slide the handlebar upwards so that the frame section with the Handlebar telescopes out of the main section of frame far enough for the locking pin to automatically "drop" into the locking hole. A click will be heard when the handle bar has been extended to its fullest position.



8 Next lift the top pin (which is connected to the carry bag saddle) and slide the saddle downwards until it clicks into the locking position for the saddle.

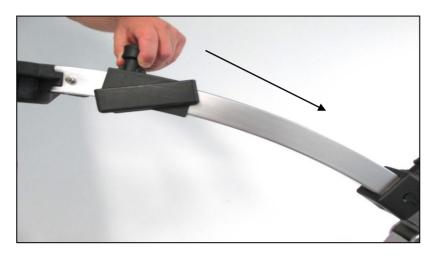


9 The Carry Bags can now be placed onto their saddle and the Carry-Master is ready for use.

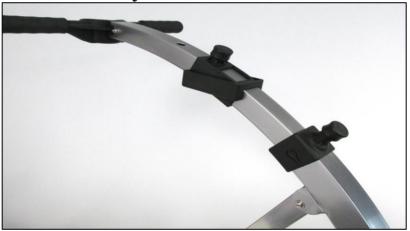



Handy Tip

When loading and unloading the trolley, it is advisable to engage the anti-topple lever on the front wheel, by gentle pushing down on the extended lug beside the wheel with your foot. You will hear the lug lock into position while pushing

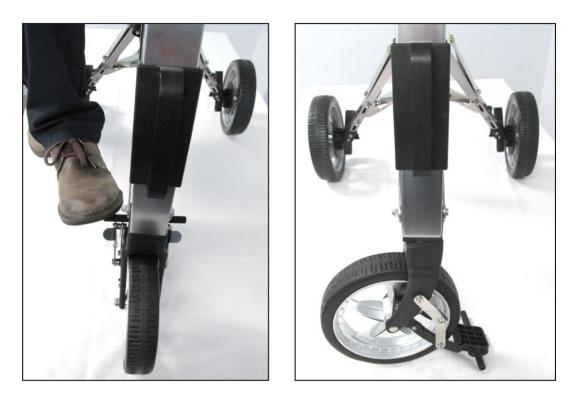


To disengage the Anti-Topple Lug, place foot under the lug and push the lug upwards- it will return to its normal position.

For further stable use, it is suggested that when loading the carry bags, place the rearmost bags on the trolley first. When unloading remove the front bags before the rear bags.

FOLDING THE TROLLEY

1 Ensure the Two Rear Carrier Pins are in an upright position and folded against the frame of the rear wheel carriers.

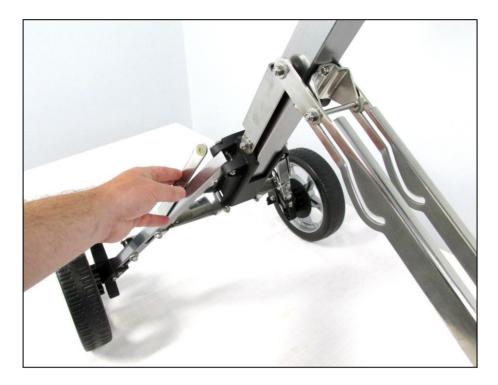

2 Pull out and slightly turn the locking pin which is located just above the rear wheel carriers. It is important to make sure that the locking pin is put into the "unlocked" position before the next step



3 With one hand firmly holding the carrier handle, and one hand on the locking pin, lift up the locking pin vertically while at the same time pushing the handle in. This movement will ensure that the rear wheels move towards the front wheel and "collapse" the frame- ready for storage. Important- ensure that the locking pin has "clicked" into the "frame locked position" by gently squeezing together the rear section and front section of the frame.



4 The Trolley is now ready for storage



