



# SLAY

True Wireless Earbuds



## USER MANUAL

### Introduction

Welcome to the Wings True Wireless Generation with the all new Wings Slay. We hope you are as excited as us to feel and flaunt your latest soundwear.


But before you dive right in, we strongly recommend going through this user manual thoroughly as it contains important technical information to ensure you have a seamless audio experience with us. Once you are done reading the manual, we are sure you will be all set to.

FEEL IT! FLAUNT IT!

②

### What's In The Box

- 2x Bluetooth Earphones
- 1x Portable Charging Case
- 4x Ear Cushions
- 1x User Manual
- 1x USB Charging Cable

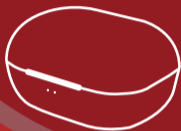

S



L



③

### How To Pair

- Step 1:** Take out both the earbuds from the charging case. They will automatically power on.
- Step 2:** Please wait for 3 seconds. The earbuds will automatically pair with each other. The earbuds will flash red and white to indicate it has entered pairing. You will hear a voice prompt "Pairing".
- Step 3:** Turn on the Bluetooth on your mobile and pair with device name "Wings Slay".
- Step 4:** Congratulations! You are now connected and can start playing media.

### Single Earbud Usage

- Step 1:** Take out any one earbud from the charging case. It will automatically power on.
- Step 2:** Please wait for 3 seconds. The earbud will flash red and white to indicate it has entered pairing mode.
- Step 3:** Turn on the Bluetooth on your mobile and pair with device name "Wings Slay".
- Step 4:** Congratulations! You are now connected and can start playing media.

**Note:** Any one earbud (left or right) can be used in mono mode.

**Note:** During mono mode usage, at any time, you can take out the other earbud also and it will autoconnect and move into dual mode.

④

### Touch Controls Usage

- Play/Pause:** Short press the multifunction button on any earbud to play or pause music.
- Changing Songs:** Double press the multifunction button on right earbud to go to next song. Double press the multifunction button on left earbud to go to previous song.
- Adjusting Volume:** Triple press the multifunction button on right earbud to increase volume. Triple press the multifunction button on left earbud to decrease volume.
- Siri/Google Assistant:** Long press the multifunction button on any earbud for 2 seconds to activate voice assistant.

**Note:** Changing song and adjust volume functions cannot be used in mono mode.

### Call Controls

- Answer Incoming Call:** Short press the multifunction button on any earbud to answer incoming call.
- Reject Incoming Call:** Short press the multifunction button on any earbud for 2 seconds to reject incoming call.
- Hang Up After Call:** Short press the multifunction button on any earbud for 2 seconds to end an active call.

⑤

**Put Active Call On Hold And Answer 2<sup>nd</sup> Call:** Double press the multifunction button on any earbud to switch calls.

### Charging Function

- Charging the Earbuds:** Place the earbuds back into the charging case. The LED light on both earbuds will get lit to indicate they are charging. Once fully charged, both the lights will go off.
- Low Battery Warning:** When the battery level on the earbuds is low, you will hear a voice prompt "BATTERY LOW". Please place the earbuds back into the charging case to charge them immediately.

### Case Charging Light Indicators:

- 0% - Both LED are off
- 20% - LED 1 flashes fast. LED 2 is off
- 40% - LED 1 flashes slowly. LED 2 is off
- 60% - LED 1 stays on. LED 2 flashes fast
- 80% - LED 1 stays on. LED 2 flashes slowly
- 100% - Both LED stay on

⑥

### Resetting The Device

Please follow the below steps in case the left and right earbuds do not autopair with each other (Lights of both start blinking white and green)

- Step 1:** Remove "Wings Slay" from the list of paired devices on your mobile and switch off your mobile Bluetooth.
- Step 2:** Take out both earbuds from the case and long press the multifunction button on both earbuds for 5 seconds to manually power them off.
- Step 3:** In the "Power Off" mode, long press the multifunction button on both earbuds for 10 seconds.
- Step 4:** LED will flash red and white twice quickly and go off. In the voice prompt you will hear 3 beeps sound.
- Step 5:** Put both the earbuds back in to the case.
- Step 6:** Take out both earbuds from the case. They will now autopair with each other.

Reset process is now complete and you can start the pairing process again.

⑦

### Technical Specifications

- Bluetooth Version: V5.0
- Profile Support: HSP, HFP, A2DP, AVRCP
- Stand-by Time: 120 hours
- Talk Time: 3 hours
- Music Play Time: 3-4 hours
- Charging Time: 1.5 hours
- Charging Voltage: DC 5V
- Frequency Range: 2.402G - 2.480G
- Ambient Temperature: -20°C / +60°C
- Transmission Distance: 10m
- Earbuds Battery Capacity: 40mAh / 3.7V
- Charging Case Battery Capacity: 500mAh / 3.7V
- Driver Unit: 6mm
- Sensitivity: 96dB +/- 3dB
- Impedance: 16Ω +/- 10%
- Frequency Response: 20Hz - 20000Hz

⑧

### Safety And Maintenance

Please read below suggestions in order to helping prolong the product lifespan and clearly understand the warranty clauses:

- Keep the product dry, do not put it in humid conditions to avoid short circuit.
- Do not expose it to the peak sun or high heat for extended period of time as this will short lifespan of electronic components, damage battery and deform some plastic parts.
- Do not put it in cold circumstance to avoid damage to PCB board.
- Do not attempt to dismantle the product, as it maybe unsafe especially for non-professionals.
- Do not use chemical products, detergent, oily liquids to clean the item.
- Do not scratch the surface with sharp items to avoid damaging the case and appearance.
- Do not charge the case for more than 5 hours to avoid loss in battery life.
- Avoid hearing music at maximum volume for long periods of time as this can affect your hearing and is not advisable.

**Note:** Any damage to the product that is not manufacturing defect will lead to warranty being rendered null and void. Therefore, please take utmost care of your product.

⑨